

ROBOTICS

Product specification

IRB 2400



Trace back information:
Workspace 24A version a14
Checked in 2024-03-07
Skribenta version 5.5.019

Product specification

IRB 2400/10

IRB 2400/16

OmniCore

Document ID: 3HAC087214-001

Revision: A

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2004-2024 ABB. All rights reserved.
Specifications subject to change without notice.

Table of contents

Overview of this product specification	7
1 Description	9
1.1 Structure	9
1.1.1 Introduction to structure	9
1.1.2 Different robot variants	11
1.2 Standards	13
1.2.1 Applicable standards	13
1.3 Installation	14
1.3.1 Introduction to installation	14
1.3.2 Operating requirements	15
1.3.3 Mounting the manipulator	16
1.4 Calibration and references	19
1.4.1 Calibration methods	19
1.4.2 Fine calibration	21
1.4.3 Absolute Accuracy calibration	22
1.5 Load diagrams	24
1.5.1 Introduction to load diagrams	24
1.5.2 Maximum load and moment of inertia for full and limited axis 5 movement	28
1.5.3 Wrist torque	29
1.6 Mounting equipment	30
1.6.1 Information about mounting equipment	30
1.7 Maintenance and troubleshooting	33
1.8 Robot motion	34
1.8.1 Robot stopping distances and times	37
2 Specification of variants and options	39
2.1 Introduction to variants and options	39
2.2 Manipulator	40
2.3 Floor cables	42
2.4 Application manipulator	43
2.5 Connector kits manipulator	44
2.5.1 Base - Connector kits	45
2.5.2 Axis 3 - Connector kits	46
2.6 Application floor cables	47
2.7 Warranty	48
3 Accessories	49
3.1 Introduction to accessories	49
Index	51

This page is intentionally left blank

Overview of this product specification

About this product specification

It describes the performance of the manipulator or a complete family of manipulators in terms of:

- The structure and dimensions prints
- The fulfillment of standards, safety and operating requirements
- The load diagrams, mounting or extra equipment, the motion and the robot reach
- The specification of variants and options available

Usage

Product specifications are used to find data and performance about the product, for example to decide which product to buy. How to handle the product is described in the product manual.

Users

It is intended for:

- Product managers and product personnel
- Sales and marketing personnel
- Order and customer service personnel

References

Reference	Document ID
<i>Product specification - OmniCore V line</i>	3HAC074671-001
<i>Product manual - IRB 2400</i>	3HAC022031-001
<i>Product manual - OmniCore V250XT Type B</i>	3HAC087112-001
<i>Product manual - OmniCore V400XT</i>	3HAC081697-001

Revisions

Revision	Description
A	First edition.

This page is intentionally left blank

1 Description

1.1 Structure

1.1.1 Introduction to structure

Robot family

The IRB 2400 is a 6-axis industrial robot, designed specifically for manufacturing industries that use flexible robot-based automation. The robot has an open structure that is specially adapted for flexible use, and can communicate extensively with external systems.

Operating system

The robot is equipped with the OmniCore controller and robot control software, RobotWare. RobotWare supports every aspect of the robot system, such as motion control, development and execution of application programs, communication etc. See *Product specification - OmniCore V line*.

Safety

Safety standards valid for complete robot, manipulator and controller.

Additional functionality

For additional functionality, the robot can be equipped with optional software for application support - for example gluing and welding, communication features - network communication - and advanced functions such as multitasking, sensor control etc. For a complete description on optional software, see *Product specification - OmniCore V line*.

Protection type Foundry Plus 2

Robots with the option Foundry Plus 2 are designed for harsh environments where the robot is exposed to sprays of coolants, lubricants and metal spits that are typical for die casting applications or other similar applications.

Typical applications are spraying insertion and part extraction of die-casting machines, handling in sand casting and gravity casting, etc. (Please refer to Foundry Prime robots for washing applications or other similar applications). Special care must be taken in regard to operational and maintenance requirements for applications in foundry as well as in other applications areas. Please contact ABB Robotics Sales organization if in doubt regarding specific application feasibility for the Foundry Plus 2 protected robot.

The robot is painted with two-component epoxy on top of a primer for corrosion protection. To further improve the corrosion protection additional rust preventive are applied to exposed and crucial areas, e.g. has the tool flange a special preventive coating. Although, continuous splashing of water or other similar rust formation fluids may cause rust attach on the robots unpainted areas, joints, or other unprotected surfaces. Under these circumstances it is recommended to add

Continues on next page

1 Description

1.1.1 Introduction to structure

Continued

rust inhibitor to the fluid or take other measures to prevent potential rust formation on the mentioned.

The entire robot is IP67 compliant according to IEC 60529 - from base to wrist, which means that the electrical compartments are sealed against water and solid contaminants. Among other things all sensitive parts are better protected than the standard offer.

Selected Foundry Plus 2 features:

- Improved sealing to prevent penetration into cavities to secure IP67
- Additional protection of cabling and electronics
- Special covers that protect cavities
- Well-proven connectors
- Nickel coated tool flange
- Rust preventives on screws, washers and unpainted/machined surfaces
- Extended service and maintenance program


The Foundry Plus 2 robot can be cleaned with appropriate washing equipment according to the robot product manual. Appropriate cleaning and maintenance is required to maintain the protection, for example can rust preventive be washed off with wrong cleaning method.

Available robot variants

The option Foundry Plus 2 might not be available for all robot variants.

See [Specification of variants and options on page 39](#) for robot versions and other options not selectable together with Foundry Plus 2.

Manipulator axes

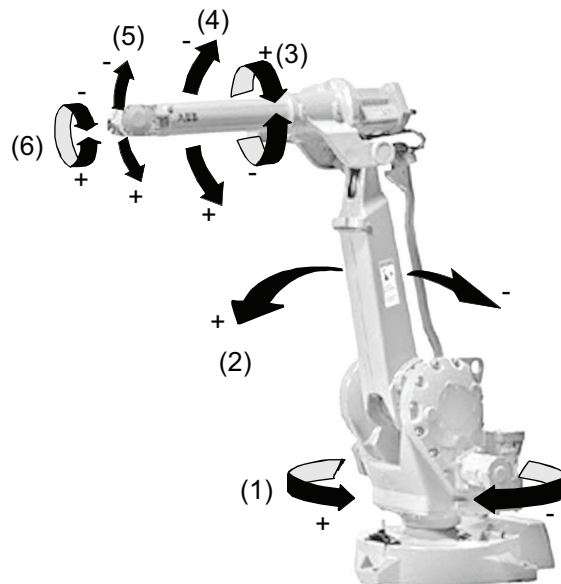

xx1100000569

1.1.2 Different robot variants

General

The IRB 2400 is available in two variants and they can be mounted inverted (no tilting allowed around X-axis or Y-axis).

Robot variant	Handling capacity (kg)	Reach (m)
IRB 2400/10	10	1.55
IRB 2400/16	16 (20 kg with some limitations, see Load diagrams on page 24)	1.55

Manipulator weight

Robot type	Weight
IRB 2400/10(/16)	380 kg


Other technical data

Data	Description	Note
Airborne noise level	The sound pressure level outside the working space	< 70 dB (A) Leq (acc. to Machinery directive 2006/42/EG)

Power consumption at max load

Type of movement	Power consumption (kW) (all variants)
ISO Cube Max. velocity	0.64

Robot in calibration position	All variants (kW)
Brakes engaged	0.18
Brakes disengaged	0.34

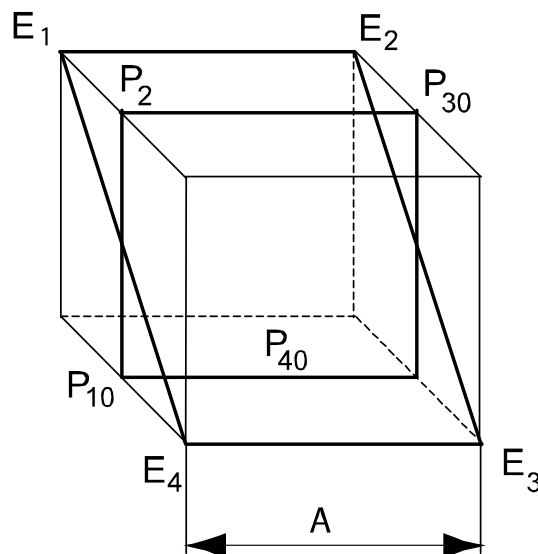

xx0900001012

Continues on next page

1 Description

1.1.2 Different robot variants


Continued

Pos	Description
A	630 mm

Power factor (cos φ)

The power factor is above 0.95 at a steady state power consumption higher than 2.0 kW, when the IRB 2400 is connected to the OmniCore V line.

Dimensions IRB 2400/10 and IRB 2400/16

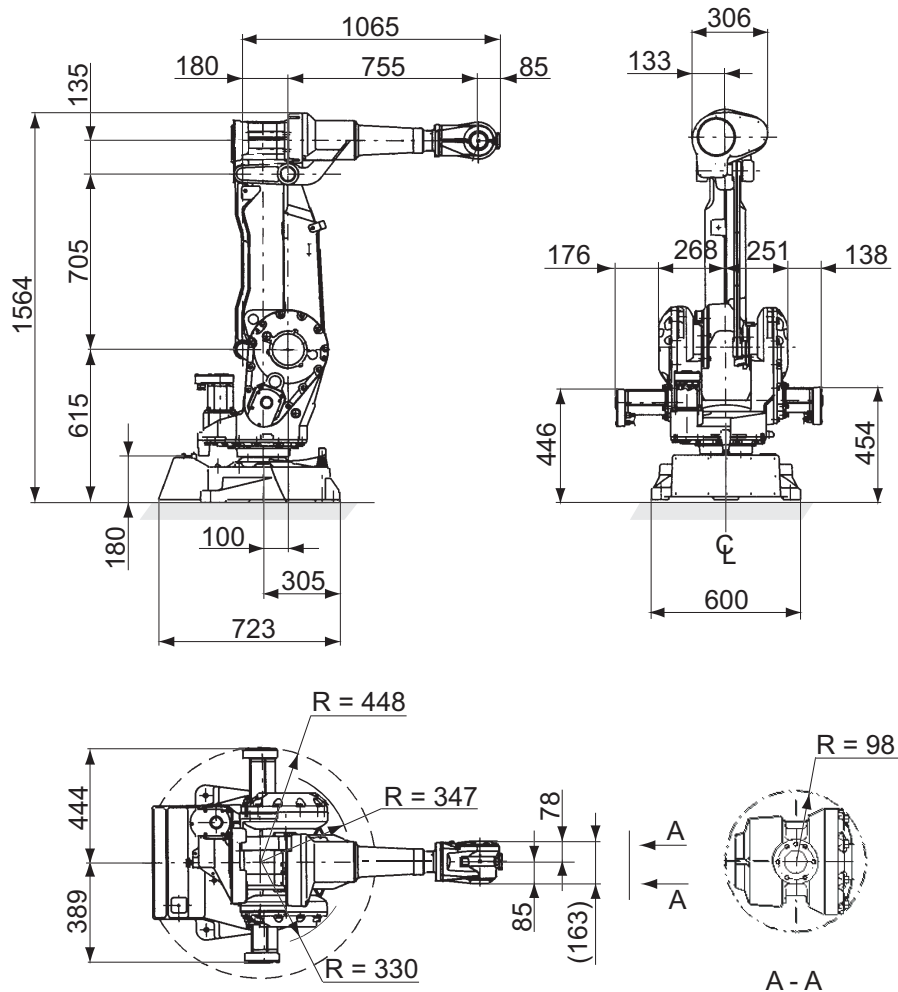

xx1100000546

Information for replacement of manipulator

The R1.MP and R1.CP/CS connectors on the manipulator on protection type *Standard* were changed in May 2018, from clamp locking connections to screw locking connections. So if a new manipulator will replace an older manipulator then new floor cables are needed (power cable and CP/CS, same as for protection type *Foundry Plus*).

More details are available in *Product manual - IRB 2400*.

1.2 Standards

1.2.1 Applicable standards

General

The product is compliant with ISO 10218-1:2011, *Robots for industrial environments - Safety requirements - Part 1 Robots*, and applicable parts in the normative references, as referred to from ISO 10218-1:2011. In case of deviation from ISO 10218-1:2011, these are listed in the declaration of incorporation. The declaration of incorporation is part of the delivery.

Robot standards

Standard	Description
ISO 9283	Manipulating industrial robots – Performance criteria and related test methods
ISO 9787	Robots and robotic devices – Coordinate systems and motion nomenclatures
ISO 9946	Manipulating industrial robots – Presentation of characteristics

Other standards used in design

Standard	Description
IEC 60204-1	Safety of machinery - Electrical equipment of machines - Part 1: General requirements, normative reference from ISO 10218-1
IEC 61000-6-2	Electromagnetic compatibility (EMC) – Part 6-2: Generic standards – Immunity standard for industrial environments
IEC 61000-6-4	Electromagnetic compatibility (EMC) – Part 6-4: Generic standards – Emission standard for industrial environments
ISO 13849-1:2006	Safety of machinery - Safety related parts of control systems - Part 1: General principles for design, normative reference from ISO 10218-1

Region specific standards and regulations

Standard	Description
ANSI/RIA R15.06	Safety requirements for industrial robots and robot systems
ANSI/UL 1740	Safety standard for robots and robotic equipment
CAN/CSA Z 434-03	Industrial robots and robot Systems - General safety requirements
EN ISO 10218-1	Robots and robotic devices — Safety requirements for industrial robots — Part 1: Robots

1 Description

1.3.1 Introduction to installation

1.3 Installation

1.3.1 Introduction to installation

General

The same version of the robot can either be mounted on the floor or inverted (no tilting allowed around X-axis or Y-axis). An end effector, max. weight 10 or 16 kg including payload, can be mounted on the robot's mounting flange (axis 6) depending on the robot version.

See [Load diagrams on page 24](#).

Extra loads

Other equipment can be mounted on the upper arm, max. weight 11 kg or 12 kg, and on the base, max. weight 35 kg. Holes for mounting extra equipment, see [Mounting equipment on page 30](#).

Working range limitations

The working range of axes 1-2 can be limited by mechanical stops and axis 3 by limit switches.

1.3.2 Operating requirements

Protection standards

Robot version	Protection Standard IEC60529
Standard manipulator	IP54
IRB 2400/10, /16 Foundry Plus	IP67, Steam washable

Explosive environments

The robot must not be located or operated in an explosive environment.

Ambient temperature

Description	Standard/Option	Temperature
Manipulator during operation	Standard	+ 5 °C ⁱ (41 °F) to + 45 °C (113 °F)
For the controller	Standard/Option	See <i>Product specification - Controller IRC5 with FlexPendant</i>
Complete robot during transportation and storage	Standard	- 25 °C (- 13 °F) to + 55 °C (131 °F)
For short periods (not exceeding 24 hours)	Standard	up to + 70 °C (158 °F)

ⁱ At low environmental temperature < 10° C is, as with any other machine, a warm-up phase is recommended to be run with the robot. Otherwise there is a risk that the robot stops or run with lower performance due to temperature dependent oil- and grease viscosity.

Relative humidity

Description	Relative humidity
Complete robot during operation, transportation and storage	Max. 95% at constant temperature

1 Description

1.3.3 Mounting the manipulator

1.3.3 Mounting the manipulator

Maximum load IRB 2400/10/16

Maximum load in relation to the base coordinate system


Floor Mounted

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	±2000 N	±2600 N
Force z	+4100 ±1400 N	+4100 ±1900 N
Torque xy	±3400 Nm	±4000 Nm
Torque z	±550 Nm	±900 Nm

Suspended

Force	Endurance load (in operation)	Max. load (emergency stop)
Force xy	±2000 N	±2600 N
Force z	-4100 ±1400 N	-4100 ±1900 N
Torque xy	±3400 Nm	±4000 Nm
Torque z	±550 Nm	±900 Nm

Continues on next page

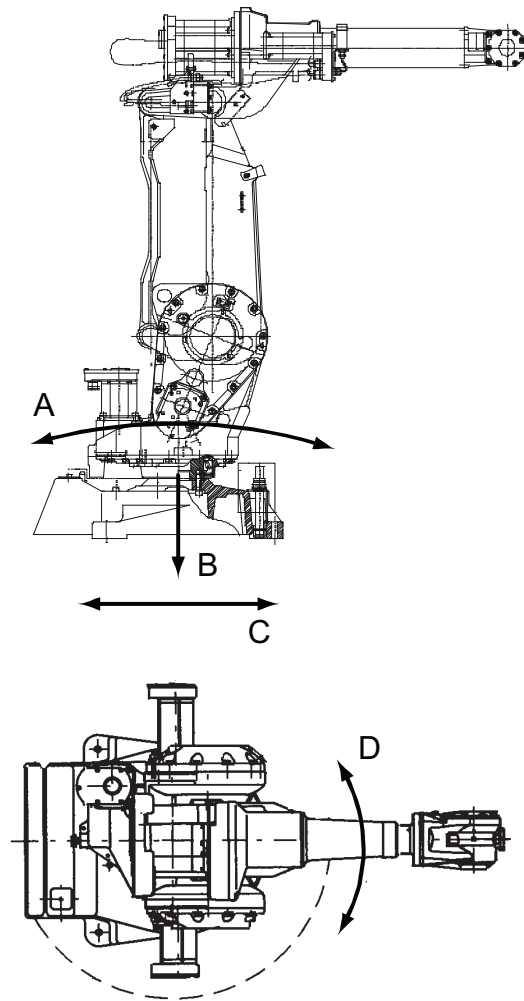

xx1100000547

A	Torque _{xy} (T_{xy})
B	Force _z (F_z)
C	Force _{xy} (F_{xy})
D	Torque _z (T_z)

Note regarding M_{xy} and F_{xy}

The bending torque (M_{xy}) can occur in any direction in the XY-plane of the base coordinate system. The same applies to the transverse force (F_{xy}).


Continues on next page

1 Description

1.3.3 Mounting the manipulator

Continued

Fastening holes robot base

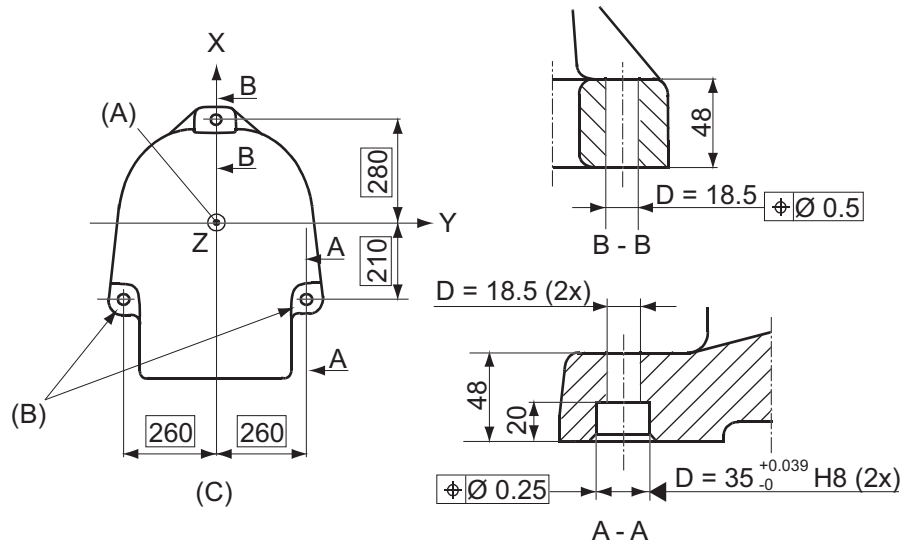

xx1400002065

1.4 Calibration and references

1.4.1 Calibration methods


Overview

This section specifies the different types of calibration and the calibration methods that are supplied by ABB.

The original calibration data delivered with the robot is generated when the robot is floor mounted. If the robot is not floor mounted, then the robot accuracy could be affected. The robot needs to be calibrated after it is mounted.

More information is available in the product manual.

Types of calibration

Type of calibration	Description	Calibration method
Standard calibration	The calibrated robot is positioned at calibration position. Standard calibration data is found on the SMB (serial measurement board) or EIB in the robot.	Calibration Pendulum Levelmeter calibration (alternative method)
Absolute accuracy calibration (optional)	Based on standard calibration, and besides positioning the robot at synchronization position, the Absolute accuracy calibration also compensates for: <ul style="list-style-type: none"> Mechanical tolerances in the robot structure Deflection due to load <p>Absolute accuracy calibration focuses on positioning accuracy in the Cartesian coordinate system for the robot.</p> <p>Absolute accuracy calibration data is found on the serial measurement board (SMB) or other robot memory.</p> <p>A robot calibrated with Absolute accuracy has the option information printed on its name plate (OmniCore).</p> <p>To regain 100% Absolute accuracy performance, the robot must be recalibrated for absolute accuracy after repair or maintenance that affects the mechanical structure.</p>	CalibWare
Optimization	Optimization of TCP reorientation performance. The purpose is to improve reorientation accuracy for continuous processes like welding and gluing. Wrist optimization will update standard calibration data for axes 4 and 5.  Note For advanced users, it is also possible to use the do the wrist optimization using the RAPID instruction <code>WristOpt</code> , see <i>Technical reference manual - RAPID Instructions, Functions and Data types</i> . This instruction is only available for OmniCore robots.	Wrist Optimization

Continues on next page

1 Description

1.4.1 Calibration methods

Continued

Brief description of calibration methods

Calibration Pendulum method

Calibration Pendulum is a standard calibration method for calibration of some ABB robots. On OmniCore, this calibration method is only used on IRB 1510, IRB 1520, IRB 2400, and IRB 4400.

Two different routines are available for the Calibration Pendulum method:

- Calibration Pendulum II
- Reference calibration

The calibration equipment for Calibration Pendulum is delivered as a complete toolkit, including the *Operating manual - Calibration Pendulum*, which describes the method and the different routines further.

Wrist Optimization method

Wrist Optimization is a method for improving reorientation accuracy for continuous processes like welding and gluing and is a complement to the standard calibration method.

The actual instructions of how to perform the wrist optimization procedure is given on the FlexPendant.

CalibWare - Absolute Accuracy calibration

The CalibWare tool guides through the calibration process and calculates new compensation parameters. This is further detailed in the *Application manual - CalibWare Field*.


If a service operation is done to a robot with the option Absolute Accuracy, a new absolute accuracy calibration is required in order to establish full performance. For most cases after replacements that do not include taking apart the robot structure, standard calibration is sufficient.

The Absolute Accuracy option varies according to the robot mounting position. This is printed on the robot name plate for each robot. The robot must be in the correct mounting position when it is recalibrated for absolute accuracy.

1.4.2 Fine calibration

General

Fine calibration is made using the Calibration Pendulum, see *Operating manual - Calibration Pendulum*.

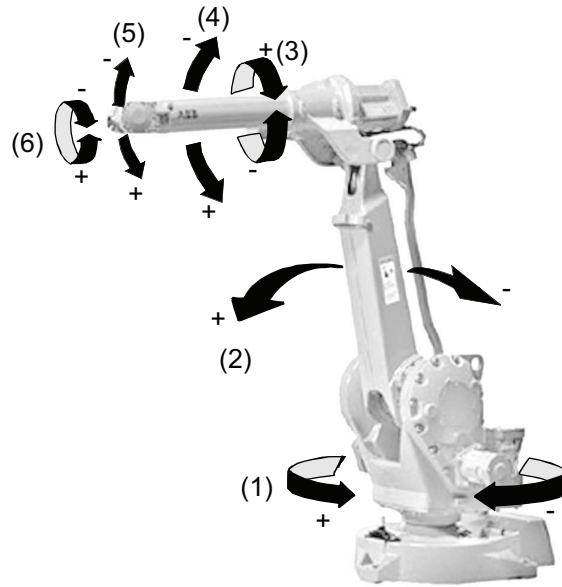

xx110000569

Pos	Description	Pos	Description
1	Axis 1	2	Axis 2
3	Axis 3	4	Axis 4
5	Axis 5	6	Axis 6

Calibration

Calibration	Position
Calibration of all axes	All axes are in zero position
Calibration of axis 1 and 2	Axis 1 and 2 in zero position
	Axis 3 to 6 in any position
Calibration of axis 1	Axis 1 in zero position
	Axis 2 to 6 in any position

1 Description

1.4.3 Absolute Accuracy calibration

1.4.3 Absolute Accuracy calibration

Purpose

Absolute Accuracy is a calibration concept that improves TCP accuracy. The difference between an ideal robot and a real robot can be several millimeters, resulting from mechanical tolerances and deflection in the robot structure. *Absolute Accuracy* compensates for these differences.

Here are some examples of when this accuracy is important:

- Exchangeability of robots
- Offline programming with no or minimum touch-up
- Online programming with accurate movement and reorientation of tool
- Programming with accurate offset movement in relation to eg. vision system or offset programming
- Re-use of programs between applications

The option *Absolute Accuracy* is integrated in the controller algorithms and does not need external equipment or calculation.



Note

The performance data is applicable to the corresponding RobotWare version of the individual robot.

What is included

Every *Absolute Accuracy* robot is delivered with:

- compensation parameters saved in the robot memory
- a birth certificate representing the *Absolute Accuracy* measurement protocol for the calibration and verification sequence.

A robot with *Absolute Accuracy* calibration has a label with this information on the manipulator.

Absolute Accuracy supports floor mounted, wall mounted, and ceiling mounted installations. The compensation parameters that are saved in the robot memory differ depending on which *Absolute Accuracy* option is selected.

When is *Absolute Accuracy* being used

Absolute Accuracy works on a robot target in Cartesian coordinates, not on the individual joints. Therefore, joint based movements (e.g. `MoveAbsJ`) will not be affected.

If the robot is inverted, the *Absolute Accuracy* calibration must be performed when the robot is inverted.

Absolute Accuracy active

Absolute Accuracy will be active in the following cases:

- Any motion function based on robtargets (e.g. `MoveL`) and ModPos on robtargets
- Reorientation jogging

Continues on next page

- Linear jogging
- Tool definition (4, 5, 6 point tool definition, room fixed TCP, stationary tool)
- Work object definition

Absolute Accuracy not active

The following are examples of when Absolute Accuracy is not active:

- Any motion function based on a jointtarget (`MoveAbsJ`)
- Independent joint
- Joint based jogging
- Additional axes
- Track motion



Note

In a robot system with, for example, an additional axis or track motion, the Absolute Accuracy is active for the manipulator but not for the additional axis or track motion.

RAPID instructions

There are no RAPID instructions included in this option.

Production data

Typical production data regarding calibration are:

Robot	Positioning accuracy (mm)		
	Average	Max	% Within 1 mm
IRB 2400/10	0.30	0.70	100
IRB 2400/16			

1 Description

1.5.1 Introduction to load diagrams

1.5 Load diagrams

1.5.1 Introduction to load diagrams

Information



WARNING

It is very important to always define correct actual load data and correct payload of the robot. Incorrect definitions of load data can result in overloading of the robot.

If incorrect load data is used, and/or if loads outside the load diagram are used, the following parts can be damaged due to overload:

- motors
- gearboxes
- mechanical structure



WARNING

In RobotWare, the service routine LoadIdentify can be used to determine correct load parameters. The routine automatically defines the tool and the load.

See *Operating manual - OmniCore*, for detailed information.



WARNING

Robots running with incorrect load data and/or with loads outside the load diagram, will not be covered by robot warranty.

General

The load diagrams include a nominal payload inertia, J_0 of 0.040 kgm^2 for IRB 2400/10 and 0.060 kgm^2 for IRB 2400/16 (also with extended load diagram). At different moment of inertia the load diagram will be changed. For robots that are allowed tilted, wall or inverted mounted, the load diagrams as given are valid and thus it is also possible to use RobotLoad within those tilt and axis limits.

Control of load case with RobotLoad


To verify a specific load case, use the RobotStudio add-in RobotLoad.

The result from RobotLoad is only valid within the maximum loads and tilt angles. There is no warning if the maximum permitted arm load is exceeded. For over-load cases and special applications, contact ABB for further analysis.

Continues on next page

Load diagrams

IRB 2400/10

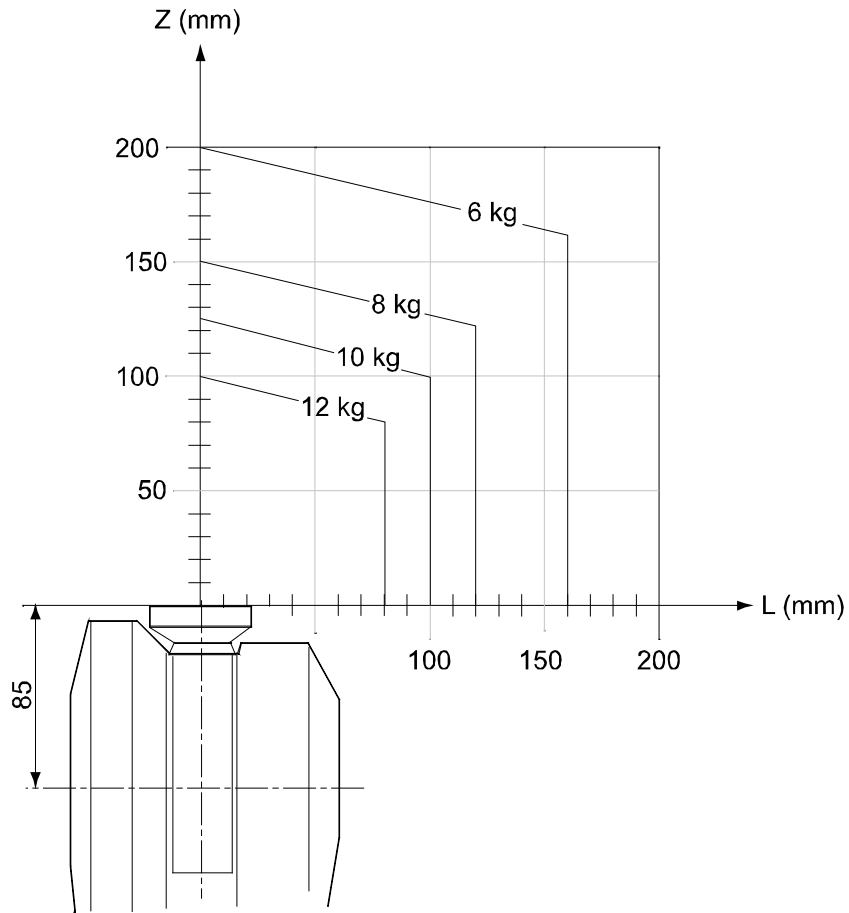


Continues on next page

1 Description

1.5.1 Introduction to load diagrams

Continued

IRB 2400/16

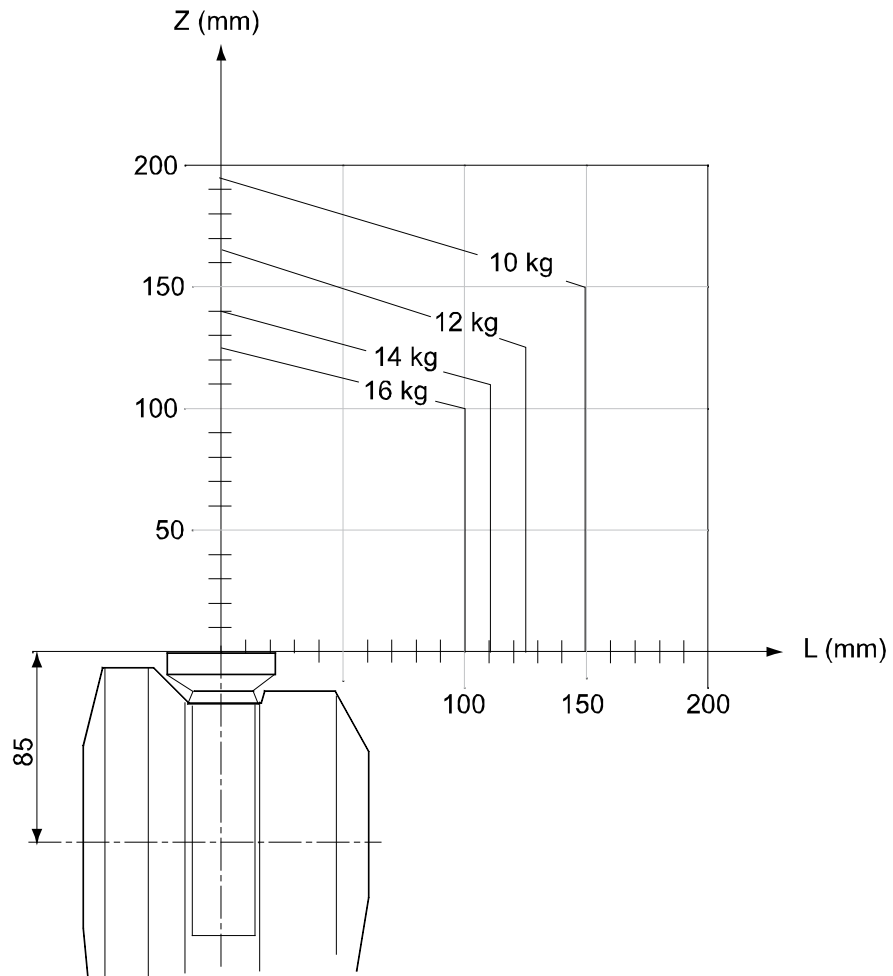


Continues on next page

IRB 2400/16 Extended load diagram

Below is a extended load diagram for IRB 2400/16, payload 20 kg.

No extra load on wrist.

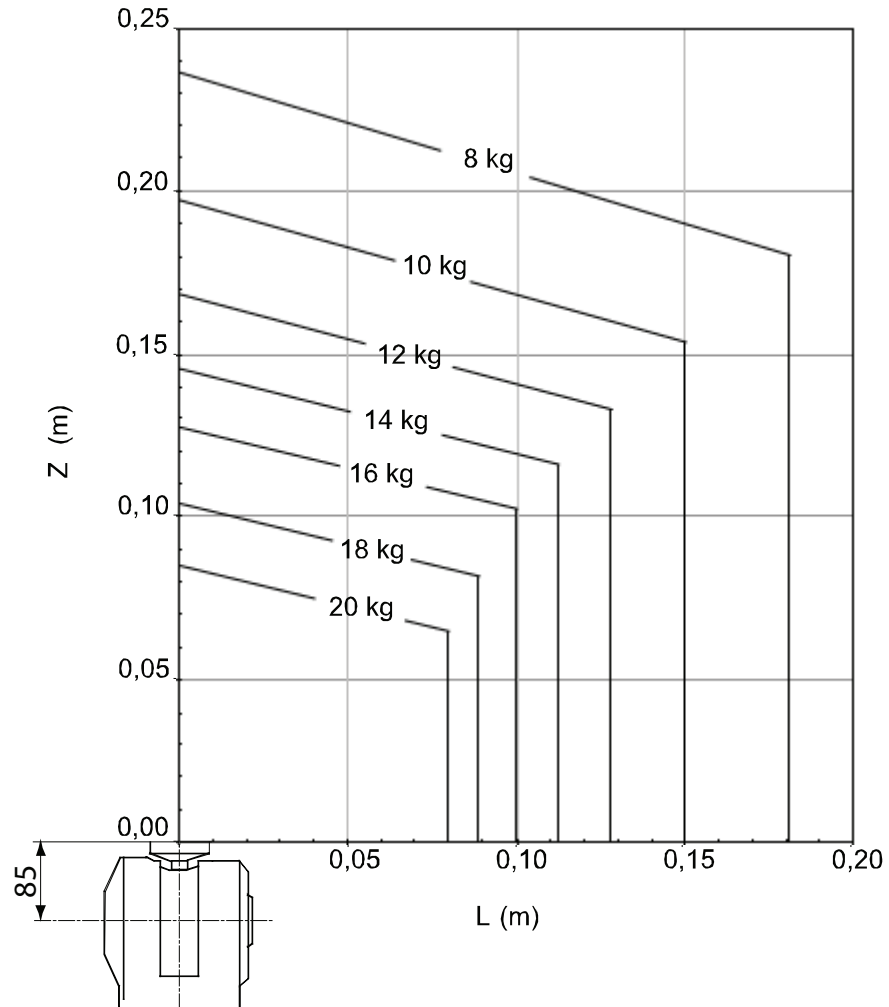

1 Description

1.5.2 Maximum load and moment of inertia for full and limited axis 5 movement

1.5.2 Maximum load and moment of inertia for full and limited axis 5 movement



Note

Total load given as: Mass in kg, center of gravity (Z and L) in meter and moment of inertia (J_{0x} J_{0y} J_{0z}) in kgm^2 . $L = \sqrt{x^2 + y^2}$.

Full movement of axis 5 ($\pm 115^\circ$)

Axis	Robot type	Maximum moment of inertia
5	IRB 2400/10	$\text{Ja5} = \text{Load} \times ((Z + 0,085^2 + L^2) + \max(J_{0x}, J_{0y})) \leq 1.15 \text{ kgm}^2$
6	IRB 2400/10	$\text{Ja6} = \text{Load} \times L^2 + J_{0z} \leq 0.70 \text{ kgm}^2$

Axis	Robot type	Maximum moment of inertia
5	IRB 2400/16	$\text{Ja5} = \text{Load} \times ((Z + 0,085^2 + L^2) + \max(J_{0x}, J_{0y})) \leq 1.85 \text{ kgm}^2$
6	IRB 2400/16	$\text{Ja6} = \text{Load} \times L^2 + J_{0z} \leq 1.05 \text{ kgm}^2$

1.5.3 Wrist torque

Maximum torque due to payload

The table below shows the maximum permissible torque due to payload:



Note

The wrist torque values are for reference only, and should not be used for calculating permitted load offset (position of center of gravity) within the load diagram, since those also are limited by main axes torques as well as dynamic loads. Furthermore, arm loads will influence the permitted load diagram. To find the absolute limits of the load diagram, use the RobotStudio add-in RobotLoad.

Robot type	Max wrist torque axis 4 and 5	Max wrist torque axis 6	Max torque valid at load
IRB 2400/10	20.6 Nm	9.81 Nm	10 kg
IRB 2400/16	33.0 Nm	15.7 Nm	16 kg

1 Description

1.6.1 Information about mounting equipment


1.6 Mounting equipment

1.6.1 Information about mounting equipment

Mounting equipment

The robot is supplied with tapped holes on the upper arm and on the base for mounting extra equipment.

IRB 2400/10 and IRB 2400/16

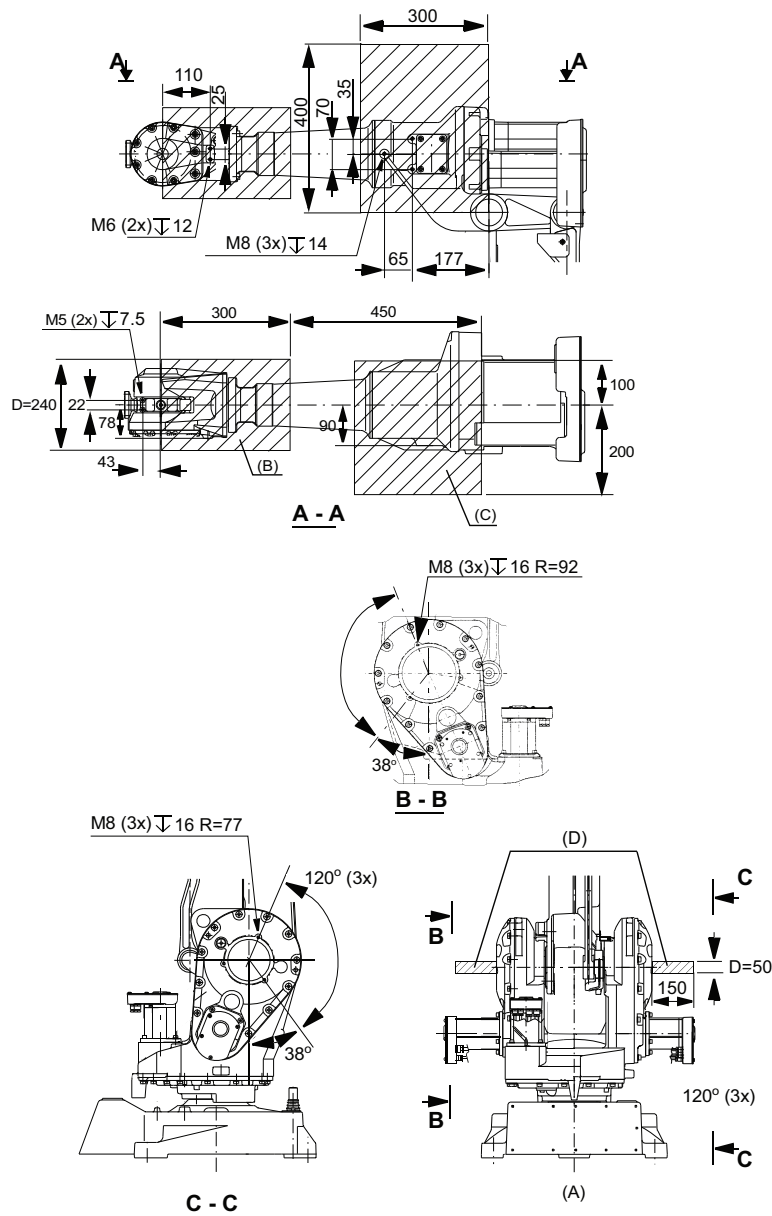

xx1100000577

Pos	Max load
A	The rear side of the manipulator

Continues on next page


1 Description

1.6.1 Information about mounting equipment

Continued

Pos	Max load
B	Max. 2 kg
C	Max. 10 kg
D	Max. 35 kg total

IRB 2400/16 with payload 20 kg

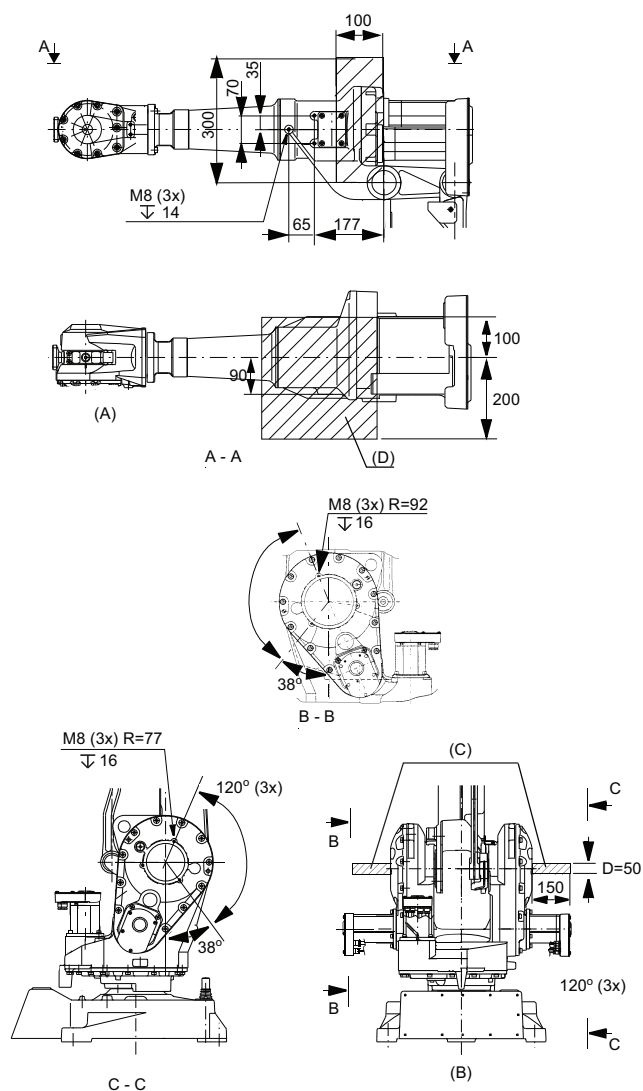

Pos	Description
A	No extra load on wrist
B	The rear side of the manipulator
C	Max. 35 kg total
D	Max. 10 kg

Continues on next page

1 Description

1.6.1 Information about mounting equipment

Continued




Note

Maximum loads must never be exceeded!

Fastener quality

When fitting tools on the tool flange, only use screws with quality 12.9. For other equipment use suitable screws and tightening torque for your application.

IRB 2400/10 and IRB 2400/16

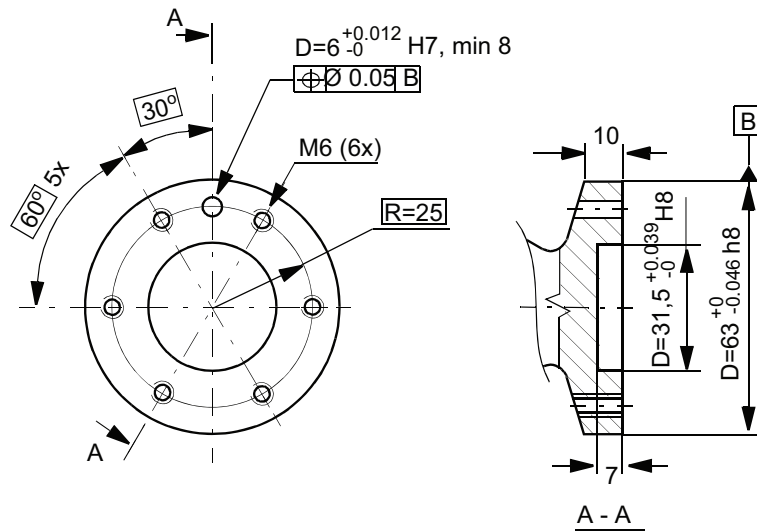

xx110000580

1.7 Maintenance and troubleshooting

General

The robot requires only minimum maintenance during operation. It has been designed to make it as easy to service as possible:

- Maintenance-free AC motors are used.
- Oil is used for the gear boxes.
- The cabling is routed for longevity, and in the unlikely event of a failure, its modular design makes it easy to change.

Maintenance

The maintenance intervals depend on the use of the robot, the required maintenance activities also depends on selected options. For detailed information on maintenance procedures, see Maintenance section in the Product Manual.

1 Description

1.8 Robot motion

1.8 Robot motion

Introduction to robot motion

IRB 2400/10 and IRB 2400/16


The working area is the same for both floor and inverted mounting.

For wall mounted 10 kg version axis 1 is limited to $\pm 30^\circ$.

Axis	Type of motion	Range of movement
1	Rotation Motion	+ 180° to - 180°
2	Arm motion	+ 110° to - 100°
3	Arm motion	+ 65° to - 60°
4	Rotation Motion	+ 200° to - 200° (Unlimited as optional)
5	Bend motion	+ 120° to - 120°
6	Turn motion	+ 400° to - 400° + 250 rev. ⁱ to - 250 rev. Max. ⁱⁱ

ⁱ rev. = Revolutions

ⁱⁱ The default working range for axis 6 can be extended by changing parameter values in the software. Option 610-1 "Independent axis" can be used for resetting the revolution counter after the axis has been rotated (no need for "rewinding" the axis).

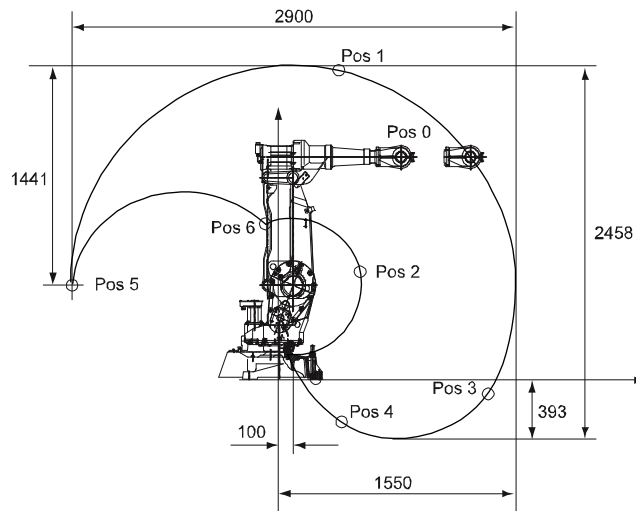

xx0200000160

Positions at wrist center (mm) and angle (degrees) for IRB 2400/10 and IRB 2400/16:


Position no (see figure above)	Position (mm) X	Position (mm) Z	Angle (degrees) Axis 2	Angle (degrees) Axis 3
0	855	1455	0	0
1	360	2041	0	-60
2	541	693	0	65
3	1351	-118	110	-60
4	400	-302	110	18.3
5	-1350	624	-100	-60
6	-53	1036	-100	65

Continues on next page

Performance according to ISO 9283

At rated maximum load, maximum offset and 1.6 m/s velocity on the inclined ISO test plane, with all six axes in motion. Values in the table below are the average result of measurements on a small number of robots. The result may differ depending on where in the working range the robot is positioning, velocity, arm configuration, from which direction the position is approached, the load direction of the arm system. Backlashes in gearboxes also affect the result.

The figures for AP, RP, AT and RT are measured according to figure below.

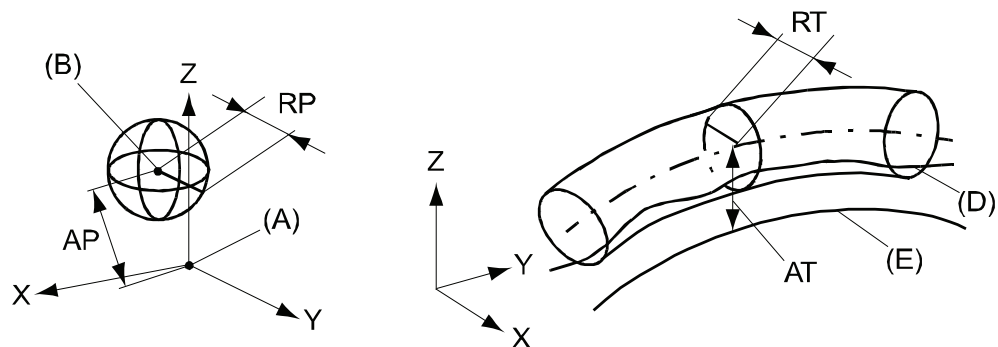

xx080000424

Pos	Description	Pos	Description
A	Programmed position	E	Programmed path
B	Mean position at program execution	D	Actual path at program execution
AP	Mean distance from programmed position	AT	Max deviation from E to average path
RP	Tolerance of position B at repeated positioning	RT	Tolerance of the path at repeated program execution

Description	IRB 2400/10	IRB 2400/16
Pose repeatability, RP (mm)	0.03	0.03
Pose accuracy, AP ⁱ (mm)	0.03	0.03
Linear path repeatability, RT (mm)	0.11	0.15
Linear path accuracy, AT (mm)	0.33	0.41
Pose stabilization time, (PSt) to within 0.4 mm of the position (s)	0.15	0.22

ⁱ AP according to the ISO test above, is the difference between the reached position (position manually modified in the cell) and the average position obtained during program execution

The above values are the range of average test results from a number of robots.

Velocity

Maximum axis speed

Robot type	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6
IRB 2400/10	150 °/s 90 °/s ⁱ	150 °/s 90 °/s ⁱⁱ	150 °/s 90 °/s ⁱⁱⁱ	360 °/s	360 °/s	450 °/s

Continues on next page

1 Description

1.8 Robot motion

Continued

Robot type	Axis 1	Axis 2	Axis 3	Axis 4	Axis 5	Axis 6
IRB 2400/16	150 °/s	150 °/s	150 °/s	360 °/s	360 °/s	450 °/s

i For wall mounted 10 kg version.

ii For wall mounted 10 kg version.

iii For wall mounted 10 kg version.

There is a supervision function to prevent overheating in applications with intensive and frequent movements.

Continues on next page

1.8.1 Robot stopping distances and times

Introduction

The stopping distances and times for category 0 and category 1 stops, as required by EN ISO 10218-1 Annex B, are listed in *Product specification - Robot stopping distances according to ISO 10218-1 (3HAC048645-001)*.

This page is intentionally left blank

2 Specification of variants and options

2.1 Introduction to variants and options

General

The different variants and options for the IRB 2400 are described in the following sections. The same option numbers are used here as in the specification form.

The variants and options related to the robot controller are described in the product specification for the controller.

2 Specification of variants and options

2.2 Manipulator

2.2 Manipulator

Manipulator variant

Option	IRB Type	Handling capacity (kg) / Reach (m)
3300-109	IRB 2400/10	10/1.55
3300-110	IRB 2400/16	16/1.55

Manipulator color

Option	Description	Note
209-1	ABB Orange standard	RAL7032
209-2	ABB White standard	RAL 9003
209-196	ABB grey standard	NCS 4001-R59B
209-202	ABB Graphite White standard	RAL7035 Standard color
209-	The robot is painted with the chosen RAL-color.	

Manipulator protection

Option	Description
3350-540	Base 54, IP54
3352-10	Foundry Plus2 67, IP67

Requirements

The option *Foundry Plus2 67* [3352-10] requires option *Upper arm cover* [3316-1].



Note

It is strongly recommended, if Foundry Plus robots in another color than ABB orange is required, that only colors in a yellow nuance are selected, if not the robot can look discolored after a while in the foundry environment. The protection is still preserved in any color.

Mounting position


Option	Description
3317-1	Inverted

Limited working range

Option	Description
3323-4	Axis 1 work range lim.

Continues on next page

The manipulator can be equipped with adjustable mechanical stops. This is to mechanically limit the working range on axis 1. The mechanical stops are delivered alongside the robot (not installed).

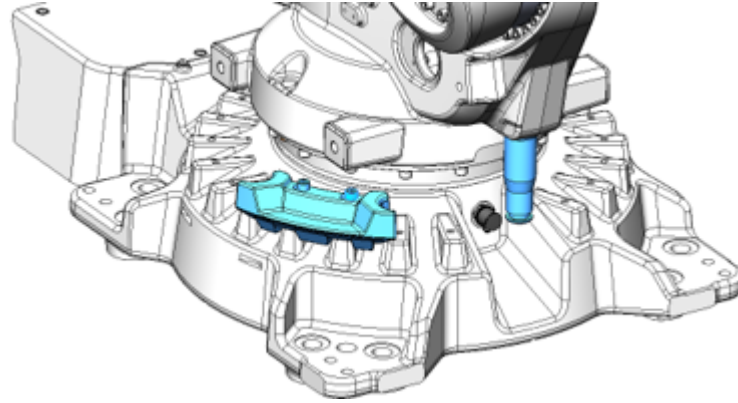


xx2100002595

Working range limit-Axis 2

To increase the safety of the robot, the working range of axis 2 can be restricted.

Option	Description
3338-1	Axis 2-work range lim. Stop lugs for restricting the working area. The figure below illustrates the mounting positions of the stops.

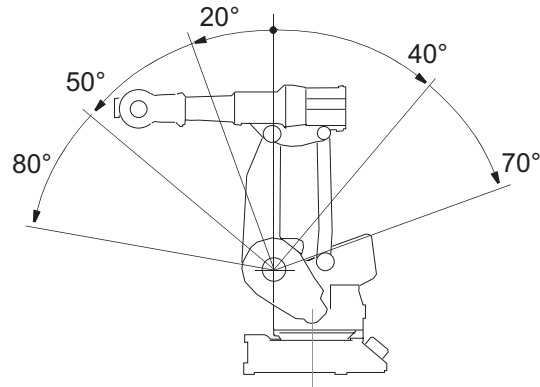

xx110000586

2 Specification of variants and options

2.3 Floor cables

2.3 Floor cables

Manipulator cable length

Option	Lengths
3200-2	7 m
3200-3	15 m
3200-4	22 m
3200-5	30 m

2.4 Application manipulator

DressPack base-axis 3

Option	Description	Additional information
3325-11	MH Parallel	
3325-13	MH EtherNet	Includes parallel signals. Supports ProfiNet, EtherNetIP
3325-14	MH CC-Link	Includes parallel signals

2 Specification of variants and options

2.5 Connector kits manipulator

2.5 Connector kits manipulator

General

Below is an example of how a connector kit and its parts can look like.



xx130000223

Continues on next page

2.5.1 Base - Connector kits

Available options

Option	Name	DressPack options		
		3325-11/12/13	3325-51/-52/-3	3325-61/-62/-63
3330-2	CP/CS, Proc 1 base	X	X	



Note

Servo power connection kits are not available.

Option CP/CS, Proc 1 on base - 3330-2

R1. CP/CS and Proc 1 on base

This option offers a kit with connectors. This must be assembled by the customer.

The kit contains:

- 1 Hose fittings (swivel nut adapter, (1/2", M22x1.5 Brass, 24 degree seal))
- Connector with:

1 pcs Hood Foundry (Harting)	HAN EMC / M 40
1 pcs Hinged frame (Harting)	Shell size 16
2 pcs Multicontact, female (Harting)	Type HD (25 pin)
1 pcs Multicontact, female (Harting)	Type DD (12 pin)
1 pcs Multicontact, female (Harting)	Type EE (8 pin)
10 pcs Female crimp contacts	For 1.5 mm ²
10 pcs Female crimp contacts	For 0.5 mm ²
10 pcs Female crimp contacts	For 1.0 mm ²
10 pcs Female crimp contacts	For 2.5 mm ²
12 pcs Female crimp contacts	For 0.14 - 0.37 mm ²
45 sockets	For 0.2 - 0.56 mm ²
Assembly Accessories to complete connector	
Assembly instruction	

2 Specification of variants and options

2.5.2 Axis 3 - Connector kits

2.5.2 Axis 3 - Connector kits

Available options

		DressPack options	Description
Option	Name	3325-11/12/13	
3333-2	CP/CS bus, Proc 1 axis 3	X	UTOW

Option CP/CS/CBus, Proc 1 axis 3 - 3333-2

CP/CS/CBus, Proc 1 axis 3 on tool side for option 3326-11/12/13 and 3326-31/32/33.

This kit offers a kit with connectors to be mounted at toolside of axis 3.

This must be assembled by the customer.

The kit contains:

- 1 Hose fitting (Parker Push lock (1/2", M22x1.5 Brass, 24 degree seal))
- Connector with:

CP/CS	
1 pcs UTOW Pin connector 26p, bayonet	UTOW61626PH, Shell size 16
26 pcs Pin	RM18W3K, 0.5-0.82 mm ²
CBUS	
1 pcs UTOW Pin connector 10p, bayonet	UTOW61210PH, Shell size 12
10 pcs Pin	RM18W3K, 0.5-0.82 mm ²
Ethernet	
1 pcs Pin connector M12	Harting 21 03 881 1405
4 pcs Pin	Harting 09670005576, 0.13-0.33 mm ²

2.6 Application floor cables

Parallel cable - Length

Option	Description	Note
3201-2	7 m	
3201-3	15 m	
3201-5	30 m	

CC-Link cable - Length

Option	Description	Note
3205-2	7 m	Includes Parallel cable
3205-3	15 m	Includes Parallel cable
3205-5	30 m	Includes Parallel cable

2 Specification of variants and options

2.7 Warranty

2.7 Warranty


Warranty

For the selected period of time, ABB will provide spare parts and labor to repair or replace the non-conforming portion of the equipment without additional charges. During that period, it is required to have a yearly *Preventative Maintenance* according to ABB manuals to be performed by ABB. If due to customer restrains no data can be analyzed with ABB Connected Services for robots with OmniCore controllers, and ABB has to travel to site, travel expenses are not covered. The *Extended Warranty* period always starts on the day of warranty expiration. Warranty Conditions apply as defined in the *Terms & Conditions*.



Note

This description above is not applicable for option *Stock warranty* [438-8]

Option	Type	Description
438-1	Standard warranty	Standard warranty is 12 months from <i>Customer Delivery Date</i> or latest 18 months after <i>Factory Shipment Date</i> , whichever occurs first. Warranty terms and conditions apply.
438-2	Standard warranty + 12 months	Standard warranty extended with 12 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-4	Standard warranty + 18 months	Standard warranty extended with 18 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-5	Standard warranty + 24 months	Standard warranty extended with 24 months from end date of the standard warranty. Warranty terms and conditions apply. Contact Customer Service in case of other requirements.
438-6	Standard warranty + 6 months	Standard warranty extended with 6 months from end date of the standard warranty. Warranty terms and conditions apply.
438-7	Standard warranty + 30 months	Standard warranty extended with 30 months from end date of the standard warranty. Warranty terms and conditions apply.
438-8	Stock warranty	Maximum 6 months postponed start of standard warranty, starting from factory shipment date. Note that no claims will be accepted for warranties that occurred before the end of stock warranty. Standard warranty commences automatically after 6 months from <i>Factory Shipment Date</i> or from activation date of standard warranty in WebConfig.  Note Special conditions are applicable, see <i>Robotics Warranty Directives</i> .

3 Accessories

3.1 Introduction to accessories

General

There is a range of tools and equipment available, especially designed for the manipulator.

Basic software and software options for robot and PC

For more information, see *Product specification - OmniCore V line* .

Robot peripherals

- Track Motion
- Motor Units
- Positioners

This page is intentionally left blank

Index

A

Absolute Accuracy, 22
Absolute Accuracy, calibration, 20
accessories, 49

C

calibration
 Absolute Accuracy type, 19
 standard type, 19
calibration, Absolute Accuracy, 20
Calibration Pendulum, 21
CalibWare, 19
category 0 stop, 37
category 1 stop, 37
compensation parameters, 22

F

fine calibration, 21

O

options, 39

P

product standards, 13

S

safety standards, 13
standards, 13
 ANSI, 13
 CAN, 13
standard warranty, 48
stock warranty, 48
stopping distances, 37
stopping times, 37

V

variants, 39

W

warranty, 48



ABB AB

Robotics & Discrete Automation

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

ABB AS

Robotics & Discrete Automation

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

ABB Inc.

Robotics & Discrete Automation

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics