

ROBOTICS

Application manual

Scalable I/O



Trace back information:
Workspace 24D version a27
Checked in 2025-01-17
Skribenta version 5.6.018

Application manual

Scalable I/O

RobotWare 7.17

Document ID: 3HAC070208-001

Revision: M

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2019-2024 ABB. All rights reserved.
Specifications subject to change without notice.

Table of contents

Overview of this manual	7
Network security	10
1 Introduction	11
2 Hardware overview	13
2.1 General system information	13
2.2 Base devices	18
2.2.1 Digital base device, DSQC1030	18
2.2.2 Safety digital base device, DSQC1042	24
2.3 Add-on devices	30
2.3.1 Digital add-on device, DSQC1031	30
2.3.2 Analog add-on device, DSQC1032	33
2.3.3 Relay add-on device, DSQC1033	36
3 Hardware installation	39
3.1 General installation information	39
3.2 Installing digital base devices	41
3.3 Installing safety digital base devices	45
3.4 Installing add-on devices	48
3.5 Coil neutralization	53
4 Software commissioning	55
4.1 Information about ABB Scalable I/O devices	55
4.2 Connecting the EtherNet/IP network	57
4.3 Configuring Scalable I/O devices using I/O Engineering	58
4.3.1 Offline configuration	58
4.3.2 Online configuration	74
4.4 Configuring Scalable I/O devices using the FlexPendant	83
4.5 Configuring safety digital base devices	86
4.6 Firmware upgrade	92
5 Reference material	95
5.1 Analog input point object	95
Index	97

This page is intentionally left blank

Overview of this manual

About this manual

This manual describes the scalable I/O devices and contains instructions for the configuration.



Note

It is the responsibility of the integrator to provide safety and user guides for the robot system.

Usage

This manual should be used during installation and configuration of the scalable I/O devices.



Note

Before any work on or with the robot is performed, the safety information in the product manual for the controller and manipulator must be read.

Who should read this manual?

This manual is intended for

- Personnel responsible for installations and configurations of industrial network hardware/software
- Personnel responsible for I/O system configuration
- System integrators

Prerequisites

The reader should have the required knowledge of

- Mechanical installation work
- Electrical installation work
- System parameters and how to configure them
- RobotStudio

References

Document references

Reference	Document ID
<i>Operating manual - RobotStudio</i>	3HAC032104-001
<i>Operating manual - OmniCore</i>	3HAC065036-001
<i>Operating manual - Integrator's guide OmniCore</i>	3HAC065037-001
<i>Product manual - OmniCore C30</i>	3HAC060860-001
<i>Product manual - OmniCore C90XT</i>	3HAC073706-001
<i>Product manual - OmniCore V250XT Type B</i>	3HAC087112-001

Continues on next page

Continued

Reference	Document ID
Product manual - OmniCore V400XT	3HAC081697-001
Technical reference manual - System parameters	3HAC065041-001
Technical reference manual - RAPID Instructions, Functions and Data types	3HAC065038-001
Application manual - Controller software OmniCore	3HAC066554-001
Product specification - OmniCore C line	3HAC065034-001
Product specification - OmniCore V line	3HAC074671-001
Application manual - EtherNet/IP Scanner/Adapter	3HAC066565-001
Application manual - I/O Engineering	3HAC082346-001

Revisions

Revision	Description
A	Released with RobotWare 7.0.
B	Released with RobotWare 7.0.1. <ul style="list-style-type: none"> Updated the section Coil neutralization on page 53.
C	Released with RobotWare 7.0.2. <ul style="list-style-type: none"> Updated the section Connecting the EtherNet/IP network on page 57.
D	Released with RobotWare 7.2. <ul style="list-style-type: none"> Discrete I/O replaced by Scalable I/O in entire manual.
E	Released with RobotWare 7.5. <ul style="list-style-type: none"> Information about safety digital base devices added in sections: Introduction on page 11, Hardware overview on page 13, "I/O device descriptions", "Status LED descriptions", "Technical data", Information about ABB Scalable I/O devices on page 55 and "Configuring Scalable I/O devices using RobotStudio". New section: "Setting up safety digital base devices". Updated the section References on page 7. Information about node commissioning for other EtherNet/IP scanners added in sections Introduction on page 11, Installing digital base devices on page 41, and "Reset button". Limitation added in section Information about ABB Scalable I/O devices on page 55 that COS is not supported for DSQC1042, safety digital base. Section "Identifying an I/O device" updated with information that the MS LED also flashes during identification plus that for DSQC1042 only the PWR (Power) LED flashes.
F	Released with RobotWare 7.7. <ul style="list-style-type: none"> Content in manual completely restructured. New section including information about OmniCore capacity and examples of device combinations: General system information on page 13 Information about dimensions, weight and environmental conditions added in technical data for all devices in Hardware overview on page 13. New section including information about mounting and required installation space: General installation information on page 39. New section including information about configuration of Scalable I/O devices: Software commissioning on page 55.

Continues on next page

Revision	Description
	<ul style="list-style-type: none"> • New section including information about prerequisites, recommended work process and troubleshooting for safety digital base devices: Configuring safety digital base devices on page 86. • Information about status signal names for safety digital devices added in Information about ABB Scalable I/O devices on page 55. • Section Installing safety digital base devices on page 45 updated with information about safe I/O dual channel connection.
G	Released with RobotWare 7.8. <ul style="list-style-type: none"> • Minor corrections in Installing safety digital base devices on page 45.
H	Released with RobotWare 7.10. <ul style="list-style-type: none"> • Information about connection of external outputs to safe I/O inputs updated in Installing safety digital base devices on page 45. • Information about process power supply added in Safety digital base device, DSQC1042 on page 24 and Installing safety digital base devices on page 45. • Information about default hysteresis added in section Analog add-on device, DSQC1032 on page 33 and in Analog input point object on page 95.
J	Released with RobotWare 7.13. <ul style="list-style-type: none"> • Safety related cautions added in Safety digital base device, DSQC1042 on page 24, "Configuring Scalable I/O devices using RobotStudio", Configuring safety digital base devices on page 86.
K	Released with RobotWare 7.15. <ul style="list-style-type: none"> • Information about Safety Network Number added in "Configuring an I/O device". • New section: Configuring Scalable I/O devices using I/O Engineering on page 58.
L	Released with RobotWare 7.16 and IOE 1.5.0. <ul style="list-style-type: none"> • Information about online configuration added in Configuring Scalable I/O devices using I/O Engineering on page 58. • Information about safety configuration added in Reset safety configuration on page 90. • Minor corrections in Hardware overview on page 13.
M	Released with RobotWare 7.17 and IOE 1.5.1. <ul style="list-style-type: none"> • Minor corrections in Offline configuration on page 58 and Verifying safety parameters on page 88.

Network security

Network security

This product is designed to be connected to and to communicate information and data via a network interface. It is your sole responsibility to provide, and continuously ensure, a secure connection between the product and to your network or any other network (as the case may be).

You shall establish and maintain any appropriate measures (such as, but not limited to, the installation of firewalls, application of authentication measures, encryption of data, installation of anti-virus programs, etc) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. ABB Ltd and its entities are not liable for damage and/or loss related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

1 Introduction

General

ABB Scalable I/O is a modular, compact, and scalable I/O system that consists of a digital base device, or a safety digital base device, which is the minimum configuration, and add-on devices.

Up to four add-on devices can be controlled by each base device with maintained performance, and any combination of add-on devices is supported.

Communication

The digital base device communicates over the EtherNet/IP communication protocol to the robot controller or to other EtherNet/IP scanners. Up to 50 devices in total can be connected to the robot controller over EtherNet/IP.

Node commissioning for other EtherNet/IP scanners

For other EtherNet/IP scanners, node commissioning needs to be done either using a dhcp server on the scanner network or setting a static IP address in the device with the help of third-party software. An initial volatile address can be obtained using the reset button. The TCP/IP Object can then be accessed for the purpose of this.



Note

The safety digital base device, DSQC1042, is not to be used with other EtherNet/IP scanners.

Options

When using the standard *Plug & Produce* interface, no additional RobotWare options or hardware options are required to connect to the robot controller.

When using the RobotWare options *3024-1 EtherNet/IP Scanner* and/or *3024-2 EtherNet/IP Adapter*, more configuration possibilities are available.

Device interfaces

The add-on devices have an optical interface and must be attached to a digital base device. The additional Ethernet port on the base device can be used to daisy chain any Ethernet based equipment on the same network, for example additional digital base devices.

Safety

The safety digital base device can be used to control and monitor machine safety equipment in a system. It uses dual channels, meaning that no undetected single fault can lead to loss of safety functions.



Note

The safety digital base device functionality is available from RobotWare 7.5.

Continues on next page

1 Introduction

Continued



Note

The safety digital base device, DSQC1042, may only be used with the OmniCore controller on the Private Network.

Mounting

The I/O devices are designed to be mounted vertically on a mounting rail in an IP20 protected environment with normal air convection. Forced air is needed if the devices are mounted horizontally.

Features

The important features of the ABB Scalable I/O devices are following:


- Easy to install.
- Easy to configure in RobotWare with support of the *Plug & Produce* interface.
- Compact and scalable.
- Can be mounted inside the controller and/or distributed outside.
- Supports standard DIN-rail mounting.
- Galvanically isolated add-on devices.
- Dual port switch for daisy chaining.
- Fast signal setting with *Change of State*.

2 Hardware overview

2.1 General system information

ABB Scalable I/O devices

ABB Scalable I/O is a modular, compact, and scalable I/O system that consists of base devices (digital or safety digital base device) and a number of various add-on devices (digital, analog and relay add-ons):

Spare part no.	Description	Type
3HAC058663-001	Digital base, 16 digital inputs, 16 digital outputs	DSQC1030
3HAC058664-001	Digital add-on, 16 digital inputs, 16 digital outputs	DSQC1031
3HAC058665-001	Analog add-on, 4 analog inputs, 4 analog outputs	DSQC1032
3HAC058666-001	Relay add-on, 8 digital inputs, 8 relay outputs	DSQC1033
3HAC062908-001	Safety digital base, 12 digital safe inputs, 4 digital safe outputs	DSQC1042
	 Note The device is configured with dual channels (= 6 digital safe inputs, 2 digital safe outputs).	

See [Base devices on page 18](#) and [Add-on devices on page 30](#) for detailed information about the devices.

Additional parts

Spare part no.	Description
3HAC060919-001	Connectors digital base/add-on
3HAC060925-001	Connectors analog add-on
3HAC060926-001	Connectors relay add-on
3HAC069538-001	Connectors safety I/O
3HAC062073-001	DIN bracket



Note

See manufacturer (Phoenix) for recommendation on conductor connections.

Communication

The digital base device communicates over the EtherNet/IP communication protocol to the robot controller or to other EtherNet/IP scanners. ¹ Up to 50 devices in total can be connected to the robot controller over EtherNet/IP.

When the digital base device is connected to logic power supply and Ethernet, it can be detected and configured by the robot controller. The process power supply powers the inputs, outputs, and the optical interface to the add-on devices.

¹ For more information about communication to other scanners, see [Node commissioning for other EtherNet/IP scanners on page 11](#).

Continues on next page

2 Hardware overview

2.1 General system information

Continued

OmniCore controller capacity

The OmniCore controller has the capacity to handle the following combinations of ABB Scalable I/O devices:


Digital base devices	Number of digital base devices per OmniCore controller	Number of add-on devices per digital base device
DSQC1030, Digital base device	30	4
DSQC1042, Safety digital base device	4	4

Up to four add-on devices can be controlled by each digital base device with maintained performance, and any combination of add-on devices is supported.

Examples of device combinations

Digital base device with add-ons

The illustration below shows a combination of a digital base device and connected add-on devices:

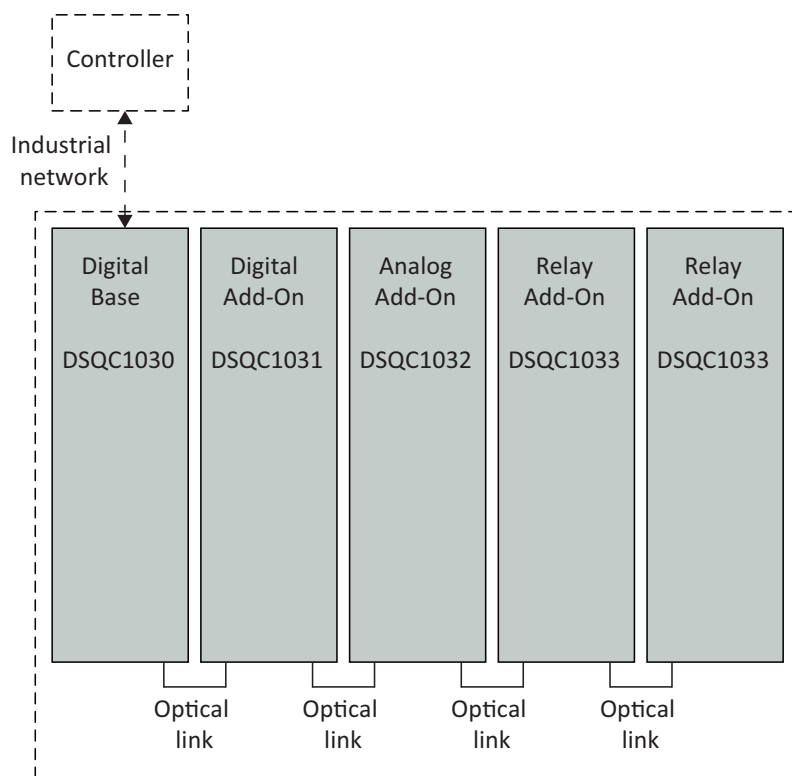

xx2200000943



Note

Up to four add-on devices can be controlled by each digital base device with maintained performance, and any combination of add-on devices is supported.

Continues on next page




Note

The optical interface on the base device must be powered by process power supply to detect add-on devices.

Safety digital base device with add-ons

The illustration below shows a combination of a safety digital base device and connected add-on devices:

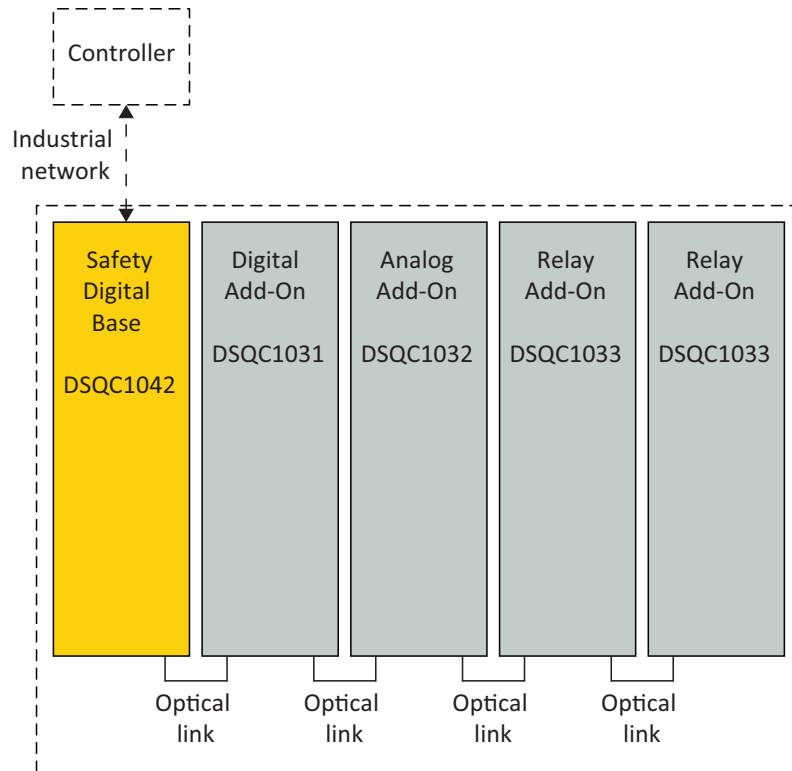

xx220000944



Note

Up to four add-on devices can be controlled by each safety digital base device with maintained performance, and any combination of add-on devices is supported.

Continues on next page


2 Hardware overview

2.1 General system information

Continued

Two digital base devices with add-ons

The illustration below shows a combination of two digital base devices with connected add-on devices:

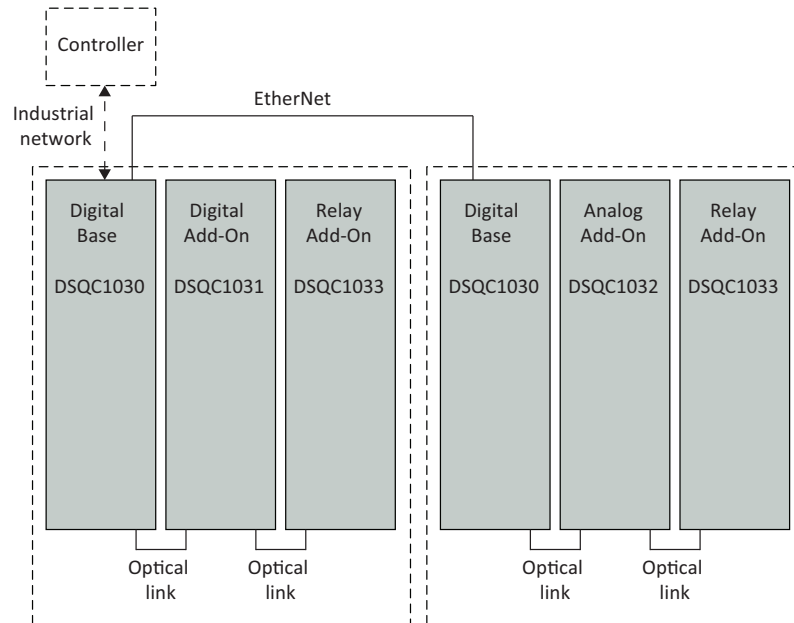

xx2200000945




Note

Both digital base devices communicate with their connected add-ons via an optical interface. Communication between the two digital base devices must, however, be enabled through an EtherNet cable (daisy chaining).

Continues on next page

Two safety digital base devices with add-ons

The illustration below shows a combination of two safety digital base devices, where only the first safety digital base device has connected add-on devices.

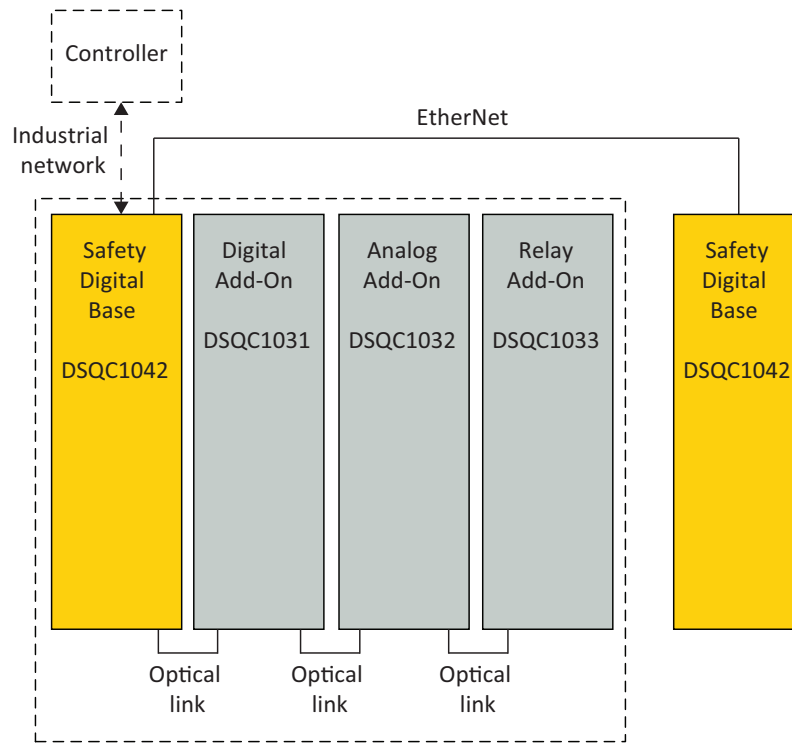

xx220000946



Note

The first safety digital base device communicates with the connected add-ons via an optical interface. Communication between the two safety digital base devices must, however, be enabled through an EtherNet cable (daisy chaining).

2 Hardware overview


2.2.1 Digital base device, DSQC1030

2.2 Base devices

2.2.1 Digital base device, DSQC1030

Description

The DSQC1030 digital base device has 16 digital inputs and 16 digital outputs and can be combined with up to four additional add-on devices.

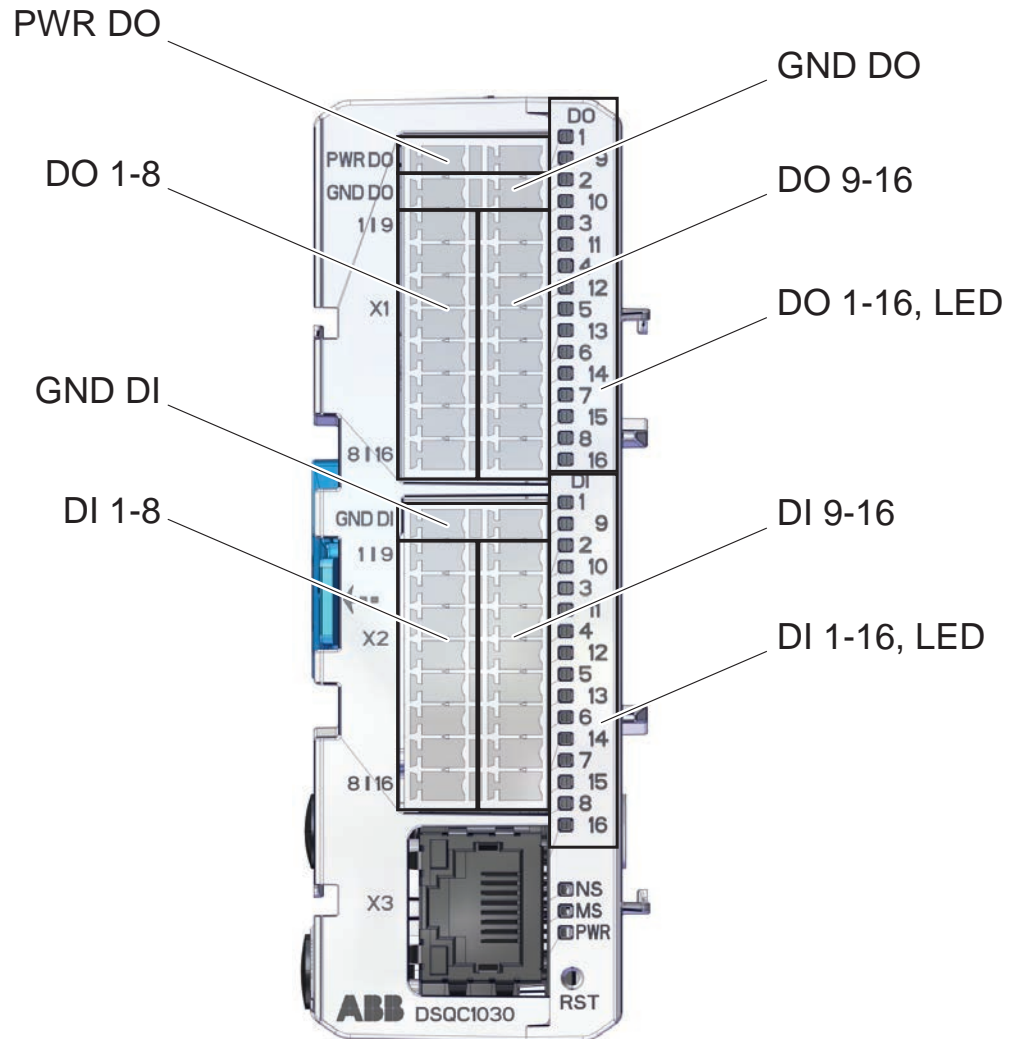

xx2400001830

Connector	Description
X1 ⁱ	Digital outputs, process power
X2 ⁱ	Digital inputs
X3	EtherNet
X4	Logic power

Continues on next page

2 Hardware overview

2.2.1 Digital base device, DSQC1030

Continued

Connector	Description
X5	EtherNet

ⁱ The numbers (printings) on the module only show the I/O numbers (digital input/output). It is not the pin position number for connector X1 or X2 (only I/O number).

Connectors

Location	Connector	Left side/description	Right side/description	
Top	X4 Logic power	PWR	PWR	
		GND	GND	
Front	X1 Digital outputs, process power ⁱ	PWR DO	PWR DO	
		GND DO	GND DO	
		DO01	DO09	
		DO02	DO10	
		DO03	DO11	
		DO04	DO12	
		DO05	DO13	
		DO06	DO14	
		DO07	DO15	
		DO08	DO16	
	X2 Digital inputs ⁱ	GND DI	GND DI	
		DI01	DI09	
		DI02	DI10	
		DI03	DI11	
		DI04	DI12	
		DI05	DI13	
		DI06	DI14	
		DI07	DI15	
	Down	X5 EtherNet		

ⁱ The numbers (printings) on the module only show the I/O numbers (digital input/output). It is not the pin position number for connector X1 or X2 (only I/O number).

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x33.3x101	
Weight	117 g	

Continues on next page

2 Hardware overview

2.2.1 Digital base device, DSQC1030

Continued

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Supply voltage

Description	Data	Note
Voltage range	20.4 – 28.8 VDC	
Input current, 24V SYS	100 mA (TBC)	
Input current, 24V Process	8 A	
Plug-in current	<2 A @ 1ms	
Surge protected	Yes	
Reverse polarity protected	Yes	

Digital outputs

Description	Data	Note
Rated current	500 mA	
Max current	600 mA	
Typical short circuit current	1200 mA	
Leakage current	< 100 µA	
Rated voltage	24 VDC	
Max voltage	30 VDC	
Max voltage drop	0.5V at 500 mA	
Max inductive load	1000 mH	(max switching repetition rate: 10 sec)
Max capacitive load	10 mF	
Recommended cable area	1 mm ²	
Surge protected	Yes	
Thermal protection	Yes	
Max delay time	0.5 ms	

Digital inputs

Description	Data	Note
Input voltage level Lo	-30 - 5 V	
Input voltage level Hi	15 - 30 V	
Type switch voltage	10 V	
Input current level Lo	<0.5 mA	
Input current level Hi	>2 mA	typically 4 mA

Continues on next page

Description	Data	Note
Max voltage	30 V	
Reverse polarity protected	Yes	
Surge protected	Yes	
Internal delay time	0.5 ms	
Filter time	0 – 65 ms	Programmable. Default value 5 ms

Status LEDs

The DSQC1030 digital base device has the following status LEDs:

LED label	Description
DO 1-16	Digital outputs
DI 1-16	Digital inputs
PWR	Power
NS	Network status
MS	Module status
	Ethernet

Status LED descriptions

Power LED

The bicolor (green/red) LED indicates the status of the power. The LED is controlled by software. The following table shows the different states of the Power LED.

LED color	Description
OFF	The device has no power or is not online. The device has not completed the startup.
GREEN steady	The device is in standby state.
RED flashing (500 ms ON, 500 ms OFF)	The device is booting.
RED flashing (One flash: Red 100 ms)	IP-settings reset. The reset button has been pressed for more than 3 s.
RED/GREEN flashing (Two flashes: Red 100 ms, Green 100 ms, Red 100 ms)	Factory reset. The reset button has been pressed for more than 10 s.
RED steady	The device performs a self-test or is in error.

MS - Module status LED

The bicolor (green/red) LED indicates the status of the device. It indicates whether or not the device has power and is operating properly. The LED is controlled by software. The following table shows the different states of the MS LED.

LED color	Description
OFF	The device is booting.

Continues on next page

2 Hardware overview

2.2.1 Digital base device, DSQC1030

Continued

LED color	Description
RED/GREEN flashing (Green 250 ms, Red 250 ms, Green steady)	Starting procedure.
GREEN steady	Self-test or operational.
GREEN flashing (500 ms ON, 500 ms OFF)	Standby.
RED flashing (500 ms ON, 500 ms OFF)	Recoverable fault.
RED steady	Unrecoverable fault.

NS - Network status LED

The bicolor (green/red) LED indicates the status of the communication link. The LED is controlled by software. The following table shows the different states of the NS LED.

LED color	Description
OFF	Boot, self-test, no IP address.
GREEN steady	IP address set and existing CIP connection.
GREEN flashing (500 ms ON, 500 ms OFF)	IP address set but no existing CIP connection.
RED flashing (500 ms ON, 500 ms OFF)	One or more I/O connections are in the Timed-Out state.
RED steady	Duplicate IP address detected.
GREEN/RED flashing (Green 250 ms ON, Red 250 ms ON, Both OFF)	Starting procedure.

Ethernet LEDs

The Ethernet LEDs are located on the Ethernet connectors and shows the status of Ethernet communication.

LED label	LED color	Description	Remedy/cause
Speed	OFF	Operating at 10 Mbps.	
	YELLOW steady	Operating at 100 Mbps.	
Link/activity	OFF	No link is established.	
	GREEN steady	Link is established.	
	GREEN flashing	There is activity on this port.	

Continues on next page

Status LEDs at power-up

The system performs a test of the MS and NS LEDs during startup. The purpose of this test is to check that all LEDs are working properly. The test runs as follows:

Order	LED action
1	NS LED is switched Off.
2	MS LED is switched On green for approx. 0.25 seconds.
3	MS LED is switched On red for approx. 0.25 seconds.
4	MS LED is switched On green.
5	NS LED is switched On green for approx. 0.25 seconds.
6	NS LED is switched On red for approx. 0.25 seconds.
7	NS LED is switched On green.

Reset button

The DSQC1030 digital base device has a reset button located under the status LEDs. The reset button can be used in different ways to reset the device.

Function	Description	Indication
Pressed once (<3 sec)	Regular reset, same as toggling the power.	
Short press and hold (>3 sec)	Assigns volatile IP-settings of 192.168.125.254.	The Power LED flashes red once.
Long press and hold (>10 sec)	Factory reset.	The Power LED flashes red two times.



CAUTION

Use a straightened out paper clip or a similar blunt object to carefully press the reset button. Using sharp objects or pressing with force may damage the reset button.



Note

Factory reset can also be made remotely via RobotStudio, see [Removing an I/O device configuration on page 80](#).

2 Hardware overview

2.2.2 Safety digital base device, DSQC1042

2.2.2 Safety digital base device, DSQC1042

Description

The DSQC1042 safety digital base device has 12 inputs and 4 outputs working in dual channel pairs. Due to the dual channel configuration, the device has 6 safe digital inputs and 2 safe digital outputs. The safety digital base device can be combined with up to four additional add-on devices.




Note

For information about how to set up the safety digital base device and its dual channel signals, see [Configuring safety digital base devices on page 86](#).



Note

For information about how to connect safety digital base devices to process power sources, see [Installing safety digital base devices on page 45](#).

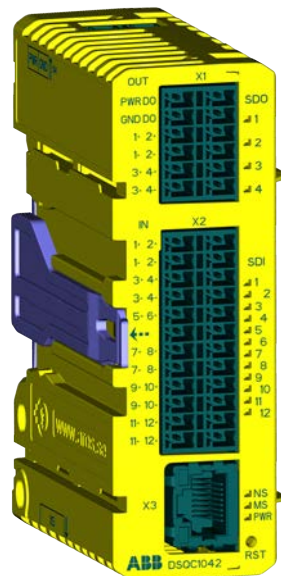

xx2100001681

Connector	Description
X1	Digital outputs, process power
X2 ⁱ	Digital inputs
X3	EtherNet
X4	Logic power
X5	EtherNet

Continues on next page

Connectors

Location	Connector	Left side/description	Right side/description
Top	X4 Logic power	2 - PWR	4 - PWR
		1 - GND	3 - GND
Front	X1 Digital outputs, process power	6 - PWR DO	12 - PWR DO
		5 - GND DO	11 - GND DO
		4 - SDO_1_+	10- SDO_2_+
		3 - SDO_1_-	9 - SDO_2_-
		2 - SDO_3_+	8 - SDO_4_+
		1 - SDO_3_-	7 - SDO_4_-
	X2 Digital inputs ⁱ	12 - SDI_1_+	24 - SDI_2_+
		11 - SDI_1_-	23 - SDI_2_-
		10 - SDI_3_+	22 - SDI_4_+
		9 - SDI_3_-	21 - SDI_4_+
		8 - SDI_5_+	20 - SDI_6_+
		7 - SDI_5_-	19 - SDI_6_-
		6 - SDI_7_+	18 - SDI_8_+
		5 - SDI_7_-	17 - SDI_8_-
		4 - SDI_9_+	16 - SDI_10_+
		3 - SDI_9_-	15 - SDI_10_-
		2 - SDI_11_+	14 - SDI_12_+
	1 - SDI_11_-	13 - SDI_12_-	
		X3 EtherNet	
Down	X5 EtherNet		

Performance level data

Type of data	Description
CAT according to ISO 13849-1	Up to Cat. 3
Performance Level. PLr according to ISO 13849-1	Up to PL e (In Cat.3 dual channel config.)
PFH _D	4,29 x 10 ⁻⁸ (Cat 3)
MTTF _D	Dual channel In: 904 years
	Dual channel Out: 928 years
DC _{AVG}	> 90%
Service lifetime	20 years

Continues on next page

2 Hardware overview

2.2.2 Safety digital base device, DSQC1042

Continued

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x36x101	
Weight	117 g	

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Supply voltage

Description	Data	Note
Voltage range	20.4 – 28.8 VDC	
Input current, 24V SYS	150 mA (TBC)	
Input current, 24V Process	2 A	
Plug-in current	<2 A @ 1ms	
Surge protected	Yes	
Reverse polarity protected	Yes	

Digital outputs

Description	Data	Note
Rated current	500 mA	
Max current	600 mA	
Typical short circuit current	1200 mA	
Leakage current	< 100 uA	
Rated voltage	24 VDC	
Max voltage	30 VDC	
Max voltage drop	0.5V at 500 mA	
Max inductive load	< 700 mH	(max switching repetition rate: 10 sec)
Max capacitive load	< 3.3 mF	
Recommended cable area	1 mm ²	
Surge protected	Yes	
Thermal protection	Yes	
Max delay time	21 ms	

Continues on next page

Digital inputs

Description	Data	Note
Input voltage level Lo	-30 - 5 V	
Input voltage level Hi	15 - 30 V	
Type switch voltage	10 V	
Input current level Lo	<1 mA	
Input current level Hi	>2 mA	typically 4 mA
Max voltage	30 V	
Reverse polarity protected	Yes	
Surge protected	Yes	
Internal delay time	13 ms	
Filter time	2 ms	
Safety digital inputs	Equivalent	
Discrepancy time, dual channel	500 ms	

Status LEDs



CAUTION

LEDs are not reliable indicators and cannot be guaranteed to provide accurate information. They should only be used for general diagnostics during commissioning or troubleshooting. Do not attempt to use LEDs as operational indicators.

The DSQC1042 safety digital base device has the following status LEDs.

LED label	Description
DO 1-4	Digital outputs
DI 1-12	Digital inputs
PWR	Power
NS	Network status
MS	Module status

Status LED descriptions

Power LED

The bicolor (green/red) LED indicates the status of the power. The LED is controlled by software. The following table shows the different states of the Power LED.

LED color	Description
GREEN steady	The device is in standby state.
GREEN flashing	The device is online, but has no connections in the established state.
RED flashing (500 ms ON, 500 ms OFF)	The device is booting.

Continues on next page

2 Hardware overview

2.2.2 Safety digital base device, DSQC1042

Continued

LED color	Description
RED flashing (One flash: Red 100 ms)	The reset button has been pressed for more than 3 s.
RED/GREEN flashing (Two flashes: Red 100 ms, Green 100 ms, Red 100 ms)	The reset button has been pressed for more than 10 s.
RED steady	The device performs a self-test or is in error.

MS - Module status LED

The bicolor (green/red) LED indicates the status of the device. It indicates whether or not the device has power and is operating properly. The LED is controlled by software. The following table shows the different states of the MS LED.

LED color	Description
OFF	The device has no power or is not online.
GREEN steady	The device is online and has an established connection.
GREEN flashing	The device is online but has no established connections or is not allocated to a master. Connection may be established, but the validator has not completed an initial time coordination exchange.
RED flashing	One or more I/O connections has timed-out.

NS - Network status LED

The bicolor (green/red) LED indicates the status of the communication link. The LED is controlled by software. The following table shows the different states of the NS LED.

LED color	Description
OFF	Device is not powered.
GREEN steady	The device is operating in a normal condition.
GREEN flashing	The device is idle or in standby state.
RED flashing	Abort. The device has a recoverable fault.
RED steady	The device has an unrecoverable fault, and may need replacing.
GREEN/RED flashing	The device is in self-test state, or the device needs commissioning due to configuration or UNID missing, incomplete or incorrect.

Ethernet LEDs

The Ethernet LEDs are located on the Ethernet connectors and shows the status of Ethernet communication.

LED label	LED color	Description	Remedy/cause
Speed	OFF	Operating at 10 Mbps.	
	YELLOW steady	Operating at 100 Mbps.	

Continues on next page

LED label	LED color	Description	Remedy/cause
Link/activity	OFF	No link is established.	
	GREEN steady	Link is established.	
	GREEN flashing	There is activity on this port.	

Status LEDs at power-up

The system performs a test of the MS and NS LEDs during startup. The purpose of this test is to check that all LEDs are working properly. The test runs as follows:

Order	LED action
1	NS LED is switched Off.
2	MS LED is switched On green for approx. 0.25 seconds.
3	MS LED is switched On red for approx. 0.25 seconds.
4	MS LED is switched On green.
5	NS LED is switched On green for approx. 0.25 seconds.
6	NS LED is switched On red for approx. 0.25 seconds.
7	NS LED is switched On green.

Reset button

The DSQC1042 safety digital base device has a reset button located under the status LEDs. The reset button can be used in different ways to reset the device.

Function	Description	Indication
Pressed once (<3 sec)	Regular reset, same as toggling the power.	
Short press and hold (>3 sec)	Resets the IP-settings to ABB default values.	The Power LED flashes red once.
Long press and hold (>10 sec)	Factory reset.	The Power LED flashes red two times.



CAUTION

Use a straightened out paper clip or a similar blunt object to carefully press the reset button. Using sharp objects or pressing with force may damage the reset button.



Note

Factory reset can also be made remotely via RobotStudio, see [Removing an I/O device configuration on page 80](#).

2 Hardware overview


2.3.1 Digital add-on device, DSQC1031

2.3 Add-on devices

2.3.1 Digital add-on device, DSQC1031

Description

The DSQC1031 digital add-on device has 16 digital inputs and 16 digital outputs and must be used together with a digital base device.

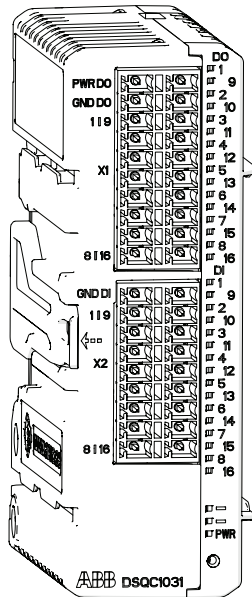

xx1600002034

Item	Description
X1	Digital outputs, logic and process power
X2	Digital inputs

Status LEDs

The DSQC1031 device has the following status LEDs.

LED label	LED description	LED color	Status
DO 1-16	Digital outputs		
DI 1-16	Digital inputs		
PWR	Power	GREEN steady	Addressed.
		GREEN flashing	Not addressed.
		RED flashing	Boot.

Continues on next page

Connectors

Location	Designation	Left	Right
Front	X1 Digital outputs, logic and process power	10 - PWR DO	20 - PWR DO
		9 - GND DO	19 - GND DO
		8 - DO01	18 - DO09
		7 - DO02	17 - DO10
		6 - DO03	16 - DO11
		5 - DO04	15 - DO12
		4 - DO05	14 - DO13
		3 - DO06	13 - DO14
	X2 Digital inputs	2 - DO07	12 - DO15
		1 - DO08	11 - DO16
		9 - GND DI	18 - GND DI
		8 - DI01	17 - DI09
		7 - DI02	16 - DI10
		6 - DI03	15 - DI11
		5 - DI04	14 - DI12
		4 - DI05	13 - DI13
3 - DI06	12 - DI14		
2 - DI07	11 - DI15		
1 - DI08	10 - DI16		

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x33.3x101	
Weight	105 g	

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Digital outputs

Description	Data	Note
Rated current	500 mA	

Continues on next page

2 Hardware overview

2.3.1 Digital add-on device, DSQC1031

Continued

Description	Data	Note
Max current	600 mA	
Typical short circuit current	1200 mA	
Leakage current	< 100 µA	
Rated voltage	24 VDC	
Max voltage	30 VDC	
Max voltage drop	0.5V at 500 mA	
Max inductive load	1000 mH	(max switching repetition rate: 10 sec)
Max capacitive load	10 mF	
Recommended cable area	1 mm ²	
Surge protected	Yes	
Thermal protection	Yes	
Max delay time	0.5 ms	


Digital inputs

Description	Data	Note
Input voltage level Lo	-30 - 5 V	
Input voltage level Hi	15 - 30 V	
Type switch voltage	10 V	
Input current level Lo	<0.5 mA	
Input current level Hi	>2 mA	typically 4 mA
Max voltage	30 V	
Reverse polarity protected	Yes	
Surge protected	Yes	
Internal delay time	0.5 ms	
Filter time	0 – 65 ms	Programmable. Default value 5 ms

2.3.2 Analog add-on device, DSQC1032

Description

The DSQC1032 analog add-on device has 4 analog inputs and 4 analog outputs and must be used together with a digital base device.

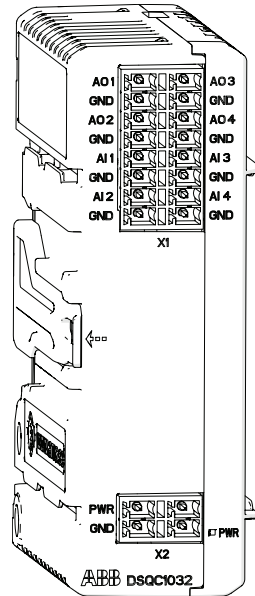

xx1600002035

Item	Description
X1	Analog inputs and outputs
X2	Logic and process power

Status LEDs

The DSQC1032 device has the following status LEDs.

LED label	LED description	LED color	Status
PWR	Power	GREEN steady	Addressed.
		GREEN flashing	Not addressed.
		RED flashing	Boot.

Continues on next page

2 Hardware overview

2.3.2 Analog add-on device, DSQC1032

Continued

Connectors

Location	Designation	Left	Right
Front	X1 Analog inputs and outputs	8 - AO1	16 - AO3
		7 - GND	15 - GND
		6 - AO2	14 - AO4
		5 - GND	13 - GND
		4 - AI1	12 - AI3
		3 - GND	11 - GND
		2 - AI2	10 - AI4
		1 - GND	9 - GND
	X2 Logic and process power	2 - PWR	4 - PWR
		1 - GND	3 - GND

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x33.3x101	
Weight	95 g	

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Analog inputs

Description	Data	Note
Input range	0 – 10 V	
Resolution	12 bits, 2.44 mV	
Hysteresis	4	The default value can be changed, see Analog input point object on page 95 .
Inaccuracy	0.5% + 25 mV	
Input impedance	100 kOhm	typically
Reverse polarity protected	Yes	
Surge protected	Yes	
Delay time	2ms	

Continues on next page

Analog outputs

Description	Data	Note
Output range	0 – 10 V	
Resolution	12 bits, 2.44 mV	
Inaccuracy	0.5% + 25 mV	
Min load impedance	1 kOhm	
Surge protected	Yes	
Short circuit protection	Yes	
Delay time	2 ms	


2 Hardware overview

2.3.3 Relay add-on device, DSQC1033

2.3.3 Relay add-on device, DSQC1033

Description

The DSQC1033 relay add-on device has 8 digital inputs and 8 relay outputs and must be used together with a digital base device.

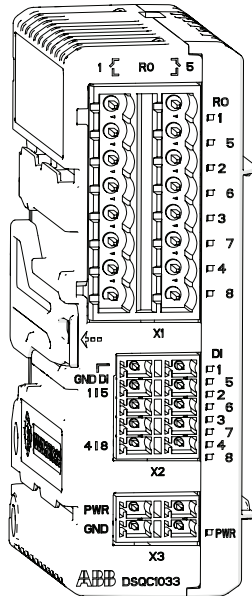

xx1600002036

Item	Description
X1	Relay outputs
X2	Digital inputs
X3	Logic and process power

Status LEDs

The DSQC1031 device has the following status LEDs.

LED label	LED description	LED color	Status
RO 1-8	Relay outputs		
DI 1-8	Digital inputs		
PWR	Power	GREEN steady	Addressed.
		GREEN flashing	Not addressed.
		RED flashing	Boot.

Continues on next page

Connectors

Location	Designation	Left	Right
Front	X1 Relay outputs	8 - RLY1	16 - RLY5
		7 - RLY1	15 - RLY5
		6 - RLY2	14 - RLY6
		5 - RLY2	13 - RLY6
		4 - RLY3	12 - RLY7
		3 - RLY3	11 - RLY7
		2 - RLY4	10 - RLY8
		1 - RLY4	9 - RLY8
	X2 Digital inputs	5 - GND DI	10 - GND DI
		4 - DI1	9 - DI5
		3 - DI2	8 - DI6
		2 - DI3	7 - DI7
		1 - DI4	6 - DI8
	X3 Logic and process power	2 - PWR	4 - PWR
		1 - GND	3 - GND

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x33.3x101	
Weight	133 g	

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Relay outputs

Description	Data	Note
Max switching voltage	230 VAC	
Max switching current	2 A	
Isolation	Reinforced	

This page is intentionally left blank


3 Hardware installation

3.1 General installation information

Mounting

The ABB Scalable I/O devices are designed to be mounted vertically on a mounting rail in an IP20 protected environment with normal air convection.

The individual devices must be mounted side by side on the DIN rail, starting with the digital base device. The add-on devices are placed to the right of the digital base device.

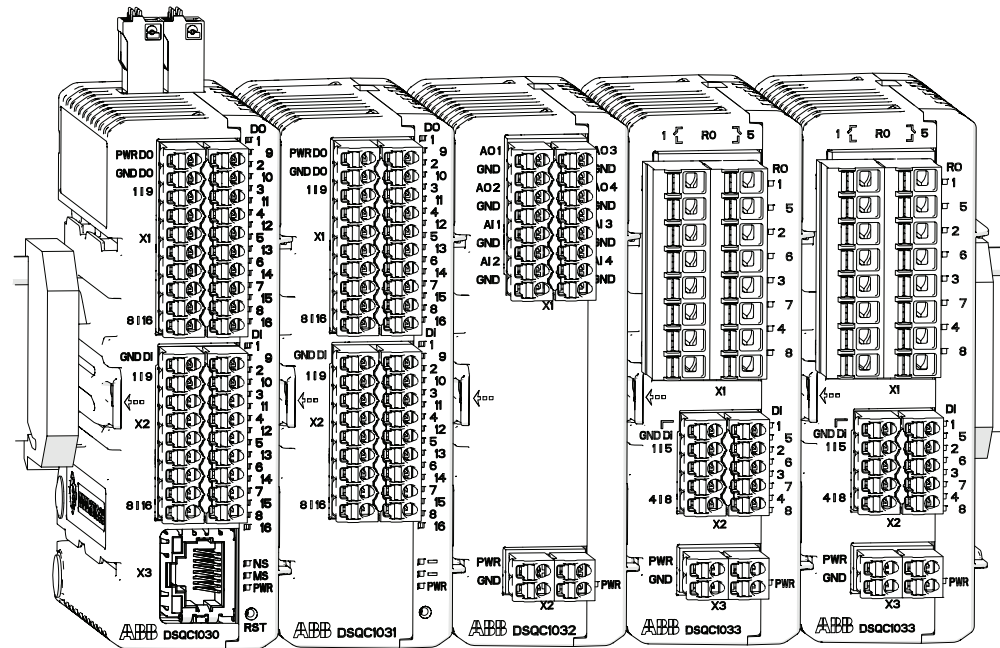

xx1600002032

Continues on next page


3 Hardware installation

3.1 General installation information

Continued

Required installation space

The Scalable I/O system is designed for normal air convection when the devices are mounted vertically. Forced air is needed if the devices are mounted horizontally.

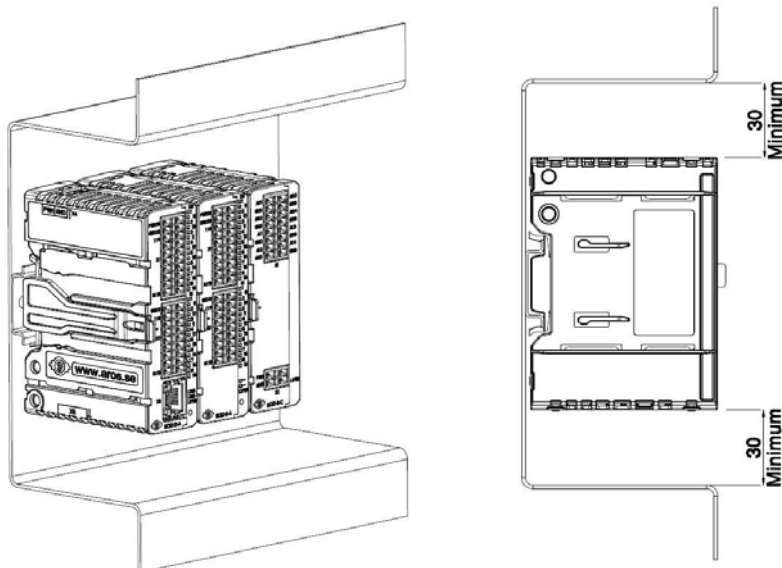

xx220000942




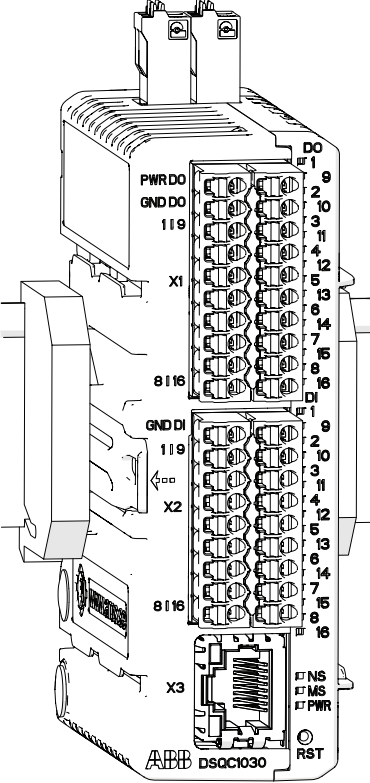


Note

To ensure that the maximum operating ambient temperature is not exceeded, a minimum of 30 mm space is recommended between the system and other components.

3.2 Installing digital base devices

Installing digital base devices

Use this procedure to install the digital base device. See also the product manual for the robot controller, listed in [References on page 7](#).

	Action	Note
1	 <p>DANGER</p> <p>Before commencing any work inside the cabinet make sure that the main power has been switched off.</p>	
2	<p>Fit the device by snapping it onto the mounting rail.</p>	 <p>xx1700000275</p>
3	<p>Connect the Ethernet cable from the robot controller, or the EtherNet/IP scanner, to any of the connectors X3 or X5.</p>	
4	<p>Connect the logic power supply to connector X4.</p>	<p>For information about the pinout see Connectors on page 19.</p>
5	<p>Connect process power supply and GND to the input and output connectors X1 and X2.</p>  <p>Note</p> <p>The process power supply also powers the optical interface to the add-ons.</p>	 <p>CAUTION</p> <p>The process power supply must be supplied separately. Connecting the process power supply through the logical power supply connector may damage the device.</p>

Continues on next page


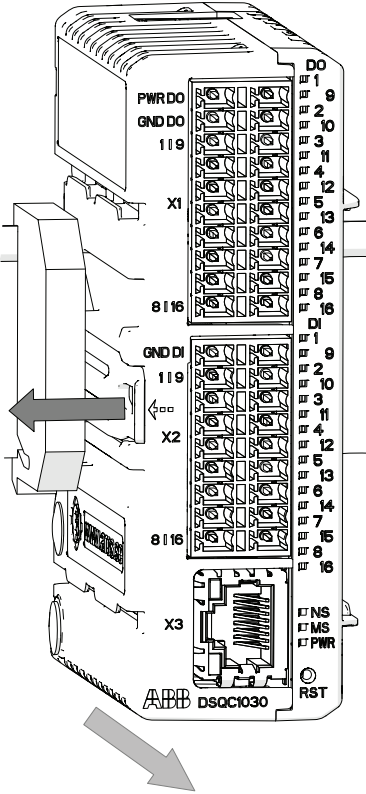
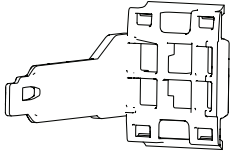
3 Hardware installation

3.2 Installing digital base devices

Continued

	Action	Note
6	Connect wires to the inputs and outputs as required.	
7	Configure the device, see Configuring Scalable I/O devices using I/O Engineering on page 58 .	

Removing digital base devices

	Action	Note
1	 DANGER Before commencing any work inside the cabinet make sure that the main power has been switched off.	
2	Disconnect all connectors.	
3	Press the DIN bracket gently to the left and pull the device straight out.	 <p>xx1700000276</p>
4	Snap off the DIN bracket and refit it to the removed device.	 <p>xx1600002039</p>


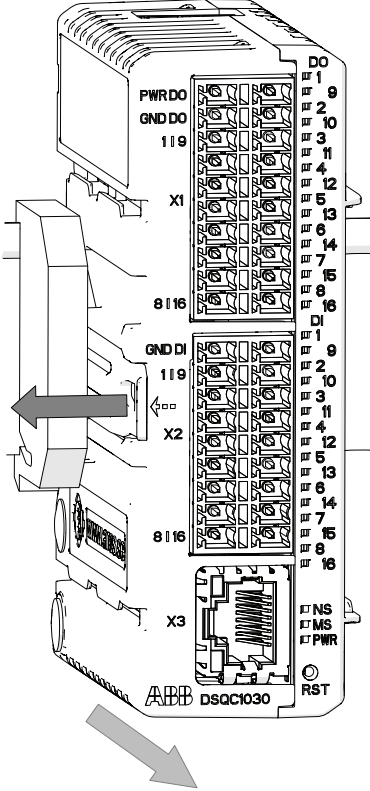
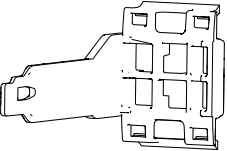
Continues on next page

3 Hardware installation

3.2 Installing digital base devices

Continued

Replacing digital base devices


	Action	Note
1	 <p>DANGER</p> <p>Before commencing any work inside the cabinet make sure that the main power has been switched off.</p>	
2	Disconnect all connectors.	
3	<p>Press the DIN bracket gently to the left and pull the device straight out.</p> <p>Leave the DIN bracket attached to the rail.</p>	 <p>xx1700000276</p>
4	Remove the DIN bracket from the new device.	 <p>xx1600002039</p>

Continues on next page

3 Hardware installation

3.2 Installing digital base devices

Continued

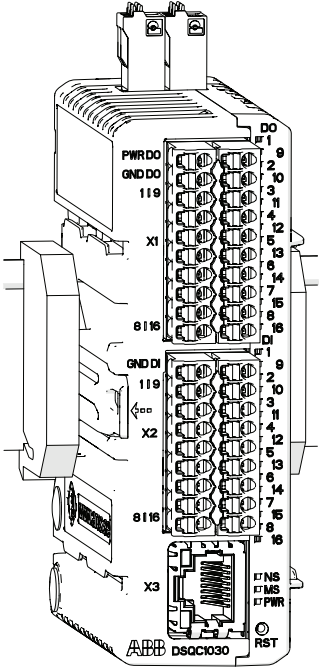	Action	Note
5	Fit the new device by snapping it onto the rail and the DIN bracket.	 <p>xx1700000275</p>
6	Reconnect all connectors.	
7	Fit the spare DIN bracket to the removed device.	
8	Configure the device, see Configuring Scalable I/O devices using I/O Engineering on page 58 .	

Installing additional (external/remote) digital base devices

Additional base devices can be used as external/remote I/O devices, and assembled together in the same way as add-on devices, but they must be connected with separate Ethernet cables. The Ethernet cable can be connected to any of the connectors X3 or X5 on the previous base device.

The logical power supply, connector X4, of up to five base devices in total can be connected in parallel if the devices are placed inside the same controller cabinet, i.e. over short distances. For all other applications, the logical power must be supplied separately to each base device.

The process power supply must always be supplied separately to each base device.




CAUTION

Connecting the process power supply in parallel or through the logical power supply connector may damage the device.

3.3 Installing safety digital base devices

General

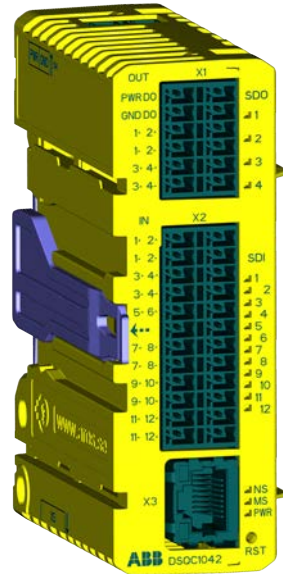

xx2100001681

The safety digital base devices, DSQC1042, are installed in the same way as the digital base devices with a few exceptions. See [Installing digital base devices on page 41](#) for information about the main installation process, and [Connection to process power source on page 45](#) and [Safe I/O dual channel connection on page 46](#) for specific details.

Connection to process power source

The process power input of the DSQC1042 X1 connector (PWR DO and GND DO) must be connected to DSQC609 or another internal/external 24V DC power source. The power source must have less than 4 seconds start-up delay from controller power on.



Note

The 24V DC from X19 customer I/O interface of DSQC3037 cannot be used since it has longer start-up delay.



Note

The DSQC1042 must always be set up with this type of power source connection even if Safe Digital Outputs (SDOs) are not used.

Continues on next page

3 Hardware installation


3.3 Installing safety digital base devices

Continued

Safe I/O dual channel connection

The safety digital base devices are set up with dual channels. See [Setting up dual channel signals on page 87](#).


The following example shows how to connect a safe sensor to an input of the safe scalable I/O unit, and how to connect a safe switch to a safe output:

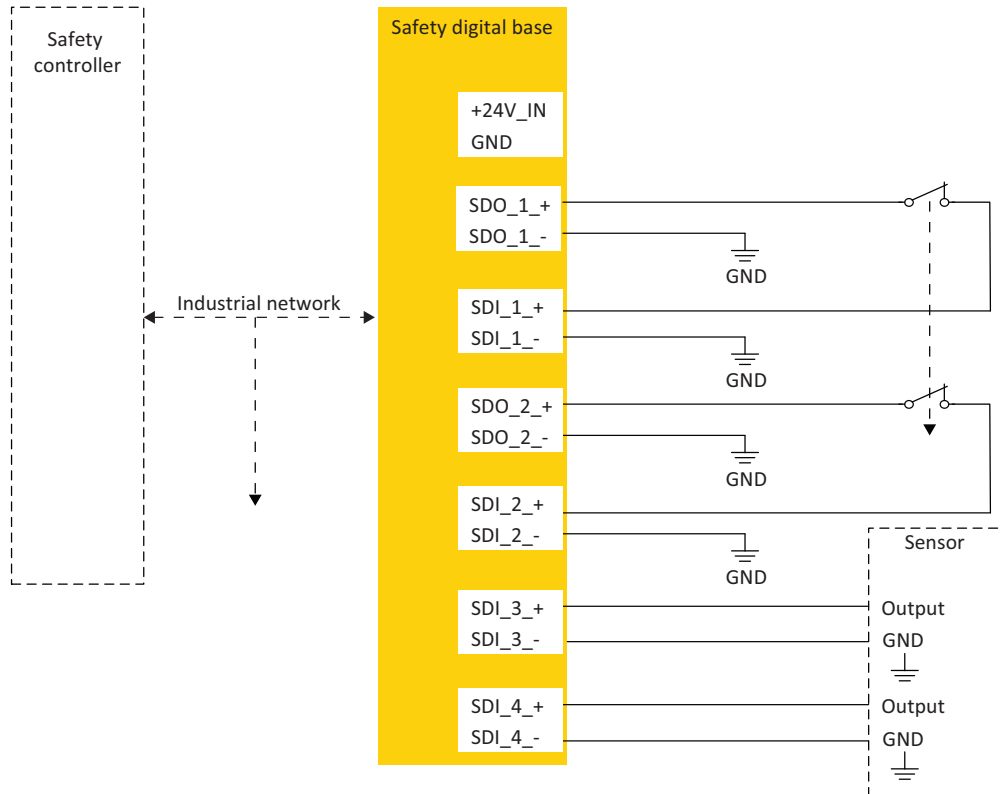

xx220000441

Continues on next page

Safety digital base device used as dual channel safety output

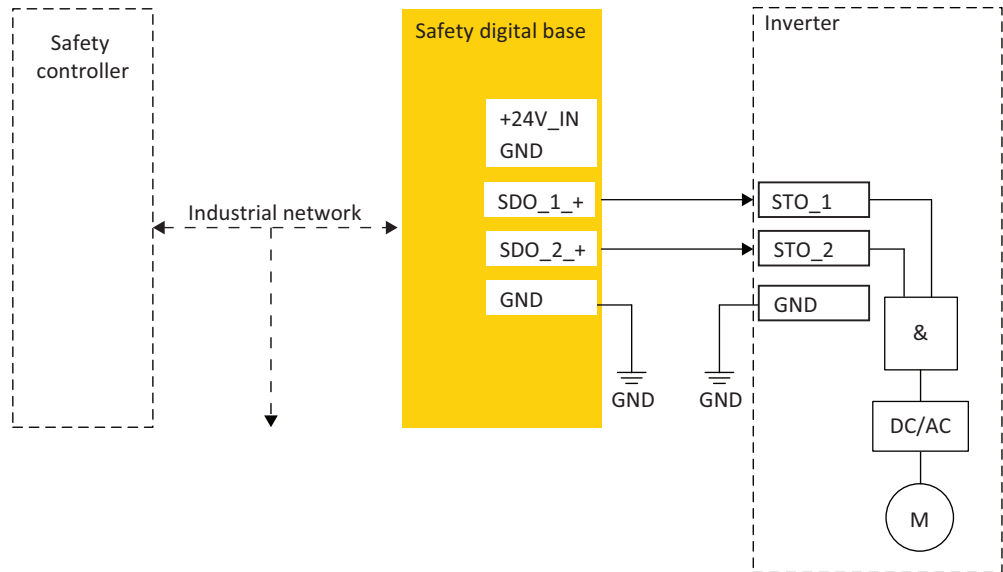

xx220000566


External outputs connected to safe I/O inputs

This example shows how to connect an external output with test pulse to a safe I/O input.



Note

The test pulses from the output signal switching device (OSSD) must be less than 2 ms.

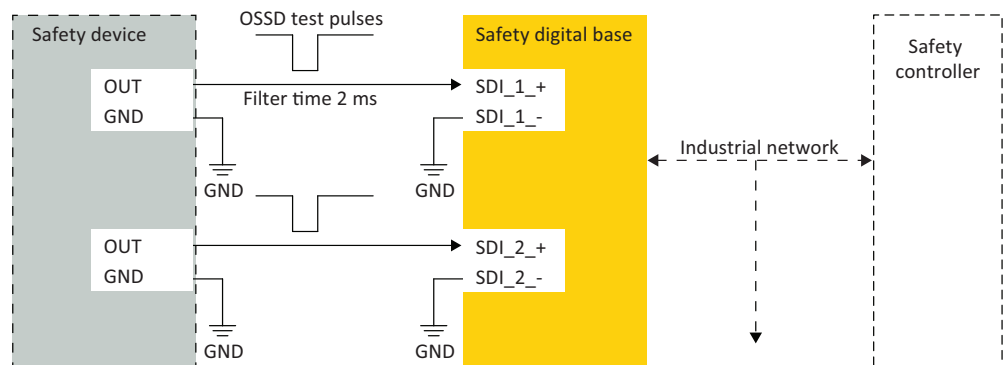

xx220000938

3 Hardware installation

3.4 Installing add-on devices

3.4 Installing add-on devices

General


Add-on devices have an optical interface and must be powered and attached to a configured base device to be detected by the robot controller. Up to four add-on devices can be attached to the same base device with maintained performance.

The optical interface on the base device is powered by process power supply and must also be connected to detect the add-on device. Unpowered add-on devices shall be placed last, i.e. to the right, otherwise the optical link is broken.



Note

Add-ons can also be attached to a safety digital base. See [Examples of device combinations on page 14](#).

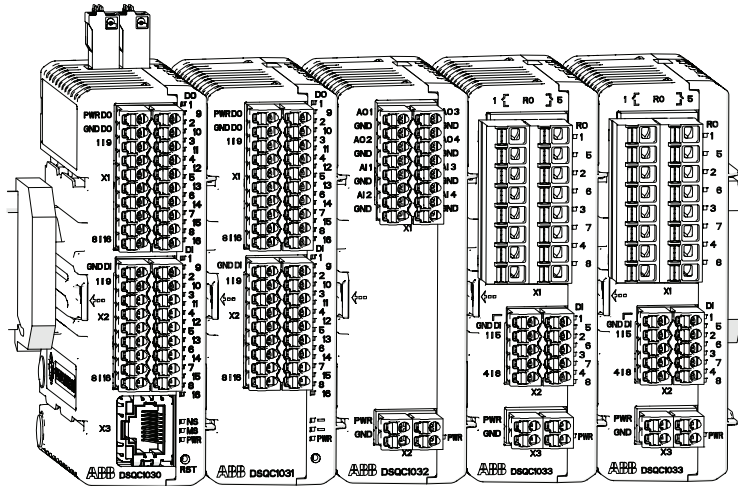

xx1600002032

Installing add-on devices



Action	Note
<p>1</p> <p>DANGER</p> <p>Before commencing any work inside the cabinet make sure that the main power has been switched off.</p>	

Continues on next page

3 Hardware installation

3.4 Installing add-on devices


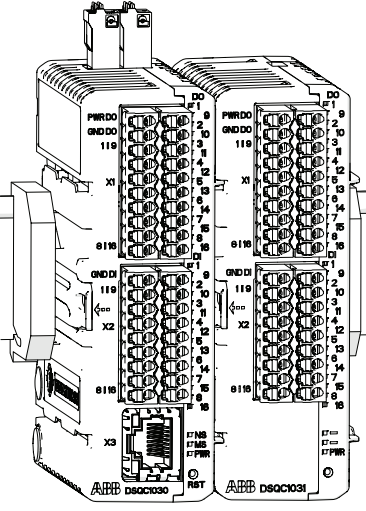

Continued

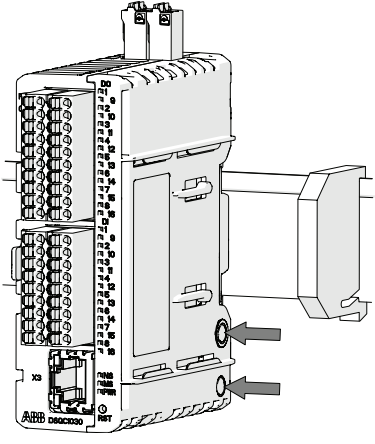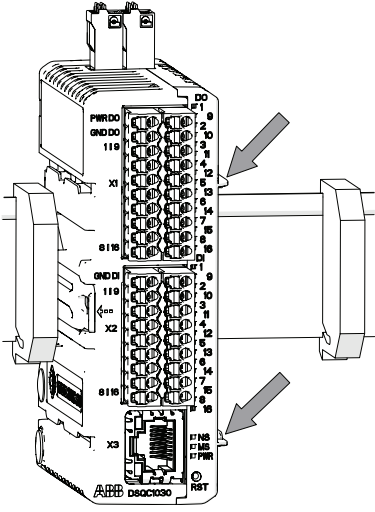	Action	Note
2	Clean the optical interface on both the base device and the add-on from dirt or dust using a soft cloth.	 <p>xx1700000277</p>
3	Fit the add-on device to the guide rails on the right side of the base device or the last device according to the arrows. Press the add-on device until it snaps onto the mounting rail.	 <p>xx1700000278</p> <p>Note</p> <p>If the device is not correctly inserted there is a risk that the optical communication between the devices does not work.</p>


3 Hardware installation

3.4 Installing add-on devices

Continued

	Action	Note
4	<p>Connect the logic and process power supply. For information about the pinout see Add-on devices on page 30.</p> <p> Note</p> <p>The optical interface on the base device must also be powered by process power supply to detect add-on devices.</p>	 <p>xx1700000279</p> <p> CAUTION</p> <p>Connecting the process power supply in parallel with another add-on may damage the devices.</p>
5	<p>Connect wires to the inputs and outputs as required.</p>	
6	<p>Configure the device, see Configuring Scalable I/O devices using I/O Engineering on page 58.</p>	

Removing add-on devices



	Action	Note
1	<p> DANGER</p> <p>Before commencing any work inside the cabinet make sure that the main power has been switched off.</p>	
2	<p>Disconnect all connectors.</p>	

Continues on next page


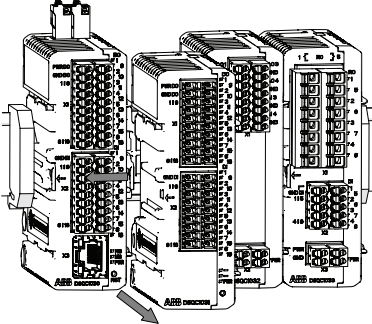
3 Hardware installation

3.4 Installing add-on devices

Continued

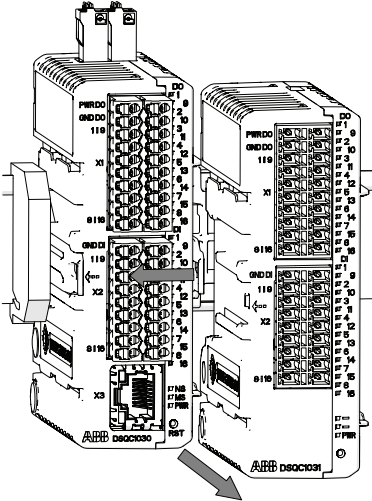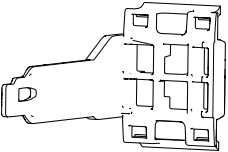	Action	Note
3	Press the DIN bracket gently to the left and pull the device straight out.	 <p>xx170000274</p>
4	Snap off the DIN bracket from the rail and refit it to the removed device.	 <p>xx1600002039</p>

Replacing add-on devices




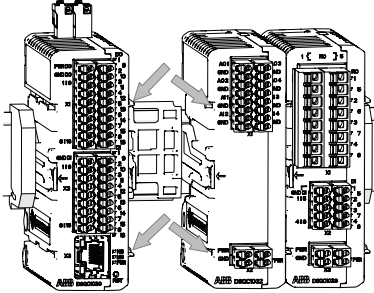

	Action	Note
1	 <p>DANGER</p> <p>Before commencing any work inside the cabinet make sure that the main power has been switched off.</p>	
2	Disconnect all connectors.	
3	Press the DIN bracket gently to the left and pull the device straight out. Leave the DIN bracket attached to the rail.	 <p>xx1600002037</p>

Continues on next page

3 Hardware installation

3.4 Installing add-on devices

Continued

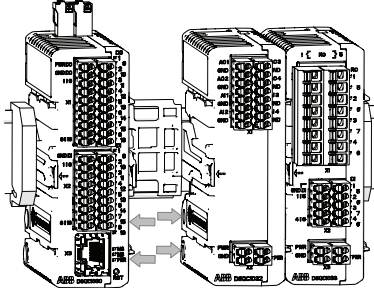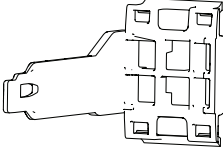	Action	Note
4	Clean all optical interfaces from dirt or dust using a soft cloth.	 <p>xx1600002040</p>
5	Remove the DIN bracket from the new device.	 <p>xx1600002039</p>
6	Fit the new device to the guide rails of the adjacent devices. Press the new device until it snaps onto the DIN bracket.  Note The device must be updated if the order is changed, see Configuring Scalable I/O devices using I/O Engineering on page 58 .	 <p>xx1600002038</p>  Note If the device is not correctly inserted there is a risk that the optical communication between the devices does not work.
7	Reconnect all connectors.	
8	Fit the spare DIN bracket to the removed device.	

3.5 Coil neutralization

External devices

External relay coils, solenoids, and other devices that are connected to the I/O devices must be neutralized and protected with external diodes for reverse protection. The following sections describe how this can be done.




Note

The turn-off time for DC relays increases after neutralization, especially if a diode is connected across the coil. Varistors give shorter turn-off times. Neutralizing the coils lengthens the life of the switches that control them.

Clamping with a diode


The diode should be dimensioned for the same current as the relay coil, and a voltage of twice the supply voltage.

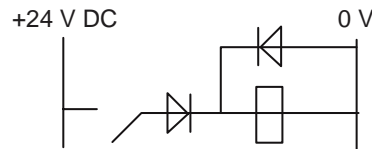

xx0100000163

Clamping with a varistor


The varistor should be dimensioned for the same current as the relay coil, and a voltage of twice the supply voltage.

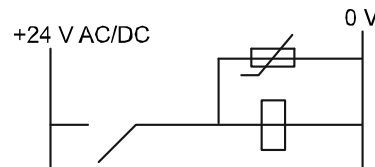

xx0100000164

Clamping with an RC circuit

R 100 ohm, 1W C 0.1 - 1 mF
>500 V max. voltage, 125 V nominal voltage.

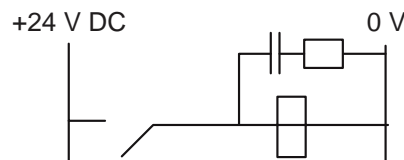

xx0100000165

This page is intentionally left blank

4 Software commissioning

4.1 Information about ABB Scalable I/O devices

General

To use the Scalable I/O devices, plug in the base device and the add-on devices to the controller through the Ethernet cable. Then configure the I/O devices using I/O Engineering, RobotStudio or the FlexPendant.

Industrial network

EtherNet/IP is the industrial network that is used for communication between the I/O devices and the robot and controller.

EDS file

Electronic Data Sheet (EDS) files are required when configuring I/O devices with other scanners. The EDS file, which identifies the devices during the configuration in the network, is stored in the following controller location:

...\\products\\RobotControl_x.x.x-xxx\\utility\\service\\ioconfig\\EDS\\

Behavior

ABB Scalable I/O devices support both *Cyclic* and *Change of State (COS)* I/O connection. It is possible to set output signals with a *Change of State* connection.



Note

Change of State is used together with the parameter production inhibit timer. The parameter defines the highest frequency for which a signal change can occur with *Change of State*.



Note

The *Change of State (COS)* I/O connection is not supported for safety digital base devices (DSQC1042). It is, however, supported for the add-on devices that are connected to it.

Safety digital base devices

The safety digital base devices, DSQC1042, are configured in the same way as other digital base devices. See [Software commissioning on page 55](#). After the configuration, the dual channels must be defined using CL logic. See [Setting up dual channel signals on page 87](#).

Continues on next page

4 Software commissioning

4.1 Information about ABB Scalable I/O devices

Continued

When the set-up and configuration is done, see *Application manual - Functional safety and SafeMove* for instructions on how to work with the safety configuration.



Note

The network reaction time is carefully set to optimal for the safety digital base device.

Signal names

Signals are generated according to the following structure:

Format	Example
Name of device_slot number_type + index	ABBIO_0_DO3 or ABBIO_0_DI5 or ABBIO_3_RO1

Status signal names

Status signal names for the safety digital base devices are generated according to the following structure:

Format	Example
Name of device_slot number_type_Status	ABBIO_0_DO_Status ABBIO_0_DI_Status

4.2 Connecting the EtherNet/IP network

Connecting the EtherNet/IP network

The I/O devices are based on the EtherNet/IP communication protocol but does not require any additional RobotWare options or hardware options to be connected to the robot controller. In this standard configuration, the devices should be connected to the *Private Network* to gain the advantages with *Plug & Produce*.

When using the RobotWare options *3024-1 EtherNet/IP Scanner* or *3024-2 EtherNet/IP Adapter* more connection configuration possibilities are available for Scalable I/O (additional network interfaces available). For more information see *Application manual - EtherNet/IP Scanner/Adapter*.

For more information about network connections on OmniCore, see *Operating manual - Integrator's guide OmniCore*.

4 Software commissioning

4.3.1 Offline configuration

4.3 Configuring Scalable I/O devices using I/O Engineering

4.3.1 Offline configuration

General

This section describes the recommended working procedure when installing and configuring ABB Scalable I/O devices in I/O Engineering. For general information about I/O Engineering, see *Application manual - I/O Engineering*.

For information about configuration using the FlexPendant, see [Configuring Scalable I/O devices using the FlexPendant on page 83](#).



Note

Safety digital base devices (DSQC1042) cannot be configured using the FlexPendant.



Note

A maximum of 4 safety digital base devices can be used at the same time with an OmniCore controller.

When the I/O device is configured using *Plug & Produce* interface, it requires minimal user interaction. Follow the working procedures to configure a new I/O device, update an existing I/O device and to replace an I/O device with another.

Adding I/O devices

- 1 In the **Controller** tab in RobotStudio, select **I/O Engineering**.
- 2 In the **I/O Engineering** tab, select **Add ABB Device > Scalable I/O Device**.

Continues on next page

- 3 In the **Build Your Device** dialog, select a safe digital base device and up to four add-on devices:

The screenshot shows the 'Add a Scalable I/O Device' dialog box with the 'Build Your Device' tab selected. The dialog has a sidebar with 'Build Your Device', 'Device Information', 'Create Signals', and 'Summary'. The main area is titled 'Build your Scalable I/O device' and contains the following fields:

- Base device:** A dropdown menu showing 'DSQC1042 - Safe digital base device'.
- Add-ons:** A list of four add-on devices, each with a dropdown menu and a minus sign to its right:
 - 1: DSQC1031 - Digital add-on
 - 2: DSQC1032 - Analog add-on
 - 3: DSQC1033 - Relay add-on
 - 4: DSQC1031 - Digital add-on

At the bottom right, there are three buttons: 'Back', 'Next', and 'Cancel'.

xx2400000718

Select Next.

- 4 In the **Device Information** dialog, define the following:

The screenshot shows the 'Edit a Scalable I/O Device' dialog box with the 'Device Information' tab selected. The dialog has a sidebar with 'Build Your Device', 'Device Information', 'Create Signals', and 'Summary'. The main area is titled 'Device Information' and contains the following fields:

- Name:** A text input field containing 'Safe_Scalable_IO'.
- Simulate Device:** An unchecked checkbox.
- IP address:** A text input field containing '192 . 168 . 125 . 131' with a help icon (?) to its right.
- Safety Network Number:** A text input field containing '4B54_02A5_985B' with a help icon (?) to its right.
- Timestamp:** A text input field containing '10/18/2024 12:20:06 PM' and a 'Reset' button to its right.

At the bottom right, there are three buttons: 'Back', 'Next', and 'Cancel'.

xx2400000719

- **Name**
- **Simulate Device**
Select if the device is simulated.
- **IP address**

Continues on next page

4 Software commissioning

4.3.1 Offline configuration

Continued

Not applicable for simulated devices.

- **Safety Network Number**

Only applicable for safe Scalable I/O. Enter a unique safety network number for each safety network or safety sub-net.



Tip

Select **Reset** to reset the **Safety Network Number**.

If not previously defined, the **Safety Network Number** for both device and controller will be generated using the date and time the wizard was opened.



Note

If the controller has a defined **Safety Network Number**, the device will inherit the **Safety Network Number** from the controller.

Select **Next**.

- 5 In the **Create Signals** dialog, define if new signals should be generated automatically and include a name prefix:

The screenshot shows a dialog box titled "Add a Scalable I/O Device" with a close button (X) in the top right corner. On the left, there is a vertical navigation pane with four items: "Build Your Device", "Device Information", "Create Signals" (which is highlighted), and "Summary". The main area of the dialog is titled "Create Signals" and contains the following text: "Choose if signals will be generated automatically. If so, provide a prefix." Below this text is a checked checkbox labeled "Create signals automatically". Underneath the checkbox is a text input field with the value "Safe_Scalable_IO". Below the input field, it says "Signal names will have the following naming structure: Prefix + Add-on order + Signal type". At the bottom of this section, it provides a "Signal name example: Safe_Scalable_IO_0_DO1". At the bottom right of the dialog, there are three buttons: "Back", "Next", and "Cancel".

xx2400000720

Select **Next**.

Continues on next page

6 The Summary is displayed:

Add a Scalable I/O Device

Build Your Device

Summary

Build Your Device

0 Base device: DSQC1042 - Safe digital
 1 Add-on: DSQC1031 - Digital
 2 Add-on: DSQC1032 - Analog
 3 Add-on: DSQC1033 - Relay
 4 Add-on: DSQC1031 - Digital

Device Information

Name: Safe_Scalable_IO
 IP Address: 192.168.125.131
 Safety Network Number: 4B54_02A5_985B

Create Signals

Create Signals: Yes
 Prefix: Safe_Scalable_IO

Back Finish Cancel

xx2400001428

Select Finish.

- 7 The I/O devices are added to the I/O project and can now be configured. See [Configuring Scalable I/O devices using I/O Engineering on page 58](#).
- 8 Restart the controller.

Updating I/O device selections

The I/O devices that were selected at creation can be modified.

**Note**

Always attach or remove I/O devices from the right side of the base I/O device, otherwise the optical link is broken.

- 1 In the **Controller** tab in RobotStudio, select **I/O Engineering**.
- 2 In the **Configuration** browser, right-click **Scalable I/O** and select **Edit**.


Continues on next page

4 Software commissioning

4.3.1 Offline configuration

Continued

- 3 In the **Build Your Device** dialog, remove or add add-on devices:

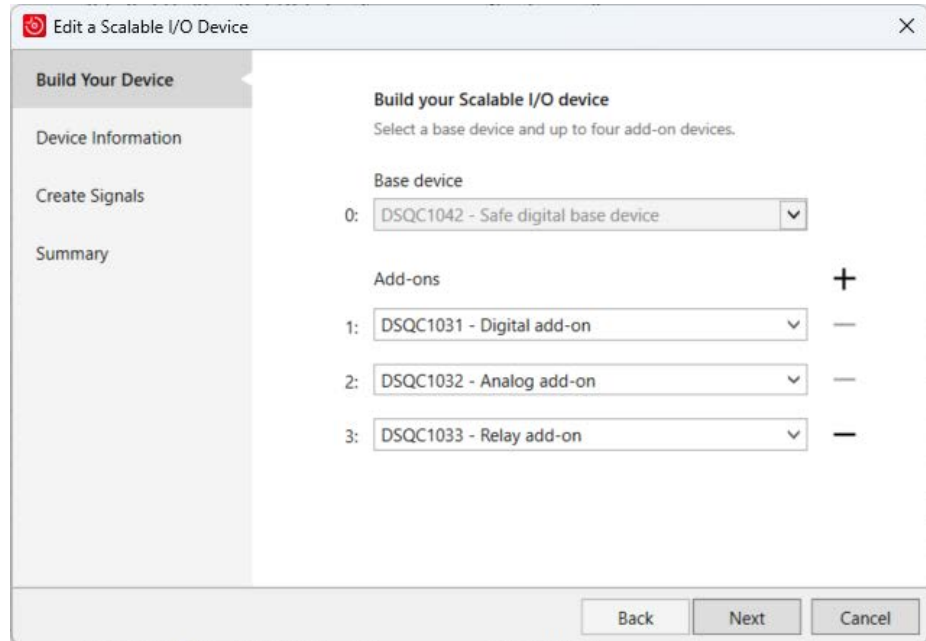

The screenshot shows the 'Edit a Scalable I/O Device' dialog box with the 'Build Your Device' tab selected. The dialog has a sidebar with four tabs: 'Build Your Device', 'Device Information', 'Create Signals', and 'Summary'. The main area is titled 'Build your Scalable I/O device' and contains the following fields:

- Base device:** A dropdown menu with 'DSQC1042 - Safe digital base device' selected.
- Add-ons:** A section with a '+' icon and three dropdown menus:
 - 1: 'DSQC1031 - Digital add-on' with a '-' icon.
 - 2: 'DSQC1032 - Analog add-on' with a '-' icon.
 - 3: 'DSQC1033 - Relay add-on' with a '-' icon.

At the bottom of the dialog are three buttons: 'Back', 'Next', and 'Cancel'.

xx2400000712




Note

It is not possible to change the previously selected base device.

Select **Next**.

- 4 In the **Device Name and IP** dialog, update the device name and/or the IP address:

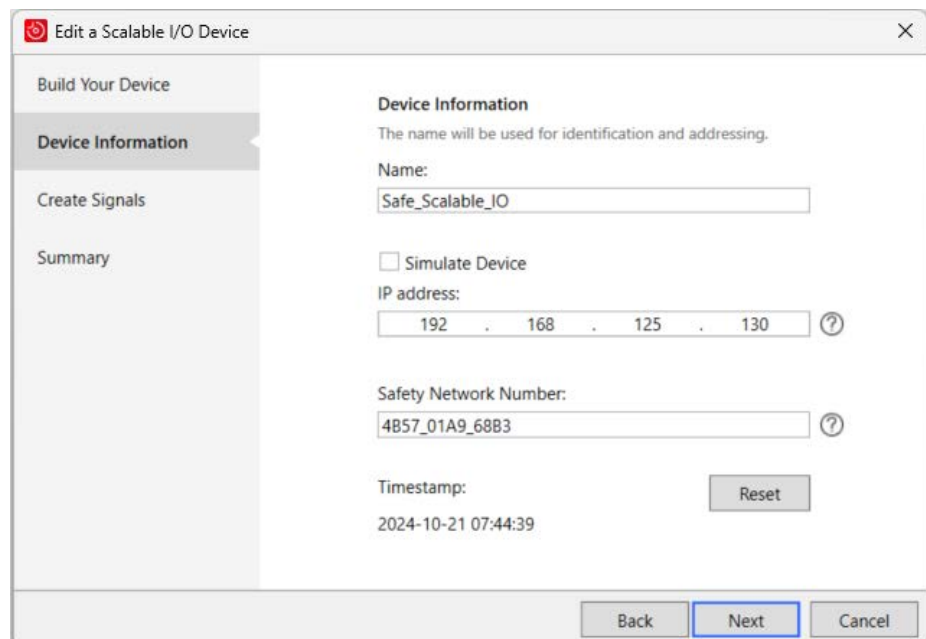

The screenshot shows the 'Edit a Scalable I/O Device' dialog box with the 'Device Information' tab selected. The dialog has a sidebar with four tabs: 'Build Your Device', 'Device Information', 'Create Signals', and 'Summary'. The main area is titled 'Device Information' and contains the following fields:

- Name:** A text input field with 'Safe_Scalable_IO' entered.
- Simulate Device:** An unchecked checkbox.
- IP address:** A text input field with '192 . 168 . 125 . 130' entered and a '?' icon.
- Safety Network Number:** A text input field with '4B57_01A9_68B3' entered and a '?' icon.
- Timestamp:** A text input field with '2024-10-21 07:44:39' entered and a 'Reset' button.


At the bottom of the dialog are three buttons: 'Back', 'Next', and 'Cancel'.

xx2400000713

Select **Next**.

Continues on next page

5 In the **Signal Prefix** dialog, update the name prefix:

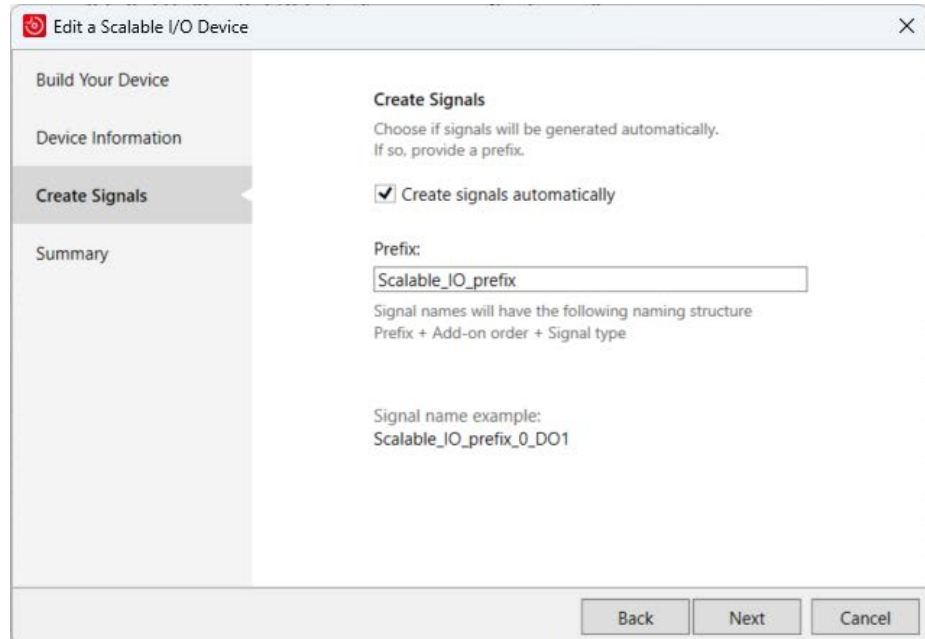

xx2400000714



Note

If no name prefix is defined, no signals will be added to the configuration.

Select **Add**.

- 6 The I/O project is updated.
- 7 Restart the controller.

Configure the Scalable I/O properties

- 1 In the **Controller** tab in RobotStudio, select **I/O Engineering**. The **I/O Engineering** tab is displayed.
- 2 In the **Configuration** browser, select **Scalable_IO**.

Continues on next page

4 Software commissioning

4.3.1 Offline configuration

Continued

3 In the **Properties** browser, you can configure the following:

Properties	
Device Catalogue	
Search	
General	
Name	Scalable_I/O
Identification Label	ABB Scalable I/O Device
Connected to Industrial Ne...	EtherNetIP
Vendor Name	ABB Robotics
Product Name	DSQC1030
Vendor ID	75
Product Code	29
Device Type	12
Major Revision	0
Minor Revision	0
Compatibility	<input type="radio"/> Yes <input checked="" type="radio"/> No
Output Size (bytes)	15
Input Size (bytes)	15
System	
Trust Level	DefaultTrustLevel
Simulated	<input type="radio"/> Yes <input checked="" type="radio"/> No
State when System Startup	Activated
Network	
Address	192 . 168 . 125 . 100

xx240000715

Parameter	Description	Allowed values
Name	Enter the name to be used for the device.	A string with maximum 32 characters.
Identification Label	This parameter is an optional way to provide a label that will help the operator to identify the device.	A string with maximum 80 characters.
Compatibility	This parameter makes it possible to install devices that can emulate the exact device.	
Trust Level	Select an existing trust level that defines the behavior for external devices at different execution situations in the robot controller. <i>See Application manual - I/O Engineering for more information about how to create trust levels.</i>	
Simulated	Select Yes or No , indicating if the industrial network and all its connected I/O devices should be treated as simulated.	The default value is No.

Continues on next page

Parameter	Description	Allowed values
Address	Enter the IP address for the device.	Valid range for Scalable I/O: 192.168.125.100-129 Valid range for Safe Scalable I/O: 192.168.125.130-139

- 4 Save the configuration. See *Application manual - I/O Engineering* for more information.

Configure the safe Scalable I/O properties

- 1 In the **Controller** tab in RobotStudio, select **I/O Engineering**. The **I/O Engineering** tab is displayed.
- 2 In the **Configuration** browser, select **Safe_Scalable_IO**.

4 Software commissioning

4.3.1 Offline configuration

Continued

3 In the **Properties** browser, you can configure the following:

The screenshot shows the 'Properties' browser window for a device catalogue entry. The window is titled 'Properties Device Catalogue'. It has a search bar at the top. The main content is organized into several sections:

- General:** Name (Safe_Scalable_IO), Identification Label (ABB Safe Scalable I/O Device), Connected to Industrial Ne... (EtherNet/IP), Vendor Name (ABB Robotics), Product Name (DSQC1042), Vendor ID (75), Product Code (29), Device Type (999), Major Revision (2), Minor Revision (5), Compatibility (Yes selected).
- System:** Trust Level (DefaultTrustLevel), Simulated (Yes selected), State when System Startup (Activated).
- Network:** Address (192 . 168 . 125 . 130).
- Ethernet IP:** Output Size (bytes) (12), Input Size (bytes) (16), Safe Device (True), Safe Input Connection (Safe_Scalable_IO_Input), Safe Output Connection (Safe_Scalable_IO_Output), Standard Connection (Safe_Scalable_IO_Standard).
- Safety Parameters:** Node ID (C0A87D82), Safety Network Number (4B12_02CD_273F), SCID (2F7C2FF1), SCID Date Time (2024-08-13 15:10:12), Time Coordination Message Multiplier (5), Timeout Multiplier (2), Max Fault (2).

xx2400000731

Parameter	Description	Allowed values
Name	Enter the name to be used for the device.	A string with maximum 32 characters.
Identification Label	This parameter is an optional way to provide a label that will help the operator to identify the device.	A string with maximum 80 characters.

Continues on next page

Parameter	Description	Allowed values
Compatibility	This parameter makes it possible to install devices that can emulate the exact device.	
Trust Level	Select an existing trust level that defines the behavior for external devices at different execution situations in the robot controller. <i>See Application manual - I/O Engineering for more information about how to create trust levels.</i>	
Simulated	Select Yes or No , indicating if the industrial network and all its connected I/O devices should be treated as simulated.	The default value is No.
Address	Enter the IP address for the device.	
Safety network number	Enter a unique safety network number for each safety network or safety sub-net.	
Time coord msg multip	Time coord msg multip is the minimum number of 128 uS increments it could take for a time coordination message to traverse from the consumer to the producer.	Default: 2.
Timeout multiplier	The Timeout multiplier can either be used to: calculate the Network Time Expectation. determine the number of ping intervals to wait without Correction before declaring a connection fault.	Default: 2.
Max fault	Number of erroneous packets within one hour after which a connection is closed. Used by both producers and consumers.	Fixed value 2.

- 4 Save the configuration. See *Application manual - I/O Engineering* for more information.

Configure the standard connection properties

- 1 In the **Controller** tab in RobotStudio, select **I/O Engineering**. The **I/O Engineering** tab is displayed.
- 2 In the **Configuration** browser, select **Standard Connection**.


Continues on next page

4 Software commissioning



4.3.1 Offline configuration

Continued

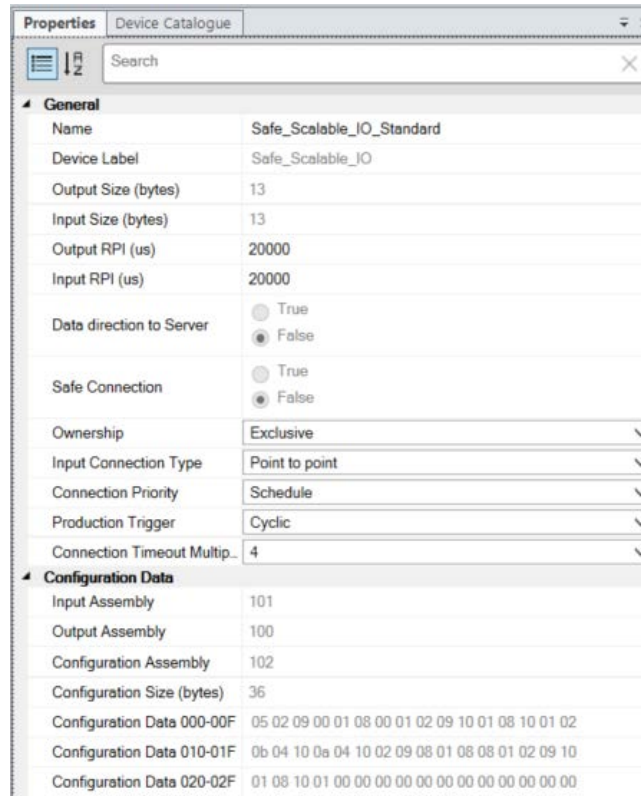

3 In the **Properties** browser, you can configure the following:



xx240000716

Parameter	Description	Allowed values
Output RPI	<p><i>Output RPI</i> (Originator to Target Request Packet Interval) is the time between I/O packets from the scanner to the I/O device.</p> <p>Use this parameter to decide at which interval the scanner shall produce output data to the I/O device.</p> <p>The Request Packet Interval is specified in micro seconds.</p> <p> Note</p> <p>In case of connection problems, it is recommended to increase the Connection Timeout Multiplier.</p>	The minimum limit is 2000 and maximum limit is 500000.
Input RPI	<p><i>Input RPI</i> (Target to Originator Request Packet Interval) is the time between I/O packets from the I/O device to the scanner.</p> <p>Use this parameter to decide at which interval the scanner shall consume input data from the I/O device.</p> <p>The Request Packet Interval is specified in micro seconds.</p> <p> Note</p> <p>In case of connection problems, it is recommended to increase the Connection Timeout Multiplier.</p>	The minimum limit is 2000 and maximum limit is 500000.

Continues on next page

Parameter	Description	Allowed values
Data direction to Server	Indicates the direction of the data flow for a connection, for example input or output data.	
Safe Connection	Indicates that this connection is a safety connection.	
Ownership	<p>The <i>Ownership</i> parameter specifies how the I/O connection shall act between the scanner and the I/O device. There are three different types of Ownership:</p> <ul style="list-style-type: none"> • Exclusive Owner: An I/O connection where the data of an I/O device can be controlled only by one scanner. • Input Only: An I/O connection where only the scanner can receive input data from an I/O device. There is no output data. • Listen Only: An I/O connection where only the scanner can receive input data from an I/O device. This type of <i>Ownership</i> can only be attached to a connection of type; Exclusive Owner or Input Only. If this underlying connection closes, then the connection with Ownership of type; Listen Only will also be closed. There is no output data. <p> Note</p> <p>Some EtherNet/IP devices might not support the Input Only connection.</p>	Allowed values are Exclusive Owner, Input Only, or Listen Only.
Input Connection Type	<p>The <i>Input Connection Type</i> parameter specifies how I/O data is sent from the I/O device to the scanner. There are two different connection types:</p> <ul style="list-style-type: none"> • Point-to-point (Unicast): A connection where the data is sent from one point to another point. In this case there is just one sender and one receiver. • Multicast: A connection where the data is sent from one or more points to a set of other points. In this case there is one sender and multiple receivers. <p> Note</p> <p>Some EtherNet/IP I/O devices might not support Point-to-point as input connection type.</p>	
Connection Priority	The <i>Connection Priority</i> parameter specifies how I/O data is prioritized on the network. Network priority is accomplished by using Quality of Service (QoS) mechanisms in the device.	Allowed values are Low, High, Schedule, Urgent.
Production Trigger	Select Change of State or Cyclic indicating the type of I/O connection to be used.	
Connection Timeout Multiplier	The Connection Timeout Multiplier can either be used to: calculate the Network Time Expectation. determine the number of ping intervals to wait without Correction before declaring a connection fault.	

Continues on next page

4 Software commissioning

4.3.1 Offline configuration


Continued

Parameter	Description	Allowed values
Production Inhibit Time	Production Inhibit Time is used together with the production trigger Change of State indicating the frequency with which a signal change can occur. This value is calculated as Request Packet Interval (RPI) divided by 4.	

- 4 Save the configuration. See *Application manual - I/O Engineering* for more information.

Configure the safe input connection properties


- 1 In the **Controller** tab in RobotStudio, select **I/O Engineering**. The **I/O Engineering** tab is displayed.
- 2 In the **Configuration** browser, select **Safe Input Connection**.
- 3 In the **Properties** browser, you can configure the following:

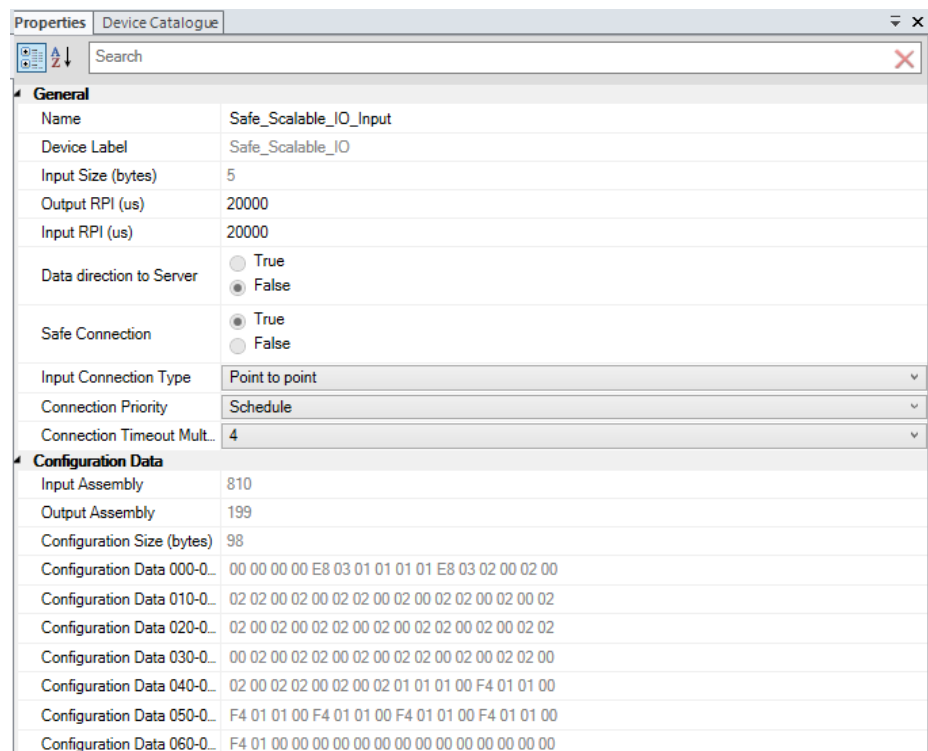

xx2400001417

Parameter	Description	Allowed values
Name	Enter the name to be used for the device.	A string with maximum 32 characters.

Continues on next page

Parameter	Description	Allowed values
Input RPI	<p><i>Input RPI</i> (Target to Originator Request Packet Interval) is the time between I/O packets from the I/O device to the scanner.</p> <p>Use this parameter to decide at which interval the scanner shall consume input data from the I/O device.</p> <p>The Request Packet Interval is specified in micro seconds.</p> <p> Note</p> <p>In case of connection problems, it is recommended to increase the Connection Timeout Multiplier.</p>	The minimum limit is 6000 and maximum limit is 100000.
Data direction to Server	Indicates the direction of the data flow for a connection, for example input or output data.	
Safe Connection	Indicates that this connection is a safety connection.	
Connection Priority	The <i>Connection Priority</i> parameter specifies how I/O data is prioritized on the network. Network priority is accomplished by using Quality of Service (QoS) mechanisms in the device.	Allowed values are Low, High, Schedule, Urgent.

- 4 Save the configuration. See *Application manual - I/O Engineering* for more information.

Configure the safe output connection properties

- 1 In the **Controller** tab in RobotStudio, select **I/O Engineering**. The **I/O Engineering** tab is displayed.
- 2 In the **Configuration** browser, select **Safe Output Connection**.

4 Software commissioning

4.3.1 Offline configuration

Continued

3 In the Properties browser, you can configure the following:

The screenshot shows a 'Properties' window for a device named 'Safe_Scalable_IO_Output'. The window is divided into two main sections: 'General' and 'Configuration Data'.


General Section:

- Name: Safe_Scalable_IO_Output
- Device Label: Safe_Scalable_IO
- Output Size (bytes): 1
- Output RPI (us): 20000
- Input RPI (us): 20000
- Data direction to Server: True, False
- Safe Connection: True, False
- Input Connection Type: Point to point
- Connection Priority: Schedule
- Connection Timeout Mult.: 4

Configuration Data Section:

- Input Assembly: 199
- Output Assembly: 800
- Configuration Size (bytes): 98
- Configuration Data 000-0: 00 00 00 00 E8 03 01 01 01 01 E8 03 02 00 02 00
- Configuration Data 010-0: 02 02 00 02 00 02 00 02 00 02 00 02 00 02 00 02
- Configuration Data 020-0: 02 00 02 00 02 02 00 02 00 02 00 02 00 02 00 02
- Configuration Data 030-0: 00 02 00 02 02 00 02 00 02 02 00 02 00 02 00 02
- Configuration Data 040-0: 02 00 02 02 00 02 00 02 01 01 01 00 F4 01 01 00
- Configuration Data 050-0: F4 01 01 00 F4 01 01 00 F4 01 01 00 F4 01 01 00
- Configuration Data 060-0: F4 01 00 00 00 00 00 00 00 00 00 00 00 00 00

xx2400001416

Parameter	Description	Allowed values
Name	Enter the name to be used for the device.	A string with maximum 32 characters.
Output RPI	<p><i>Output RPI</i> (Originator to Target Request Packet Interval) is the time between I/O packets from the scanner to the I/O device.</p> <p>Use this parameter to decide at which interval the scanner shall produce output data to the I/O device.</p> <p>The Request Packet Interval is specified in micro seconds.</p> <p> Note</p> <p>In case of connection problems, it is recommended to increase the Connection Timeout Multiplier.</p>	The minimum limit is 6000 and maximum limit is 100000.
Data direction to Server	Indicates the direction of the data flow for a connection, for example input or output data.	
Safe Connection	Indicates that this connection is a safety connection.	
Connection Priority	The <i>Connection Priority</i> parameter specifies how I/O data is prioritized on the network. Network priority is accomplished by using Quality of Service (QoS) mechanisms in the device.	Allowed values are Low, High, Schedule, Urgent.

Continues on next page

- 4 Save the configuration. See *Application manual - I/O Engineering* for more information.

4 Software commissioning

4.3.2 Online configuration

4.3.2 Online configuration

General

This section describes the working procedure when configuring ABB Scalable I/O devices online in I/O Engineering. For general information about I/O Engineering, see *Application manual - I/O Engineering*.

For information about configuration using the FlexPendant, see [Configuring Scalable I/O devices using the FlexPendant on page 83](#).




Note

The **Safety services grant** is mandatory for configuration of safety digital base devices.

Identifying an I/O device

When there are multiple I/O devices in the controller, it is important to identify the physical I/O device for any device update, signal connection or troubleshooting.

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 In **I/O Engineering**, select **Live** to access the **Live configuration**.
- 3 In the **I/O System tree**, right-click the target I/O device to be identified and select **Identify**.
- 4 The window **Identifying device** is displayed:

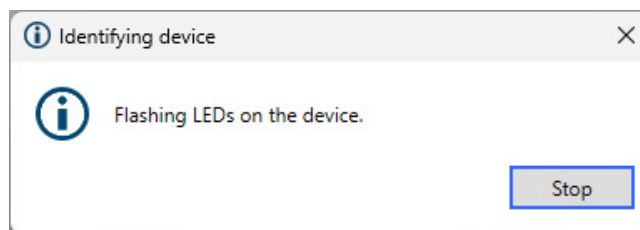

xx2400001315

The PWR (Power), MS (Module status) and NS (Network Status) LED of the physical base I/O device flashes to identify the I/O device in the controller. Select **Stop** when the device has been identified to stop the flashing LEDs.



Note

For DSQC1042, Safety digital base, only the PWR (Power) LED flashes to identify the I/O device in the controller.

Continues on next page

Pairing I/O devices with a controller

When a base I/O device is damaged, broken or faulty, it should be replaced. The new I/O device must be paired with the controller.


**Note**

If a faulty add-on I/O device is replaced with another add-on I/O device of the same type, there is no need to update the configuration of the base I/O device.

**CAUTION**

The replacement of safety digital base requires that the replacement device be configured properly and operation of the replacement device shall be user verified.

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 In **I/O Engineering**, select **Live** to access the **Live configuration**.
- 3 A new I/O device is connected to the private network. The detected I/O device appears in the **I/O System tree**.
- 4 Right-click the new I/O device and select **Pair**.
- 5 The **Pair Scalable I/O** dialog is displayed. Select **Pair device**.

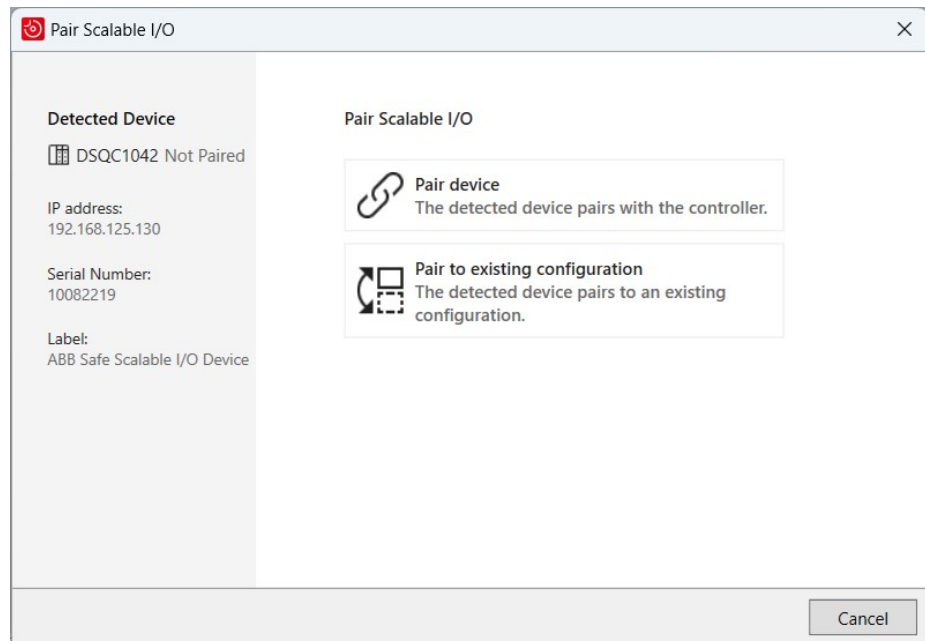

xx2400001309

Continues on next page

4 Software commissioning

4.3.2 Online configuration

Continued

6 In the Device Information view, complete the following fields:

Pair Scalable I/O

Device Information

Signal Prefix

Summary

Device Information
The name will be used for identification and addressing.

Name:
ABB_Scalable_IO

Safety Network Number:
4B22_032B_D8F4

Generate

Timestamp:
29-08-2024 14:46:45.236

< Back Next > Cancel

xx2400001310

- **Name:** Select a name for the new I/O device.
- **Safety Network Number:** Enter a unique safety network number for each safety network or safety sub-net.



Note

Only applicable for safety digital base devices.



Tip

Select **Generate** to automatically retrieve a safety network number that is based on the current time stamp (displayed below).

Continues on next page

7 In the Signal Prefix view, complete the following fields:

The screenshot shows the 'Pair Scalable I/O' configuration window with the 'Signal Prefix' tab selected. The 'Create Signals' section is active, with the checkbox 'Create signals automatically' checked. The 'Prefix' text box contains the value 'TestDevice'. Below the text box, there is explanatory text: 'Signal names will have the following naming structure Prefix + Add-on order + Signal type' and a 'Signal name example: TestDevice_0_DO1'. At the bottom of the window, there are three buttons: '< Back', 'Next >', and 'Cancel'.

xx2400001311

- **Create Signals:** Select if signals should be generated automatically. If yes, also complete **Prefix**.
- **Prefix:** Enter the signal prefix to be used in signal names. Not mandatory.

8 The Summary view is displayed. Select Restart controller and then Apply.

The screenshot shows the 'Pair Scalable I/O' configuration window with the 'Summary' tab selected. The 'Summary' section displays the following information: 'Device Information' (Name: ABB_Scalable_IO, SNN: 4B22_032B_D8F4) and 'Signal Prefix' (Create Signals: Yes, Prefix: TestDevice). A yellow warning box with a triangle icon contains the text 'The controller needs a restart for changes to take effect'. Below the warning box, the checkbox 'Restart controller' is checked. At the bottom of the window, there are three buttons: '< Back', 'Apply', and 'Cancel'.

xx2400001312

9 The I/O device is now paired and the configuration is written to the controller.

Continues on next page

4 Software commissioning

4.3.2 Online configuration

Continued

Pairing I/O devices with an existing configuration


Existing ABB Scalable I/O configurations found on the controller can be inherited by new ABB Scalable I/O devices. This means that devices can be created in the controller ahead of time without access to the physical device. This also extends to simulated devices that also can be turned into physical devices by configuring a new ABB Scalable I/O device using the simulated device configuration.



CAUTION

Before installing a new safe digital base into the safety network, the user must ensure that any pre-existing configuration is cleared from the new device.

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 In **I/O Engineering**, select **Live** to access the **Live configuration**.
- 3 A new I/O device is connected to the private network. The detected I/O device appears in the **I/O System tree**.
- 4 Right-click the new I/O device and select **Pair**.
- 5 The **Pair Scalable I/O** dialog is displayed. Select **Pair to existing configuration**.

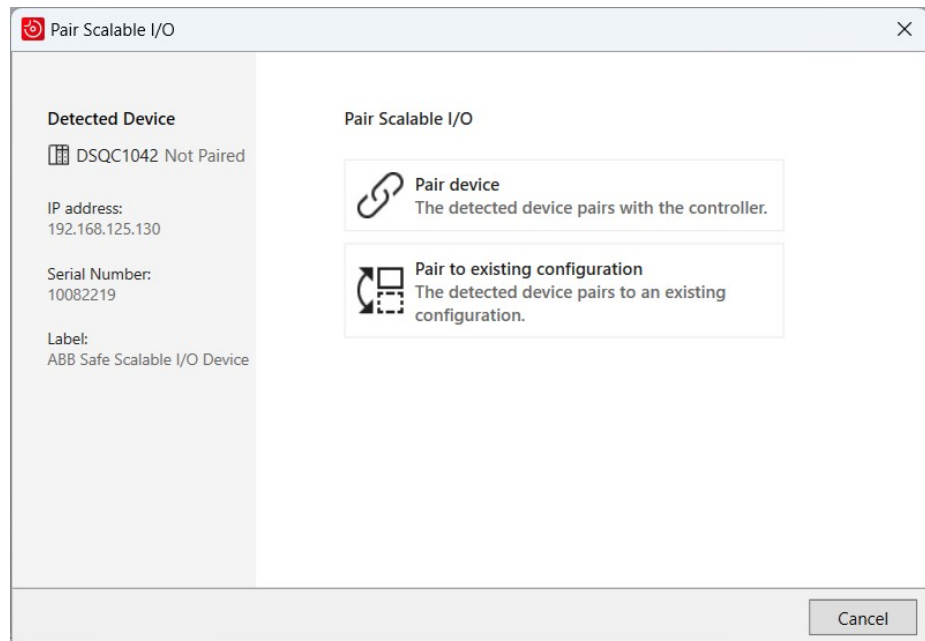

xx2400001309

Continues on next page

- 6 In the **Select Device to Replace** view, select the **Device** that should be replaced and then **Next**.

The screenshot shows a dialog box titled "Pair Scalable I/O" with a close button (X) in the top right corner. The dialog is divided into two main sections. On the left, there is a vertical sidebar with two tabs: "Select Device to Replace" (which is currently selected and highlighted) and "Summary". The main area of the dialog contains the following text: "Select Device to Replace" followed by "The detected device will replace it and acquire its configuration." Below this text is a label "Device:" followed by a dropdown menu that currently displays "TestDevice". At the bottom of the dialog, there are three buttons: "< Back" (highlighted with a blue border), "Next >", and "Cancel".

xx2400001313

- 7 The **Summary** view is displayed. Select **Restart controller** and then **Apply**.

The screenshot shows the same "Pair Scalable I/O" dialog box, but now the "Summary" tab is selected in the sidebar. The main area of the dialog contains the following text: "Summary" followed by "Select Device to Replace" and "Device: TestDevice". Below this text is a checkbox labeled "Restart controller" which is currently unchecked. At the bottom of the dialog, there are three buttons: "< Back", "Apply" (highlighted with a blue border), and "Cancel".

xx2400001314

- 8 The I/O device is now paired and the configuration is written to the controller.

Continues on next page

4 Software commissioning

4.3.2 Online configuration

Continued

Deactivating an I/O device

Use this function to deactivate an I/O device.




Note

Prerequisites for deactivating an I/O device:

- Connect as Local Client
- Manual mode

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 In **I/O Engineering**, select **Live** to access the **Live configuration**.
- 3 In the **I/O System** tree, right-click the I/O device to be deactivated and select **Deactivate**.

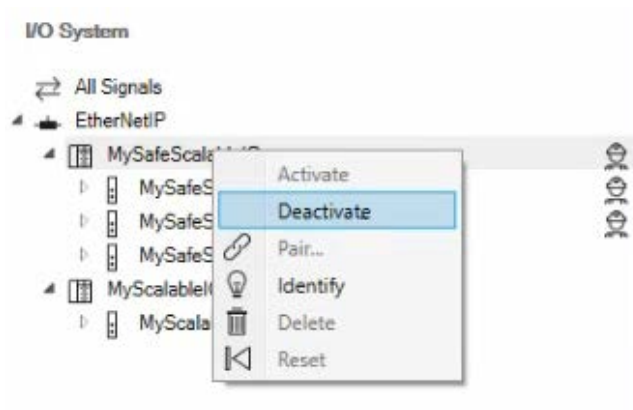

xx2400001597

- 4 The device is now deactivated.

Removing an I/O device configuration

Use this function to remove a configuration.



Note


Prerequisites for removing an I/O device configuration:

- Manual mode
- The unit must be deactivated
- Write access

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 In **I/O Engineering**, select **Live** to access the **Live configuration**.

Continues on next page

- 3 In the **I/O System** tree, right-click the I/O device to be removed and select **Delete**.

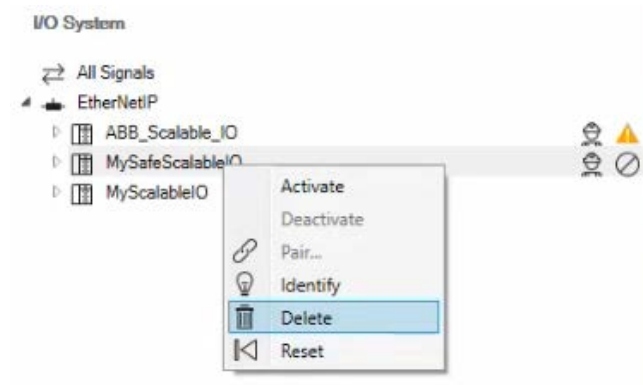

xx2400001596

- 4 The **Delete Configuration** dialog is displayed. Select **Delete**.
The pairing between the controller and device will be removed and the configuration will be deleted from the controller.

**Tip**

Select **Reset device** if the device should be reset to factory default.

- 5 Restart the controller.

Resetting an I/O device configuration

Use this function to reset the device to factory default. All active configurations including safety will be removed from the device. The controller configuration will, however, not be affected.

**Note**

Prerequisites for resetting an I/O device configuration:

- Manual mode
- If running, the unit must first be deactivated
- Write access

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 In **I/O Engineering**, select **Live** to access the **Live configuration**.

Continues on next page

4 Software commissioning

4.3.2 Online configuration

Continued

- 3 In the **I/O System** tree, right-click the I/O device to be reset to factory default and select **Reset**.



xx2400001595

- 4 The **Reset device** dialog is displayed. Select **Reset**.

The device and its settings will be reset, but the controller configuration will not be affected.

4.4 Configuring Scalable I/O devices using the FlexPendant

General

This section describes the recommended working procedure when installing and configuring ABB Scalable I/O devices using the FlexPendant.



Note

The system should be in manual mode while configuring or updating the I/O device using the FlexPendant.



Note


Safety digital base devices cannot be configured using the FlexPendant.

Configuring an I/O device

When a base I/O device and an add-on I/O device are connected to the controller, these must be configured.

Use this procedure to configure a new I/O device on the FlexPendant.

- 1 Start the FlexPendant and connect to the OmniCore controller.
- 2 On the start screen, tap **I/O**, and then select **I/O Devices** from the menu.
- 3 Select the I/O device and tap **Configure**.

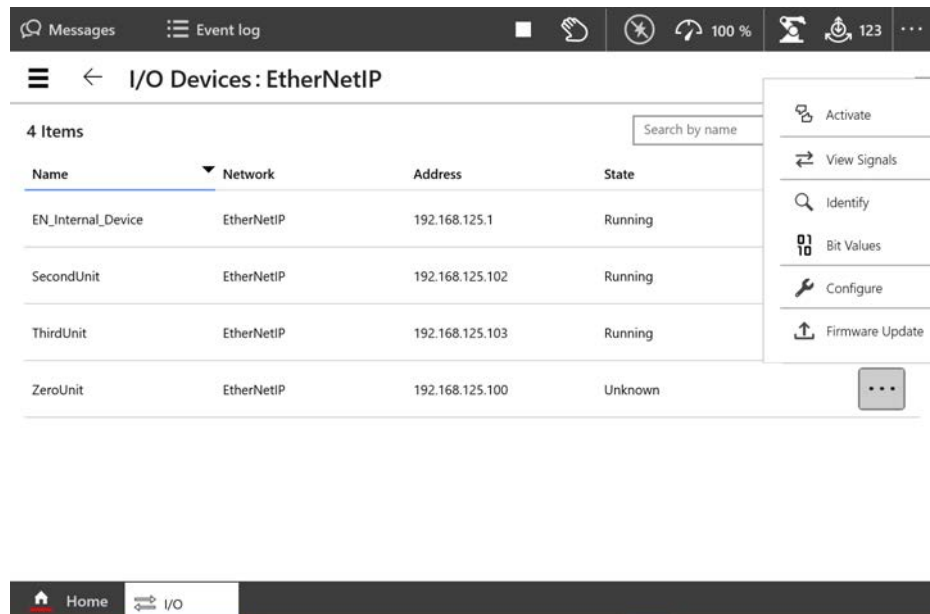

xx2100000102

Continues on next page

4 Software commissioning

4.4 Configuring Scalable I/O devices using the FlexPendant

Continued

- 4 The I/O Modernization window is displayed.

Messages Event log 100 % 123

I/O Modernization Cancel Apply

Connected Device

Name: ZeroUnit
Address: 192.168.125.100
Serial No: 7597780
Status: Configuration required. LED flashing on device for identification.
Label: ABB Scalable I/O Device

Configuration

Configure New Device
ZeroUnit

Update device
SecondUnit

Create I/O Signals

Home I/O

xx2100000101

Enter the device name in the **Configure New Device** option, and then tap **Apply**.

- 5 Tap **OK** to the question **The changes will not take effect until the controller is restarted. Do you want to restart now?**

Updating an existing I/O device

When an add-on I/O device has been attached or removed, the I/O configuration of the base I/O device must be updated.




Note

Always attach or remove I/O devices from the right side of the base I/O device, otherwise the optical link is broken.

- 1 On the start screen, tap **I/O**, and then select **I/O Devices** from the menu.
- 2 Select the I/O device to be updated and tap **Configure**.

Continues on next page

3 The I/O Modernization window is displayed.

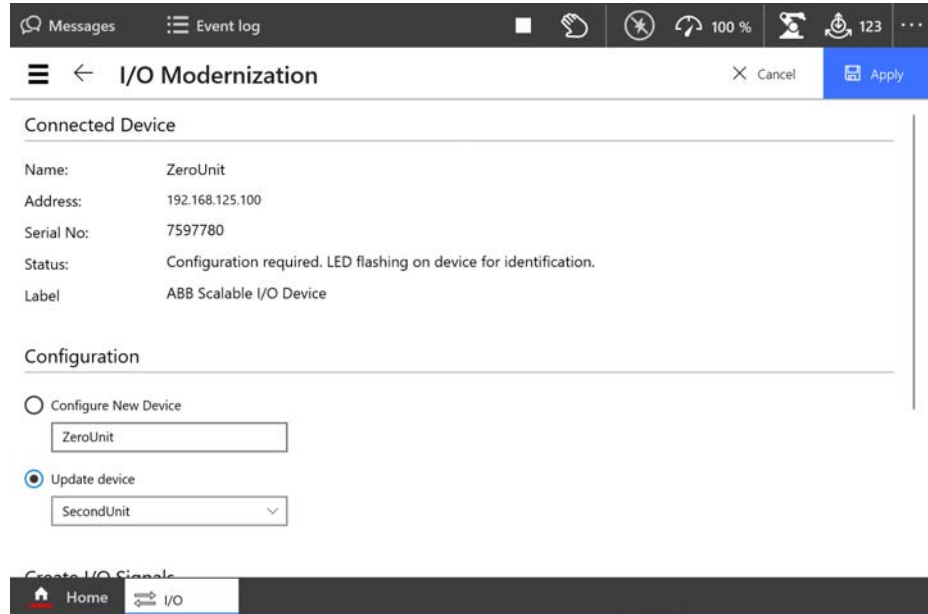

xx210000098

Enter the device name in the **Update device** option, and then tap **Apply**.

4 The I/O device is configured and a restart is required. Tap OK.

Identifying an I/O device

When there are multiple I/O devices in the controller, it is important to identify the physical I/O device for any device update, signal connection or troubleshooting.

- 1 On the start screen, tap **I/O**, and then select **I/O Devices** from the menu.
- 2 Select the I/O device to be identified and tap **Identify**.
- 3 The **Identify** window is displayed.

Identify

I/O Unit: ZeroUnit
MAC Address: 00:1a:85:f1:2e:f9

'PWR' and 'NS' LEDs will flash at target device.

OK

xx210000097

Tap **OK**.

4 Software commissioning

4.5 Configuring safety digital base devices

4.5 Configuring safety digital base devices

Prerequisites

The **Safety services** grant is mandatory for configuration of safety digital base devices.

Recommended work process

In order to use the Safety digital base device in your configuration, the following work process is recommended:

- Install the safety digital base device, see [Installing safety digital base devices](#).
- Configure the Safety digital base device (offline or online), see [Offline configuration](#) and [Online configuration](#). Offline configuration can be used if you do not have access to hardware, the Safety digital base device or the robot controller.



Note

When working with the Safety digital base device, the configuration tool will update and download a new safety configuration to the controller.

- After the configuration, the dual channels must be defined using CL logic, see [Setting up dual channel signals on page 87](#) and *Application manual - Functional safety and SafeMove* for instructions on how to define logic diagrams.
- Verify the parameters in the ABB Safety Configuration Report, see [Verifying safety parameters](#).



CAUTION

The user must confirm that all configuration data of the Safety digital base device was downloaded correctly by reading out all parameters from the module and visually inspect the content.

- Validate the configuration of the Safety digital base device according to the validation process as described in *Application manual - Functional safety and SafeMove*.



WARNING

All downloaded configurations must be validated by user testing before the installation can be regarded as safe. User testing is the means by which all downloads are validated.



WARNING

The total intended safety functionality applied by the originator must be confirmed at commissioning of the Safety digital base device.

Continues on next page



CAUTION

After the Safety digital base device is configured, the user must check that ownership has been assigned to the right originator.

- When the set-up and configuration is done, see *Application manual - Functional safety and SafeMove* for instructions on how to work with the safety configuration.

Configure safety digital base devices via I/O Engineering

Safety digital base devices are configured in the same way as the standard digital base devices. See [Configuring Scalable I/O devices using I/O Engineering on page 58](#).

Configure safety digital base devices via FlexPendant



Note

Safety digital base devices cannot be configured using the FlexPendant.

Setting up dual channel signals

The safety digital base device is configured with dual channels. A dual channel is comprised of two signals, both electrically and in the software. In the safety digital base, there are two pairs for output and six pairs for input.

Output signals

There are two dual channel pairs for output signals. The four output signals are paired in the following way:

Dual channel pair	DSQC1042
1 (CH1)	SDO_1_+ SDO_1_-
	SDO_2_+ SDO_2_-
2 (CH2)	SDO_3_+ SDO_3_-
	SDO_4_+ SDO_4_-



Note

To write a dual channel output signal, both signals in the pair must be set to high in the safety controller. This is defined with CL-copy logic.

See *Application manual - Functional safety and SafeMove* for instructions on how to define logic diagrams.

Continues on next page

4 Software commissioning

4.5 Configuring safety digital base devices

Continued

Input signals

There are six dual channel pairs for input signals. The twelve input signals are paired in the following way:

Dual channel pair	DSQC1042
1 (CH1)	SDI_1_+
	SDI_1_-
	SDI_2_+
	SDI_2_-
2 (CH2)	SDI_3_+
	SDI_3_-
	SDI_4_+
	SDI_4_-
3 (CH3)	SDI_5_+
	SDI_5_-
	SDI_6_+
	SDI_6_-
4 (CH4)	SDI_7_+
	SDI_7_-
	SDI_8_+
	SDI_8_-
5 (CH5)	SDI_9_+
	SDI_9_-
	SDI_10_+
	SDI_10_-
6 (CH6)	SDI_11_+
	SDI_11_-
	SDI_12_+
	SDI_12_-



Note

To read a dual channel input signal, it is enough to read any signal in the pair. They follow each other.

Verifying safety parameters

When configuring the Safety digital base device, a set of parameters are written to the safety controller configuration and can be viewed in the ABB Safety Configuration Report.

- 1 In the **Controller** tab in RobotStudio, select **I/O Engineering**.
- 2 In the **I/O Engineering** tab, select **I/O Safety Report**.
- 3 The **ABB Safety Configuration Report**. is displayed.

Continues on next page

4 Verify the following parameters:

Parameter	Description	Values/Examples
Device name	The name that is defined during the device configuration.	Device name="ABBIO"
inSizeBits		inSizeBits="40"
outSizeBits		outSizeBits="8"
scid	The Safety Configuration identifier/Checksum is a constant that is written in the safety configuration when the button Apply is pressed.	scid="2F7C2FF1"
nodeld	The IP address of the device, defined in hexadecimal form. This is the IP address that is visible in the configuration.	nodeld="C0A87D84"
snn	A unique Safety Network Number is set during device configuration for each safety network or safety sub-net. The safety network number can either be defined manually, or be retrieved automatically based on the current time stamp.	snn="4B12_02CD_273F"
scidDateTime	A time stamp for the configuration which in combination with scid forms the signature. Is set when the button Apply is pressed.	scidDateTime="2021-08-12T17:02:59.359+02:00"
timeCoordinationMsgMultiplier		timeCoordinationMsgMultiplier="5"
timeoutMultiplier		timeoutMultiplier="2"
Signal name	Generated name: Device-Name_slotNo_Type+ix	Signal name="ABBIO_0_DO1"



CAUTION

If you choose to configure safety connections with **scid=0**, you are responsible for ensuring that originators and targets have the correct configurations.



CAUTION

The user should assign **snn** numbers for each safety network or safety sub-net that are unique system-wide.



CAUTION

The configuration signature, composed of **scid** and **scidDateTime**, should only be considered verified after user testing.

Continues on next page

4 Software commissioning

4.5 Configuring safety digital base devices

Continued



CAUTION

When configuring an originator with connection data and/or target configuration data, the data must be downloaded to the target so it can be tested and verified. Only then can SCIDs from the target be confirmed.

Troubleshooting safety digital base devices

Check group status signals

In the safety controller there are two group status signals, *SDIS* (DI_Status) and *SDOS* (DO_Status). The status signals indicate if errors are detected:

Reported status	Description
1	OK
0	ALARM

If a fault is detected, the status signal for the input/output channel will be set to 0 (ALARM). The signal will remain in status 0 for 1000 ms. This ensures that intermittent faults that only exist for a few milliseconds are latched long enough to be read by the controller.



Note

The reported output status for the dual output channel pair will go to ALARM if the outputs for the two signals from the controller/originator differ from each other, without any discrepancy delay.

The status will automatically be set to 1 (OK) when the following is true:

- the *Safety Input Latch Error Time* (1000 ms) has elapsed
- both inputs/outputs have been cleared
- the cause for the failure has been removed.

Check cables

If the status signal for the input/output channel is set to 0 (ALARM), perform the following checks:

- 1 Make sure that the cables are connected properly at both ends.
- 2 If the problem persists, replace the cables.

Reset safety configuration

When a safety digital base device has been configured and is running, and the safety configuration is reset, these steps must be followed in order to recover the device:

- 1 In the **Visual SafeMove** tab, select **Controller > Reset to factory settings** to reset the safety configuration. See also *Application manual - Functional safety and SafeMove*.
- 2 In **I/O Engineering**, select **Live** to access the **Live configuration**.

Continues on next page

In the **I/O System** tree, right-click the safety digital device and select **Deactivate**.

- 3 Right-click the safety digital device and select **Delete**.
- 4 When the configuration has been removed from the first device, a new device will be displayed in the list.
- 5 Right-click the new safety digital device and select **Configure Device**. See also [Configuring Scalable I/O devices using I/O Engineering on page 58](#).

4 Software commissioning

4.6 Firmware upgrade

4.6 Firmware upgrade


Upgrade firmware from RobotStudio



Note

Firmware upgrade is not available for safety digital base devices or for attached add-on devices.

- 1 Set the OmniCore controller in manual mode.
- 2 If the device is in the running state, deactivate Scalable I/O on the FlexPendant:
 - a On the start screen, tap I/O, and then select I/O Devices from the menu.
 - b Select the device and tap Deactivate.
- 3 Start RobotStudio and connect to the OmniCore controller.
- 4 Request write access.
- 5 In the I/O System tree, right-click the target I/O device and select **Upgrade**.

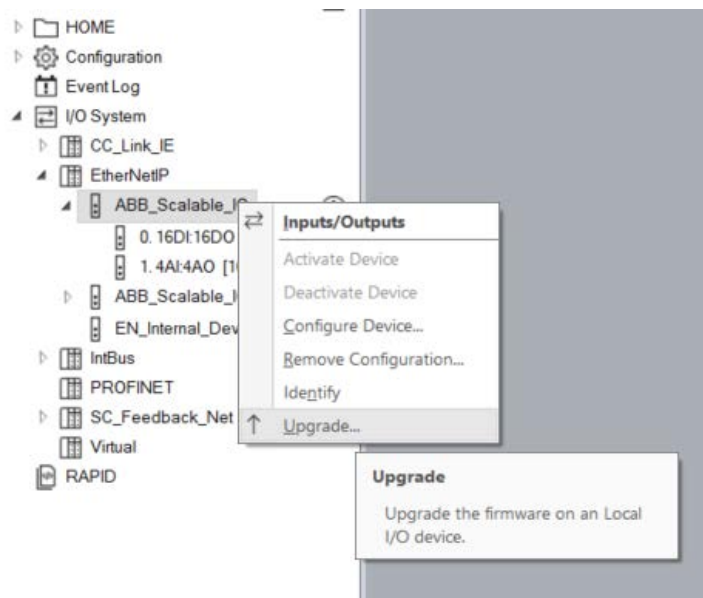

xx1900001181


- 6 The **Firmware Upgrade Local I/O Device** window is displayed.



Note

The **Firmware location** field displays the default firmware file. To select a new firmware file, click the ... button and browse to the folder with the new firmware file.

Continues on next page

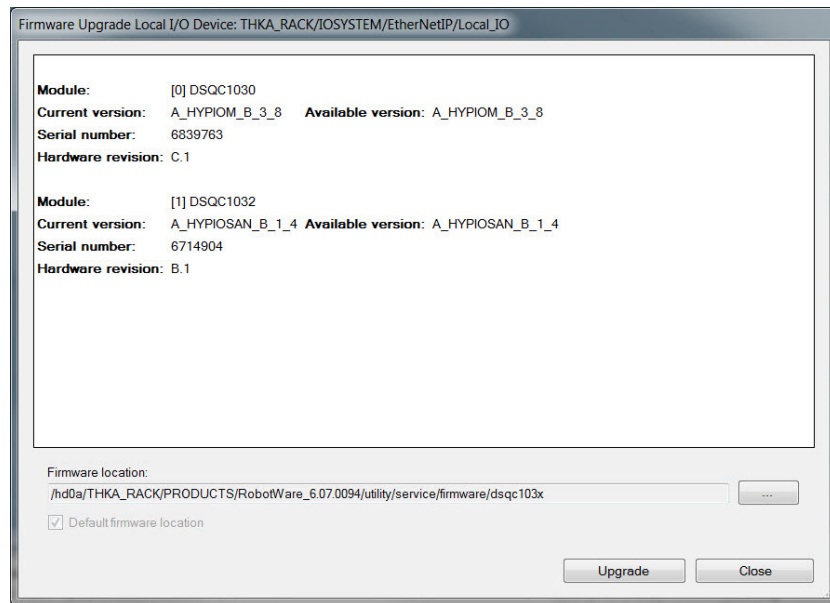

xx1800000143



Note

The **Upgrade** button is enabled only if a new version is detected either in the default firmware path or in a browsed path.

7 Click **Upgrade**.

The firmware is upgraded and a message is displayed.

Upgrade firmware from the FlexPendant



Note

Firmware upgrade is not available for safety digital base devices or for attached add-on devices.

- 1 Set the OmniCore controller in manual mode.
- 2 On the start screen, tap **I/O**, and then select **I/O Devices** from the menu.
- 3 If the I/O device is in the running state, select the device and tap **Deactivate**.
- 4 Select the I/O device and tap **Firmware Update**.



Note

Firmware upgrade is not possible if the state of the selected I/O device is **Running**.


Continues on next page

4 Software commissioning

4.6 Firmware upgrade

Continued

5 The I/O Modernization window is displayed.

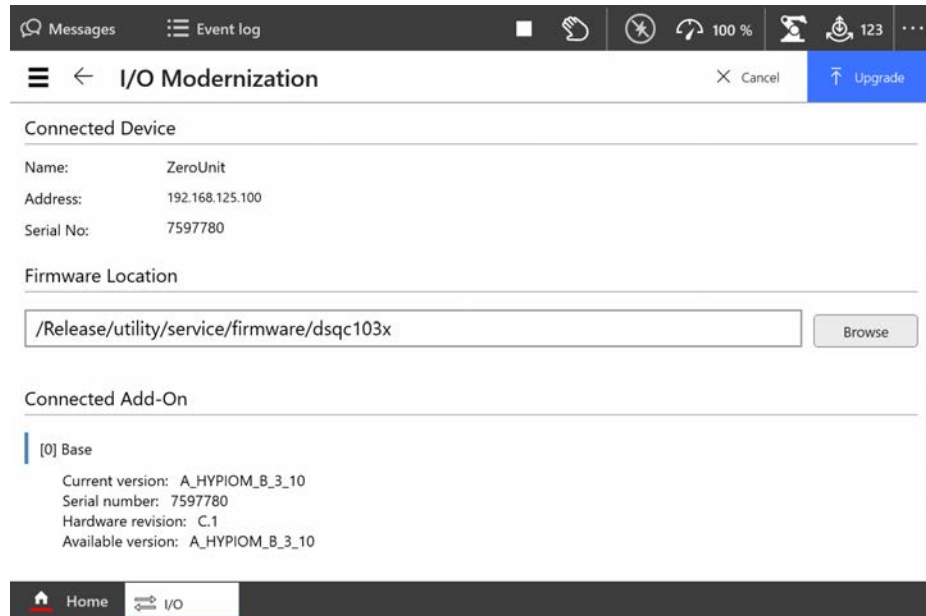

Note

The **Firmware Location** field displays the default firmware file. To select a new firmware file, tap **Browse**.

6 Tap **Upgrade**.

The firmware is upgraded and a message is displayed.



Note

The **Upgrade** button is enabled only if a new version is detected either in the default firmware path or in a browsed path.

5 Reference material

5.1 Analog input point object

Analog Input Point Object (Class Code: 0Ahex)

The Analog Input Point Object contains information of the analog inputs of the Scalable I/O system.

Inputs cause the base module to produce data on the network. Each analog input point uses a low pass filter and a hysteresis which can both be configured. The sampled value is first passed through the low pass filter and then through the hysteresis. After this, the value is stored to attribute 3 (Value).

Class attributes

Attribute ID (hex)	Access rule	NV	Attribute name	Data type	Default value	Description
1	Get	NV	Revision	U16	2	

Instance attributes

Attribute ID (hex)	Access rule	NV	Attribute name	Data type	Default value	Description
3	Get	V	Value	U16		0 to 4095
32	Set	V	Low Pass Filter Order	U16	3	0 The Low Pass Filter Order exponent can be set to 0 – 16 and the sample time is 1 ms.
33	Set	V	Hysteresis	U16	4	The hysteresis of each analog input point can be set between 0 and 4095. New values (after filtering) must be outside the hysteresis window in order for it to be transferred to attribute 3 (Value).

Services

Service code (hex)	Implemented		Service name	Description
	Class	Instance		
0E	YES	YES	Get Attribute Single	
10	NO	YES	Set Attribute Single	

This page is intentionally left blank

Index

A

adding I/O device, 58

C

Change of State, 55
coil neutralization, 53
connecting EtherNet/IP, 57
Cyclic, 55

D

deactivating I/O device, 80
DSQC1030, 18, 24
DSQC1031, 30
DSQC1032, 33
DSQC1033, 36

E

EtherNet/IP, 11
connecting, 57

F

features, 12
firmware upgrade, 92

I

I/O device, 11
identify I/O device, 74
industrial network

EtherNet/IP, 55
installing add-on device, 48
installing digital base device, 41
installing safety digital base devices, 45

L

LED

module status, 21, 28
network status, 22, 28
power, 21, 27, 30, 33, 36
test run, 23, 29

N

network security, 10

P

pair I/O device, 75, 78
Plug & Produce, 11

R

removing I/O device, 80
resetting I/O device, 81

S

Scalable I/O, 11

T

trust level, 64, 67

U

upgrade firmware, 92



ABB AB

Robotics & Discrete Automation

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

ABB AS

Robotics & Discrete Automation

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

ABB Inc.

Robotics & Discrete Automation

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics