
ROBOTICS

Application manual

Scalable I/O



Trace back information:
Workspace 23D version a12
Checked in 2023-12-06
Skribenta version 5.5.019

Application manual

Scalable I/O

RobotWare 7.13

Document ID: 3HAC070208-001

Revision: J

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2019-2023 ABB. All rights reserved.
Specifications subject to change without notice.

Table of contents

Overview of this manual	7
Network security	10
1 Introduction	11
2 Hardware overview	13
2.1 General system information	13
2.2 Base devices	18
2.2.1 Digital base device, DSQC1030	18
2.2.2 Safety digital base device, DSQC1042	24
2.3 Add-on devices	30
2.3.1 Digital add-on device, DSQC1031	30
2.3.2 Analog add-on device, DSQC1032	33
2.3.3 Relay add-on device, DSQC1033	36
3 Hardware installation	39
3.1 General installation information	39
3.2 Installing digital base devices	41
3.3 Installing safety digital base devices	45
3.4 Installing add-on devices	48
3.5 Coil neutralization	53
4 Software commissioning	55
4.1 Information about ABB Scalable I/O devices	55
4.2 Connecting the EtherNet/IP network	57
4.3 Configuring Scalable I/O devices using RobotStudio	58
4.4 Configuring Scalable I/O devices using the FlexPendant	69
4.5 Configuring safety digital base devices	72
4.6 Firmware upgrade	77
5 Reference material	81
5.1 Analog input point object	81
Index	83

This page is intentionally left blank

Overview of this manual

About this manual

This manual describes the scalable I/O devices and contains instructions for the configuration.



Note

It is the responsibility of the integrator to provide safety and user guides for the robot system.

Usage

This manual should be used during installation and configuration of the scalable I/O devices.



Note

Before any work on or with the robot is performed, the safety information in the product manual for the controller and manipulator must be read.

Who should read this manual?

This manual is intended for

- Personnel responsible for installations and configurations of industrial network hardware/software
- Personnel responsible for I/O system configuration
- System integrators

Prerequisites

The reader should have the required knowledge of

- Mechanical installation work
- Electrical installation work
- System parameters and how to configure them
- RobotStudio

References

Document references

Reference	Document ID
<i>Operating manual - RobotStudio</i>	3HAC032104-001
<i>Operating manual - OmniCore</i>	3HAC065036-001
<i>Operating manual - Integrator's guide OmniCore</i>	3HAC065037-001
<i>Product manual - OmniCore C30</i>	3HAC060860-001
<i>Product manual - OmniCore C90XT</i>	3HAC073706-001
<i>Product manual - OmniCore V250XT Type B</i>	3HAC087112-001

Continues on next page

Reference	Document ID
Product manual - OmniCore V400XT	3HAC081697-001
Technical reference manual - System parameters	3HAC065041-001
Technical reference manual - RAPID Instructions, Functions and Data types	3HAC065038-001
Application manual - Controller software OmniCore	3HAC066554-001
Product specification - OmniCore C line	3HAC065034-001
Product specification - OmniCore V line	3HAC074671-001
Application manual - EtherNet/IP Scanner/Adapter	3HAC066565-001

Revisions

Revision	Description
A	Released with RobotWare 7.0.
B	Released with RobotWare 7.0.1. <ul style="list-style-type: none"> Updated the section Coil neutralization on page 53.
C	Released with RobotWare 7.0.2. <ul style="list-style-type: none"> Updated the section Connecting the EtherNet/IP network on page 57.
D	Released with RobotWare 7.2. <ul style="list-style-type: none"> Discrete I/O replaced by Scalable I/O in entire manual.
E	Released with RobotWare 7.5. <ul style="list-style-type: none"> Information about safety digital base devices added in sections: Introduction on page 11, Hardware overview on page 13, "I/O device descriptions", "Status LED descriptions", "Technical data", Information about ABB Scalable I/O devices on page 55 and Configuring Scalable I/O devices using RobotStudio on page 58. New section: "Setting up safety digital base devices". Updated the section References on page 7. Information about node commissioning for other EtherNet/IP scanners added in sections Introduction on page 11, Installing digital base devices on page 41, and "Reset button". Limitation added in section Information about ABB Scalable I/O devices on page 55 that COS is not supported for DSQC1042, safety digital base. Section Identifying an I/O device on page 67 updated with information that the MS LED also flashes during identification plus that for DSQC1042 only the PWR (Power) LED flashes.
F	Released with RobotWare 7.7. <ul style="list-style-type: none"> Content in manual completely restructured. New section including information about OmniCore capacity and examples of device combinations: General system information on page 13 Information about dimensions, weight and environmental conditions added in technical data for all devices in Hardware overview on page 13. New section including information about mounting and required installation space: General installation information on page 39. New section including information about configuration of Scalable I/O devices: Software commissioning on page 55.

Continues on next page

Revision	Description
	<ul style="list-style-type: none"> • New section including information about prerequisites, recommended work process and troubleshooting for safety digital base devices: Configuring safety digital base devices on page 72. • Information about status signal names for safety digital devices added in Information about ABB Scalable I/O devices on page 55. • Section Installing safety digital base devices on page 45 updated with information about safe I/O dual channel connection.
G	<p>Released with RobotWare 7.8.</p> <ul style="list-style-type: none"> • Minor corrections in Installing safety digital base devices on page 45.
H	<p>Released with RobotWare 7.10.</p> <ul style="list-style-type: none"> • Information about connection of external outputs to safe I/O inputs updated in Installing safety digital base devices on page 45. • Information about process power supply added in Safety digital base device, DSQC1042 on page 24 and Installing safety digital base devices on page 45. • Information about default hysteresis added in section Analog add-on device, DSQC1032 on page 33 and in Analog input point object on page 81.
J	<p>Released with RobotWare 7.13.</p> <ul style="list-style-type: none"> • Safety related cautions added in Safety digital base device, DSQC1042 on page 24, Configuring Scalable I/O devices using RobotStudio on page 58, Configuring safety digital base devices on page 72.

Network security

Network security

This product is designed to be connected to and to communicate information and data via a network interface. It is your sole responsibility to provide, and continuously ensure, a secure connection between the product and to your network or any other network (as the case may be).

You shall establish and maintain any appropriate measures (such as, but not limited to, the installation of firewalls, application of authentication measures, encryption of data, installation of anti-virus programs, etc) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. ABB Ltd and its entities are not liable for damage and/or loss related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

1 Introduction

General

ABB Scalable I/O is a modular, compact, and scalable I/O system that consists of a digital base device, or a safety digital base device, which is the minimum configuration, and add-on devices.

Up to four add-on devices can be controlled by each base device with maintained performance, and any combination of add-on devices is supported.

Communication

The digital base device communicates over the EtherNet/IP communication protocol to the robot controller or to other EtherNet/IP scanners. Up to 20 devices in total can be connected to the robot controller over EtherNet/IP. This includes digital base devices and other third-party I/O devices.

Node commissioning for other EtherNet/IP scanners

For other EtherNet/IP scanners, node commissioning needs to be done either using a dhcp server on the scanner network or setting a static IP address in the device with the help of third-party software. An initial volatile address can be obtained using the reset button. The TCP/IP Object can then be accessed for the purpose of this.

Options

When using the standard *Plug & Produce* interface, no additional RobotWare options or hardware options are required to connect to the robot controller.

When using the RobotWare options *3024-1 EtherNet/IP Scanner* and/or *3024-2 EtherNet/IP Adapter*, more configuration possibilities are available.

Device interfaces

The add-on devices have an optical interface and must be attached to a digital base device. The additional Ethernet port on the base device can be used to daisy chain any Ethernet based equipment on the same network, for example additional digital base devices.

Safety

The safety digital base device can be used to control and monitor machine safety equipment in a system. It uses dual channels, meaning that no undetected single fault can lead to loss of safety functions.



Note

The safety digital base device functionality is available from RobotWare 7.5.

Mounting

The I/O devices are designed to be mounted vertically on a mounting rail in an IP20 protected environment with normal air convection. Forced air is needed if the devices are mounted horizontally.

Continues on next page

Features

The important features of the ABB Scalable I/O devices are following:


- Easy to install.
- Easy to configure in RobotWare with support of the *Plug & Produce* interface.
- Compact and scalable.
- Can be mounted inside the controller and/or distributed outside.
- Supports standard DIN-rail mounting.
- Galvanically isolated add-on devices.
- Dual port switch for daisy chaining.
- Fast signal setting with *Change of State*.

2 Hardware overview

2.1 General system information

ABB Scalable I/O devices

ABB Scalable I/O is a modular, compact, and scalable I/O system that consists of base devices (digital or safety digital base device) and a number of various add-on devices (digital, analog and relay add-ons):

Spare part no.	Description	Type
3HAC058663-001	Digital base, 16 digital inputs, 16 digital outputs	DSQC1030
3HAC058664-001	Digital add-on, 16 digital inputs, 16 digital outputs	DSQC1031
3HAC058665-001	Analog add-on, 4 analog inputs, 4 analog outputs	DSQC1032
3HAC058666-001	Relay add-on, 8 digital inputs, 8 relay outputs	DSQC1033
3HAC062908-001	Safety digital base, 12 digital safe inputs, 4 digital safe outputs	DSQC1042
	 Note The device is configured with dual channels (= 6 digital safe inputs, 2 digital safe outputs).	

See [Base devices on page 18](#) and [Add-on devices on page 30](#) for detailed information about the devices.

Additional parts

Spare part no.	Description
3HAC060919-001	Connectors digital base/add-on
3HAC060925-001	Connectors analog add-on
3HAC060926-001	Connectors relay add-on
3HAC069538-001	Connectors safety I/O
3HAC062073-001	DIN bracket



Note

See manufacturer (Phoenix) for recommendation on conductor connections.

Communication

The digital base device communicates over the EtherNet/IP communication protocol to the robot controller or to other EtherNet/IP scanners. ¹ Up to 20 devices in total can be connected to the robot controller over EtherNet/IP, this includes digital base devices and other third-party I/O devices.

When the digital base device is connected to logic power supply and Ethernet, it can be detected and configured by the robot controller. The process power supply powers the inputs, outputs, and the optical interface to the add-on devices.

¹ For more information about communication to other scanners, see [Node commissioning for other EtherNet/IP scanners on page 11](#).

Continues on next page

2 Hardware overview

2.1 General system information

Continued

OmniCore controller capacity

The OmniCore controller has the capacity to handle the following combinations of ABB Scalable I/O devices:


Digital base devices	Number of digital base devices per OmniCore controller	Number of add-on devices per digital base device
DSQC1030, Digital base device	20	4
DSQC1042, Safety digital base device	4	4

Up to four add-on devices can be controlled by each digital base device with maintained performance, and any combination of add-on devices is supported.

Examples of device combinations

Digital base device with add-ons

The illustration below shows a combination of a digital base device and connected add-on devices:

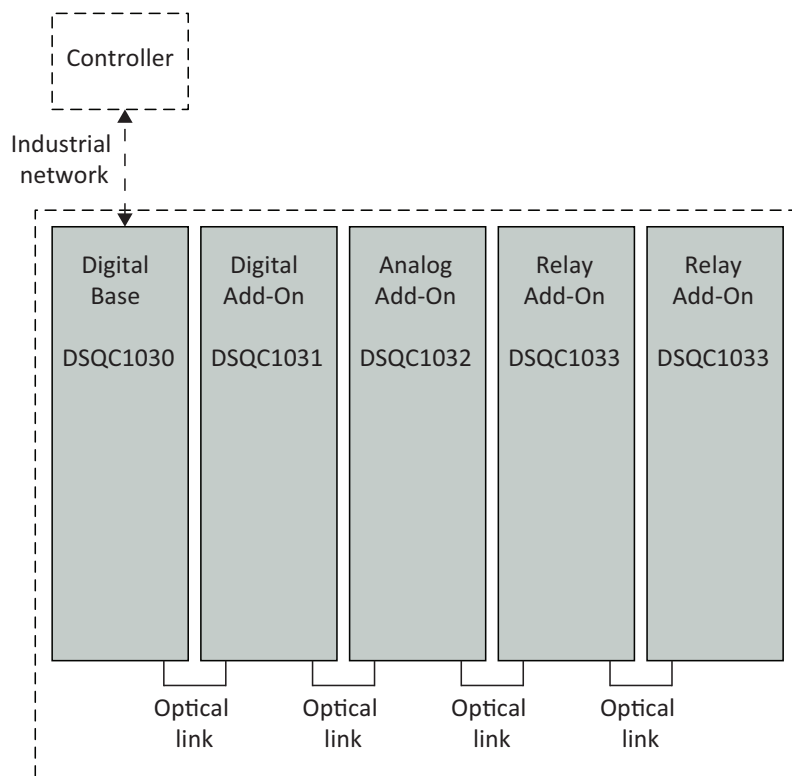

xx2200000943




Note

Up to four add-on devices can be controlled by each digital base device with maintained performance, and any combination of add-on devices is supported.

Continues on next page

Safety digital base device with add-ons

The illustration below shows a combination of a safety digital base device and connected add-on devices:

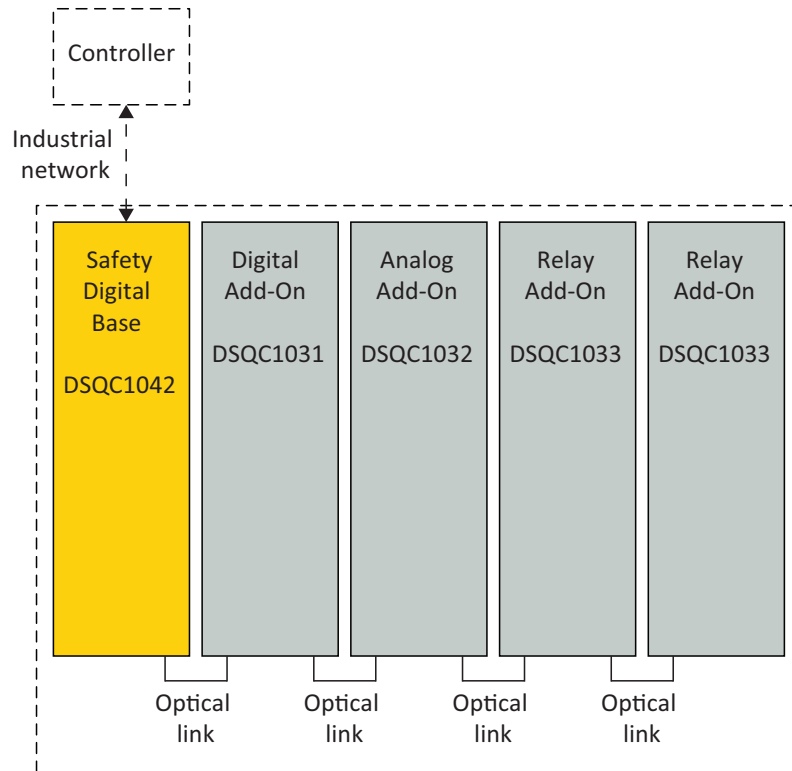

xx220000944



Note

Up to four add-on devices can be controlled by each safety digital base device with maintained performance, and any combination of add-on devices is supported.

Continues on next page


2 Hardware overview

2.1 General system information

Continued

Two digital base devices with add-ons

The illustration below shows a combination of two digital base devices with connected add-on devices:

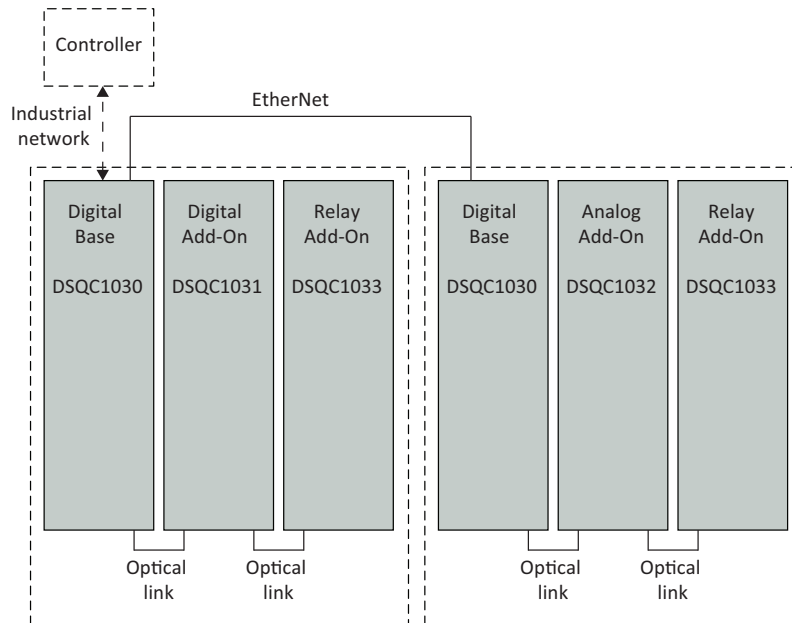

xx2200000945




Note

Both digital base devices communicate with their connected add-ons via an optical interface. Communication between the two digital base devices must, however, be enabled through an EtherNet cable (daisy chaining).

Continues on next page

Two safety digital base devices with add-ons

The illustration below shows a combination of two safety digital base devices, where only the first safety digital base device has connected add-on devices.

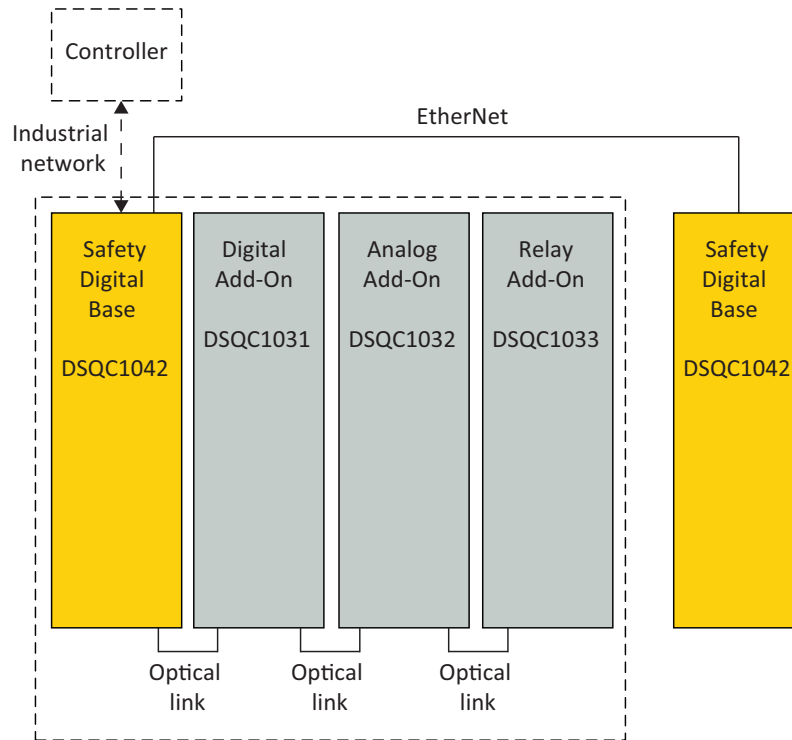

xx220000946



Note

The first safety digital base device communicates with the connected add-ons via an optical interface. Communication between the two safety digital base devices must, however, be enabled through an EtherNet cable (daisy chaining).

2 Hardware overview


2.2.1 Digital base device, DSQC1030

2.2 Base devices

2.2.1 Digital base device, DSQC1030

Description

The DSQC1030 digital base device has 16 digital inputs and 16 digital outputs and can be combined with up to four additional add-on devices.

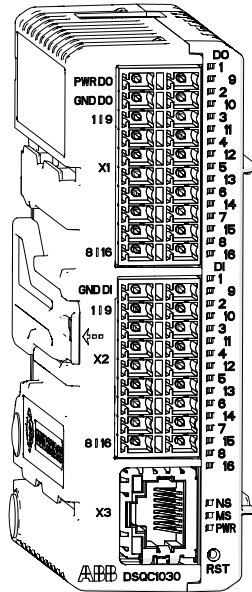

xx1600002033

Connector	Description
X1 ⁱ	Digital outputs, process power
X2 ⁱ	Digital inputs
X3	EtherNet
X4	Logic power
X5	EtherNet

ⁱ The numbers (printings) on the module only show the I/O numbers (digital input/output). It is not the pin position number for connector X1 or X2 (only I/O number).

Connectors

Location	Connector	Left side/description	Right side/description
Top	X4 Logic power	2 - PWR	4 - PWR
		1 - GND	3 - GND

Continues on next page

2 Hardware overview

2.2.1 Digital base device, DSQC1030

Continued

Location	Connector	Left side/description	Right side/description
Front	X1 Digital outputs, process power ⁱ	10 - PWR DO	20 - PWR DO
		9 - GND DO	19 - GND DO
		8 - DO01	18 - DO09
		7 - DO02	17 - DO10
		6 - DO03	16 - DO11
		5 - DO04	15 - DO12
		4 - DO05	14 - DO13
		3 - DO06	13 - DO14
		2 - DO07	12 - DO15
		1 - DO08	11 - DO16
	X2 Digital inputs ⁱ	9 - GND DI	18 - GND DI
		8 - DI01	17 - DI09
		7 - DI02	16 - DI10
		6 - DI03	15 - DI11
		5 - DI04	14 - DI12
		4 - DI05	13 - DI13
		3 - DI06	12 - DI14
		2 - DI07	11 - DI15
		1 - DI08	10 - DI16
		X3 EtherNet	
Down	X5 EtherNet		

ⁱ The numbers (printings) on the module only show the I/O numbers (digital input/output). It is not the pin position number for connector X1 or X2 (only I/O number).

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x33.3x101	
Weight	117 g	

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Continues on next page

2 Hardware overview

2.2.1 Digital base device, DSQC1030

Continued

Supply voltage

Description	Data	Note
Voltage range	20.4 – 28.8 VDC	
Input current, 24V SYS	100 mA (TBC)	
Input current, 24V Process	8 A	
Plug-in current	<2 A @ 1ms	
Surge protected	Yes	
Reverse polarity protected	Yes	

Digital outputs

Description	Data	Note
Rated current	500 mA	
Max current	600 mA	
Typical short circuit current	1200 mA	
Leakage current	< 100 μ A	
Rated voltage	24 VDC	
Max voltage	30 VDC	
Max voltage drop	0.5V at 500 mA	
Max inductive load	1000 mH	(max switching repetition rate: 10 sec)
Max capacitive load	10 mF	
Recommended cable area	1 mm ²	
Surge protected	Yes	
Thermal protection	Yes	
Max delay time	0.5 ms	

Digital inputs

Description	Data	Note
Input voltage level Lo	-30 - 5 V	
Input voltage level Hi	15 - 30 V	
Type switch voltage	10 V	
Input current level Lo	<0.5 mA	
Input current level Hi	>2 mA	typically 4 mA
Max voltage	30 V	
Reverse polarity protected	Yes	
Surge protected	Yes	
Internal delay time	0.5 ms	
Filter time	0 – 65 ms	Programmable. Default value 5.5 ms

Continues on next page

Status LEDs

The DSQC1030 digital base device has the following status LEDs:

LED label	Description
DO 1-16	Digital outputs
DI 1-16	Digital inputs
PWR	Power
NS	Network status
MS	Module status
	Ethernet

Status LED descriptions

Power LED

The bicolor (green/red) LED indicates the status of the power. The LED is controlled by software. The following table shows the different states of the Power LED.

LED color	Description
OFF	The device has no power or is not online. The device has not completed the startup.
GREEN steady	The device is in standby state.
GREEN flashing	The device is online, but has no connections in the established state.
RED flashing (500 ms ON, 500 ms OFF)	The device is booting.
RED flashing (Red 100 ms)	The reset button has been pressed for more than 3 s. The device goes back to the previous state.
RED/GREEN flashing (Red 100 ms, Green 100 ms, Red 100 ms)	The reset button has been pressed for more than 10 s. The device goes back to the previous state.
RED steady	The device performs a self-test or is in error.

MS - Module status LED

The bicolor (green/red) LED indicates the status of the device. It indicates whether or not the device has power and is operating properly. The LED is controlled by software. The following table shows the different states of the MS LED.

LED color	Description
OFF	The device has no power or is not online.
GREEN steady	The device is online and has an established connection.
GREEN flashing	The device is online but has no established connections or is not allocated to a master. Connection may be established, but the validator has not completed an initial time coordination exchange.
RED flashing	One or more I/O connections has timed-out.

Continues on next page

2 Hardware overview

2.2.1 Digital base device, DSQC1030

Continued

NS - Network status LED

The bicolor (green/red) LED indicates the status of the communication link. The LED is controlled by software. The following table shows the different states of the NS LED.

LED color	Description
OFF	The device has no power or is not online.
GREEN steady	The device is online and has connection in the established state.
GREEN flashing	The device is idle or in standby state.
RED flashing	Abort. The device has a recoverable fault.
RED steady	The device has an unrecoverable fault, and may need replacing.
GREEN/RED flashing	The device is in self-test state, or the device needs commissioning due to configuration or UNID missing, incomplete or incorrect.

Ethernet LEDs

The Ethernet LEDs are located on the Ethernet connectors and shows the status of Ethernet communication.

LED label	LED color	Description	Remedy/cause
Speed	OFF	Operating at 10 Mbps.	
	YELLOW steady	Operating at 100 Mbps.	

LED label	LED color	Description	Remedy/cause
Link/activity	OFF	No link is established.	
	GREEN steady	Link is established.	
	GREEN flashing	There is activity on this port.	

Status LEDs at power-up

The system performs a test of the MS and NS LEDs during startup. The purpose of this test is to check that all LEDs are working properly. The test runs as follows:

Order	LED action
1	NS LED is switched Off.
2	MS LED is switched On green for approx. 0.25 seconds.
3	MS LED is switched On red for approx. 0.25 seconds.
4	MS LED is switched On green.
5	NS LED is switched On green for approx. 0.25 seconds.
6	NS LED is switched On red for approx. 0.25 seconds.
7	NS LED is switched On green.

Continues on next page

Reset button

The DSQC1030 digital base device has a reset button located under the status LEDs. The reset button can be used in different ways to reset the device.

Function	Description	Indication
Pressed once (<3 sec)	Regular reset, same as toggling the power.	
Short press and hold (>3 sec)	Assigns volatile IP-settings of 192.168.125.254.	The Power LED flashes red once.
Long press and hold (>10 sec)	Factory reset.	The Power LED flashes red two times.

**CAUTION**

Use a straightened out paper clip or a similar blunt object to carefully press the reset button. Using sharp objects or pressing with force may damage the reset button.

**Note**

Factory reset can also be made remotely via RobotStudio, see [Removing and resetting an I/O device configuration on page 66](#).

2 Hardware overview

2.2.2 Safety digital base device, DSQC1042

2.2.2 Safety digital base device, DSQC1042

Description

The DSQC1042 safety digital base device has 12 inputs and 4 outputs working in dual channel pairs. Due to the dual channel configuration, the device has 6 safe digital inputs and 2 safe digital outputs. The safety digital base device can be combined with up to four additional add-on devices.




Note

For information about how to set up the safety digital base device and its dual channel signals, see [Configuring safety digital base devices on page 72](#).



Note

For information about how to connect safety digital base devices to process power sources, see [Installing safety digital base devices on page 45](#).

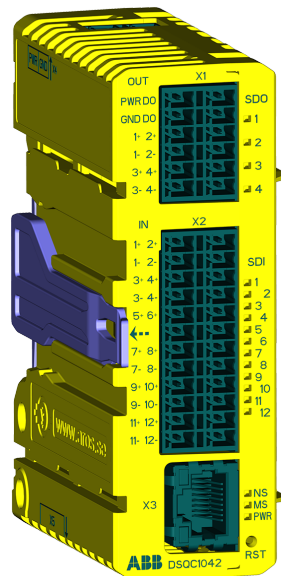

xx2100001681

Connector	Description
X1	Digital outputs, process power
X2 ⁱ	Digital inputs
X3	EtherNet
X4	Logic power
X5	EtherNet

Continues on next page

Connectors

Location	Connector	Left side/description	Right side/description
Top	X4 Logic power	2 - PWR	4 - PWR
		1 - GND	3 - GND
Front	X1 Digital outputs, process power	6 - PWR DO	12 - PWR DO
		5 - GND DO	11 - GND DO
		4 - SDO_1_+	10- SDO_2_+
		3 - SDO_1_-	9 - SDO_2_-
		2 - SDO_3_+	8 - SDO_4_+
		1 - SDO_3_-	7 - SDO_4_-
	X2 Digital inputs ⁱ	12 - SDI_1_+	24 - SDI_2_+
		11 - SDI_1_-	23 - SDI_2_-
		10 - SDI_3_+	22 - SDI_4_+
		9 - SDI_3_-	21 - SDI_4_+
		8 - SDI_5_+	20 - SDI_6_+
		7 - SDI_5_-	19 - SDI_6_-
		6 - SDI_7_+	18 - SDI_8_+
		5 - SDI_7_-	17 - SDI_8_-
		4 - SDI_9_+	16 - SDI_10_+
		3 - SDI_9_-	15 - SDI_10_-
		2 - SDI_11_+	14 - SDI_12_+
	1 - SDI_11_-	13 - SDI_12_-	
		X3 EtherNet	
Down	X5 EtherNet		

Performance level data

Type of data	Description
CAT according to ISO 13849-1	Up to Cat. 3
Performance Level. PLr according to ISO 13849-1	Up to PL e (In Cat.3 dual channel config.)
PFH _D	4,29 x 10 ⁻⁸ (Cat 3)
MTTF _D	Dual channel In: 904 years
	Dual channel Out: 928 years
DC _{AVG}	> 90%
Service lifetime	20 years

Continues on next page

2 Hardware overview

2.2.2 Safety digital base device, DSQC1042

Continued

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x36x101	
Weight	117 g	

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Supply voltage

Description	Data	Note
Voltage range	20.4 – 28.8 VDC	
Input current, 24V SYS	150 mA (TBC)	
Input current, 24V Process	2 A	
Plug-in current	<2 A @ 1ms	
Surge protected	Yes	
Reverse polarity protected	Yes	

Digital outputs

Description	Data	Note
Rated current	500 mA	
Max current	600 mA	
Typical short circuit current	1200 mA	
Leakage current	< 100 uA	
Rated voltage	24 VDC	
Max voltage	30 VDC	
Max voltage drop	0.5V at 500 mA	
Max inductive load	< 700 mH	(max switching repetition rate: 10 sec)
Max capacitive load	< 3.3 mF	
Recommended cable area	1 mm ²	
Surge protected	Yes	
Thermal protection	Yes	
Max delay time	21 ms	

Continues on next page

Digital inputs

Description	Data	Note
Input voltage level Lo	-30 - 5 V	
Input voltage level Hi	15 - 30 V	
Type switch voltage	10 V	
Input current level Lo	<1 mA	
Input current level Hi	>2 mA	typically 4 mA
Max voltage	30 V	
Reverse polarity protected	Yes	
Surge protected	Yes	
Internal delay time	13 ms	
Filter time	2 ms	
Safety digital inputs	Equivalent	
Discrepancy time, dual channel	500 ms	

Status LEDs



CAUTION

LEDs are not reliable indicators and cannot be guaranteed to provide accurate information. They should only be used for general diagnostics during commissioning or troubleshooting. Do not attempt to use LEDs as operational indicators.

The DSQC1042 safety digital base device has the following status LEDs.

LED label	Description
DO 1-4	Digital outputs
DI 1-12	Digital inputs
PWR	Power
NS	Network status
MS	Module status

Status LED descriptions

Power LED

The bicolor (green/red) LED indicates the status of the power. The LED is controlled by software. The following table shows the different states of the Power LED.

LED color	Description
OFF	The device has no power or is not online. The device has not completed the startup.
GREEN steady	The device is in standby state.
GREEN flashing	The device is online, but has no connections in the established state.

Continues on next page

2 Hardware overview

2.2.2 Safety digital base device, DSQC1042

Continued

LED color	Description
RED flashing (500 ms ON, 500 ms OFF)	The device is booting.
RED flashing (Red 100 ms)	The reset button has been pressed for more than 3 s. The device goes back to the previous state.
RED/GREEN flashing (Red 100 ms, Green 100 ms, Red 100 ms)	The reset button has been pressed for more than 10 s. The device goes back to the previous state.
RED steady	The device performs a self-test or is in error.

MS - Module status LED

The bicolor (green/red) LED indicates the status of the device. It indicates whether or not the device has power and is operating properly. The LED is controlled by software. The following table shows the different states of the MS LED.

LED color	Description
OFF	The device has no power or is not online.
GREEN steady	The device is online and has an established connection.
GREEN flashing	The device is online but has no established connections or is not allocated to a master. Connection may be established, but the validator has not completed an initial time coordination exchange.
RED flashing	One or more I/O connections has timed-out.

NS - Network status LED

The bicolor (green/red) LED indicates the status of the communication link. The LED is controlled by software. The following table shows the different states of the NS LED.

LED color	Description
OFF	The device has no power or is not online.
GREEN steady	The device is online and has connection in the established state.
GREEN flashing	The device is idle or in standby state.
RED flashing	Abort. The device has a recoverable fault.
RED steady	The device has an unrecoverable fault, and may need replacing.
GREEN/RED flashing	The device is in self-test state, or the device needs commissioning due to configuration or UNID missing, incomplete or incorrect.

Ethernet LEDs

The Ethernet LEDs are located on the Ethernet connectors and shows the status of Ethernet communication.

LED label	LED color	Description	Remedy/cause
Speed	OFF	Operating at 10 Mbps.	
	YELLOW steady	Operating at 100 Mbps.	

Continues on next page

LED label	LED color	Description	Remedy/cause
Link/activity	OFF	No link is established.	
	GREEN steady	Link is established.	
	GREEN flashing	There is activity on this port.	

Status LEDs at power-up

The system performs a test of the MS and NS LEDs during startup. The purpose of this test is to check that all LEDs are working properly. The test runs as follows:

Order	LED action
1	NS LED is switched Off.
2	MS LED is switched On green for approx. 0.25 seconds.
3	MS LED is switched On red for approx. 0.25 seconds.
4	MS LED is switched On green.
5	NS LED is switched On green for approx. 0.25 seconds.
6	NS LED is switched On red for approx. 0.25 seconds.
7	NS LED is switched On green.

Reset button

The DSQC1042 safety digital base device has a reset button located under the status LEDs. The reset button can be used in different ways to reset the device.

Function	Description	Indication
Pressed once (<3 sec)	Regular reset, same as toggling the power.	
Short press and hold (>3 sec)	Resets the IP-settings to ABB default values.	The Power LED flashes red once.
Long press and hold (>10 sec)	Factory reset.	The Power LED flashes red two times.



CAUTION

Use a straightened out paper clip or a similar blunt object to carefully press the reset button. Using sharp objects or pressing with force may damage the reset button.



Note

Factory reset can also be made remotely via RobotStudio, see [Removing and resetting an I/O device configuration on page 66](#).

2 Hardware overview


2.3.1 Digital add-on device, DSQC1031

2.3 Add-on devices

2.3.1 Digital add-on device, DSQC1031

Description

The DSQC1031 digital add-on device has 16 digital inputs and 16 digital outputs and must be used together with a digital base device.

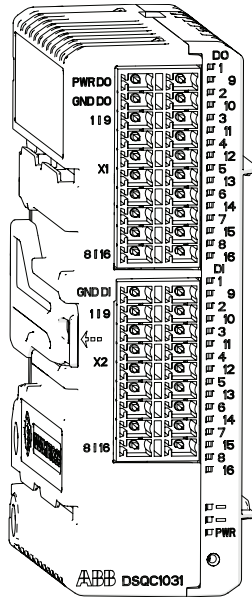

xx1600002034

Item	Description
X1	Digital outputs, logic and process power
X2	Digital inputs

Status LEDs

The DSQC1031 device has the following status LEDs.

LED label	LED description	LED color	Status
DO 1-16	Digital outputs		
DI 1-16	Digital inputs		
PWR	Power	GREEN steady	Addressed.
		GREEN flashing	Not addressed.
		RED flashing	Boot.

Continues on next page

Connectors

Location	Designation	Left	Right
Front	X1 Digital outputs, logic and process power	10 - PWR DO	20 - PWR DO
		9 - GND DO	19 - GND DO
		8 - DO01	18 - DO09
		7 - DO02	17 - DO10
		6 - DO03	16 - DO11
		5 - DO04	15 - DO12
		4 - DO05	14 - DO13
		3 - DO06	13 - DO14
	2 - DO07	12 - DO15	
	1 - DO08	11 - DO16	
	X2 Digital inputs	9 - GND DI	18 - GND DI
		8 - DI01	17 - DI09
		7 - DI02	16 - DI10
		6 - DI03	15 - DI11
		5 - DI04	14 - DI12
		4 - DI05	13 - DI13
3 - DI06		12 - DI14	
2 - DI07		11 - DI15	
1 - DI08	10 - DI16		

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x33.3x101	
Weight	105 g	

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Digital outputs

Description	Data	Note
Rated current	500 mA	

Continues on next page

2 Hardware overview

2.3.1 Digital add-on device, DSQC1031

Continued

Description	Data	Note
Max current	600 mA	
Typical short circuit current	1200 mA	
Leakage current	< 100 µA	
Rated voltage	24 VDC	
Max voltage	30 VDC	
Max voltage drop	0.5V at 500 mA	
Max inductive load	1000 mH	(max switching repetition rate: 10 sec)
Max capacitive load	10 mF	
Recommended cable area	1 mm ²	
Surge protected	Yes	
Thermal protection	Yes	
Max delay time	0.5 ms	


Digital inputs

Description	Data	Note
Input voltage level Lo	-30 - 5 V	
Input voltage level Hi	15 - 30 V	
Type switch voltage	10 V	
Input current level Lo	<0.5 mA	
Input current level Hi	>2 mA	typically 4 mA
Max voltage	30 V	
Reverse polarity protected	Yes	
Surge protected	Yes	
Internal delay time	0.5 ms	
Filter time	0 – 65 ms	Programmable. Default value 5.5 ms

2.3.2 Analog add-on device, DSQC1032

Description

The DSQC1032 analog add-on device has 4 analog inputs and 4 analog outputs and must be used together with a digital base device.

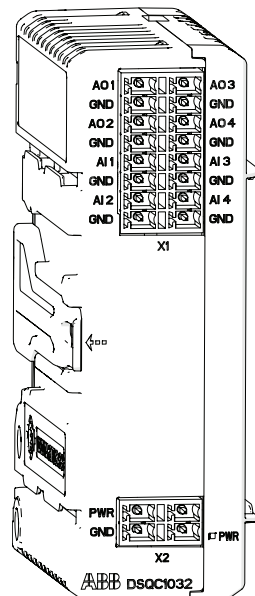

xx1600002035

Item	Description
X1	Analog inputs and outputs
X2	Logic and process power

Status LEDs

The DSQC1032 device has the following status LEDs.

LED label	LED description	LED color	Status
PWR	Power	GREEN steady	Addressed.
		GREEN flashing	Not addressed.
		RED flashing	Boot.

Continues on next page

2 Hardware overview

2.3.2 Analog add-on device, DSQC1032

Continued

Connectors

Location	Designation	Left	Right
Front	X1 Analog inputs and outputs	8 - AO1	16 - AO3
		7 - GND	15 - GND
		6 - AO2	14 - AO4
		5 - GND	13 - GND
		4 - AI1	12 - AI3
		3 - GND	11 - GND
		2 - AI2	10 - AI4
		1 - GND	9 - GND
	X2 Logic and process power	2 - PWR	4 - PWR
		1 - GND	3 - GND

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x33.3x101	
Weight	95 g	

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Analog inputs

Description	Data	Note
Input range	0 – 10 V	
Resolution	12 bits, 2.44 mV	
Hysteresis	4	The default value can be changed, see Analog input point object on page 81 .
Inaccuracy	0.5% + 25 mV	
Input impedance	100 kOhm	typically
Reverse polarity protected	Yes	
Surge protected	Yes	
Delay time	2ms	

Continues on next page

Analog outputs

Description	Data	Note
Output range	0 – 10 V	
Resolution	12 bits, 2.44 mV	
Inaccuracy	0.5% + 25 mV	
Min load impedance	1 kOhm	
Surge protected	Yes	
Short circuit protection	Yes	
Delay time	2 ms	


2 Hardware overview

2.3.3 Relay add-on device, DSQC1033

2.3.3 Relay add-on device, DSQC1033

Description

The DSQC1033 relay add-on device has 8 digital inputs and 8 relay outputs and must be used together with a digital base device.

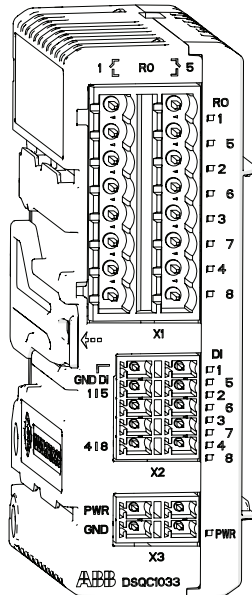

xx1600002036

Item	Description
X1	Relay outputs
X2	Digital inputs
X3	Logic and process power

Status LEDs

The DSQC1031 device has the following status LEDs.

LED label	LED description	LED color	Status
RO 1-8	Relay outputs		
DI 1-8	Digital inputs		
PWR	Power	GREEN steady	Addressed.
		GREEN flashing	Not addressed.
		RED flashing	Boot.

Continues on next page

Connectors

Location	Designation	Left	Right
Front	X1 Relay outputs	8 - RLY1	16 - RLY5
		7 - RLY1	15 - RLY5
		6 - RLY2	14 - RLY6
		5 - RLY2	13 - RLY6
		4 - RLY3	12 - RLY7
		3 - RLY3	11 - RLY7
		2 - RLY4	10 - RLY8
		1 - RLY4	9 - RLY8
	X2 Digital inputs	5 - GND DI	10 - GND DI
		4 - DI1	9 - DI5
		3 - DI2	8 - DI6
		2 - DI3	7 - DI7
		1 - DI4	6 - DI8
	X3 Logic and process power	2 - PWR	4 - PWR
		1 - GND	3 - GND

Technical data

Dimensions and weight

Description	Data	Note
Dimension (Length x Width x Height)	75x33.3x101	
Weight	133 g	

Environmental conditions

Description	Data	Note
Operating temperature	+5...+ 65 °C	
Storage temperature	-40...+70 °C	
Permissible relative humidity	10... 95% non-condensing	
Degree of protection	IP20	

Relay outputs

Description	Data	Note
Max switching voltage	230 VAC	
Max switching current	2 A	
Isolation	Reinforced	

This page is intentionally left blank


3 Hardware installation

3.1 General installation information

Mounting

The ABB Scalable I/O devices are designed to be mounted vertically on a mounting rail in an IP20 protected environment with normal air convection.

The individual devices must be mounted side by side on the DIN rail, starting with the digital base device. The add-on devices are placed to the right of the digital base device.

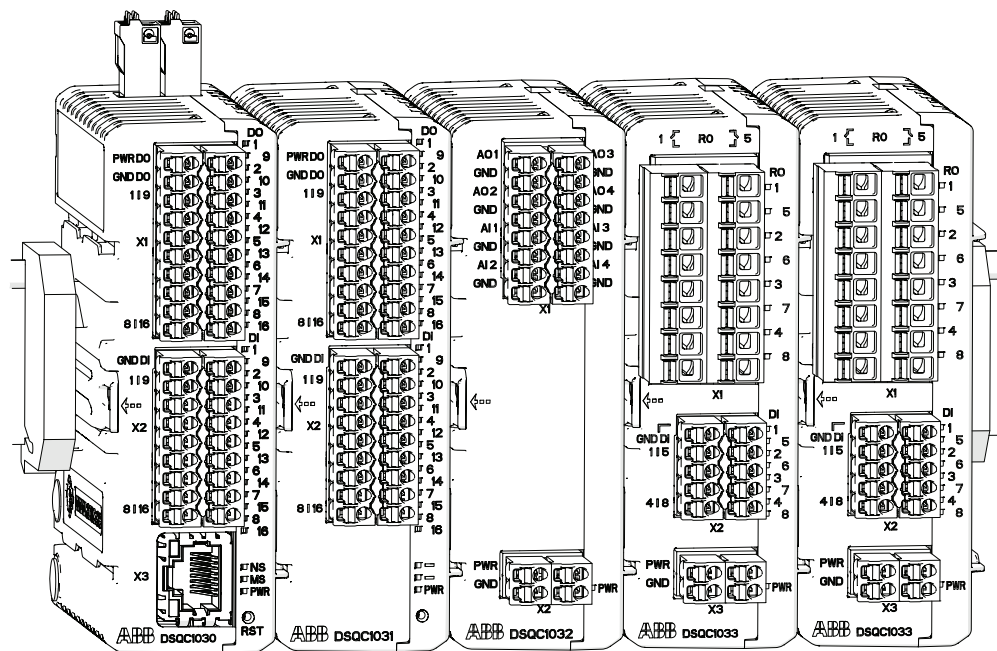

xx1600002032

Continues on next page


3 Hardware installation

3.1 General installation information

Continued

Required installation space

The Scalable I/O system is designed for normal air convection when the devices are mounted vertically. Forced air is needed if the devices are mounted horizontally.

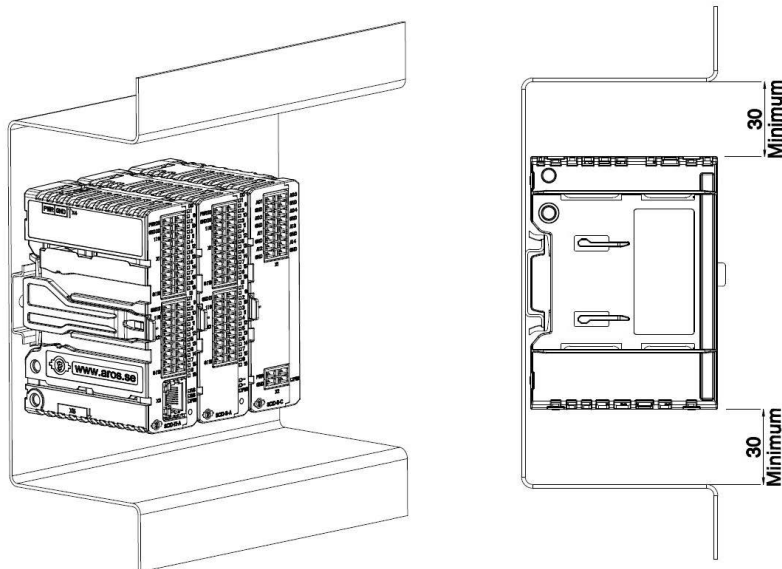

xx2200000942




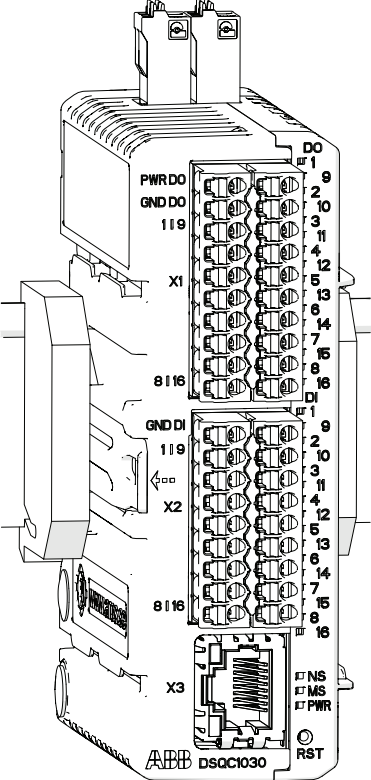


Note

To ensure that the maximum operating ambient temperature is not exceeded, a minimum of 30 mm space is recommended between the system and other components.

3.2 Installing digital base devices

Installing digital base devices

Use this procedure to install the digital base device. See also the product manual for the robot controller, listed in [References on page 7](#).

	Action	Note
1	 <p>DANGER</p> <p>Before commencing any work inside the cabinet make sure that the main power has been switched off.</p>	
2	<p>Fit the device by snapping it onto the mounting rail.</p>	 <p>xx1700000275</p>
3	<p>Connect the Ethernet cable from the robot controller, or the EtherNet/IP scanner, to any of the connectors X3 or X5.</p>	
4	<p>Connect the logic power supply to connector X4.</p>	<p>For information about the pinout see Connectors on page 18.</p>
5	<p>Connect process power supply and GND to the input and output connectors X1 and X2.</p> <p> Note</p> <p>The process power supply also powers the optical interface to the add-ons.</p>	<p> CAUTION</p> <p>The process power supply must be supplied separately. Connecting the process power supply through the logical power supply connector may damage the device.</p>

Continues on next page


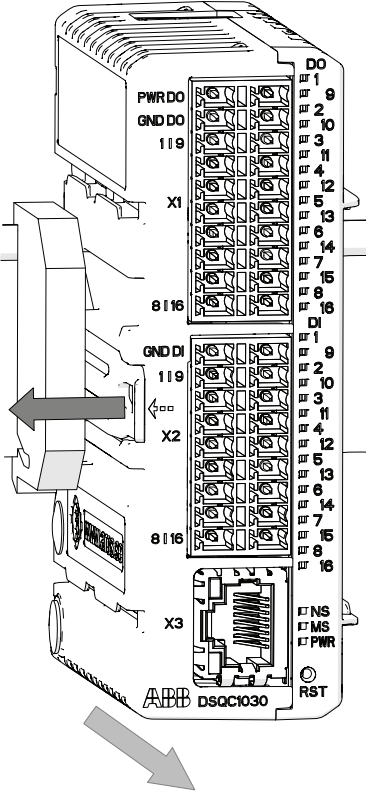
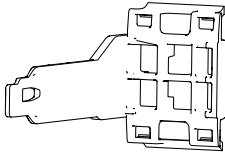
3 Hardware installation

3.2 Installing digital base devices

Continued

	Action	Note
6	Connect wires to the inputs and outputs as required.	
7	Configure the device, see Configuring an I/O device on page 58 .	

Removing digital base devices

	Action	Note
1	 DANGER Before commencing any work inside the cabinet make sure that the main power has been switched off.	
2	Disconnect all connectors.	
3	Press the DIN bracket gently to the left and pull the device straight out.	 <p>xx1700000276</p>
4	Snap off the DIN bracket and refit it to the removed device.	 <p>xx1600002039</p>


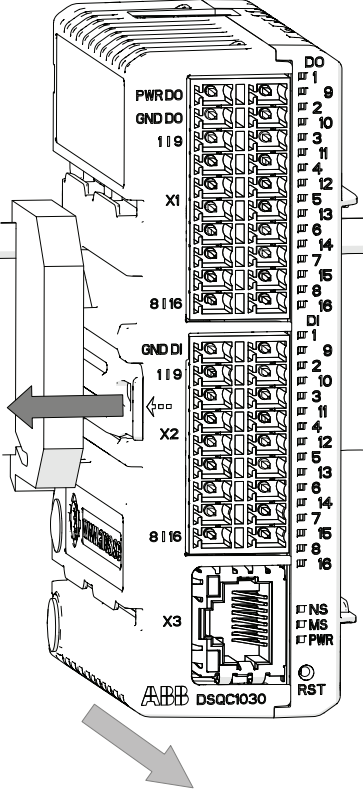
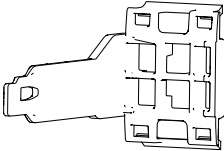
Continues on next page

3 Hardware installation

3.2 Installing digital base devices

Continued

Replacing digital base devices


	Action	Note
1	 DANGER Before commencing any work inside the cabinet make sure that the main power has been switched off.	
2	Disconnect all connectors.	
3	Press the DIN bracket gently to the left and pull the device straight out. Leave the DIN bracket attached to the rail.	 <p>xx1700000276</p>
4	Remove the DIN bracket from the new device.	 <p>xx1600002039</p>

Continues on next page

3 Hardware installation

3.2 Installing digital base devices

Continued

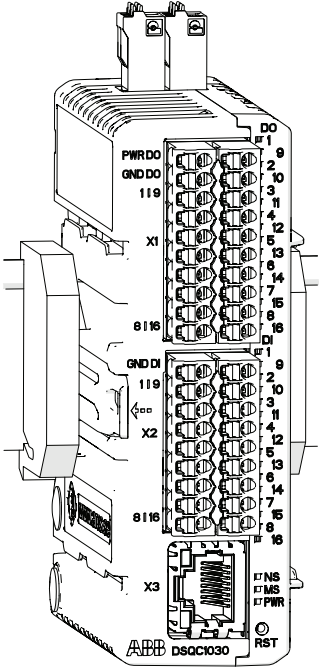	Action	Note
5	Fit the new device by snapping it onto the rail and the DIN bracket.	
6	Reconnect all connectors.	
7	Fit the spare DIN bracket to the removed device.	
8	Configure the device, see Replacing a broken I/O device on page 62 .	

Installing additional (external/remote) digital base devices

Additional base devices can be used as external/remote I/O devices, and assembled together in the same way as add-on devices, but they must be connected with separate Ethernet cables. The Ethernet cable can be connected to any of the connectors X3 or X5 on the previous base device.

The logical power supply, connector X4, of up to five base devices in total can be connected in parallel if the devices are placed inside the same controller cabinet, i.e. over short distances. For all other applications, the logical power must be supplied separately to each base device.

The process power supply must always be supplied separately to each base device.




CAUTION

Connecting the process power supply in parallel or through the logical power supply connector may damage the device.

3.3 Installing safety digital base devices

General

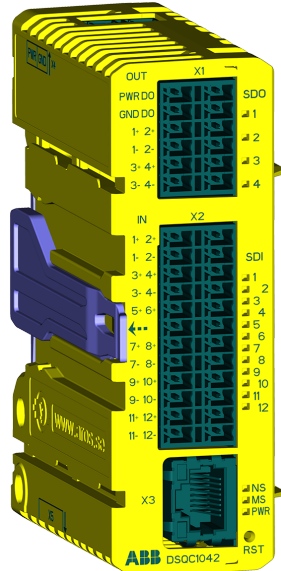

xx2100001681

The safety digital base devices, DSQC1042, are installed in the same way as the digital base devices with a few exceptions. See [Installing digital base devices on page 41](#) for information about the main installation process, and [Connection to process power source on page 45](#) and [Safe I/O dual channel connection on page 46](#) for specific details.

Connection to process power source

The process power input of the DSQC1042 X1 connector (PWR DO and GND DO) must be connected to DSQC609 or another internal/external 24V DC power source. The power source must have less than 4 seconds start-up delay from controller power on.



Note

The 24V DC from X19 customer I/O interface of DSQC3037 cannot be used since it has longer start-up delay.



Note

The DSQC1042 must always be set up with this type of power source connection even if Safe Digital Outputs (SDOs) are not used.

Continues on next page

3 Hardware installation


3.3 Installing safety digital base devices

Continued

Safe I/O dual channel connection


The safety digital base devices are set up with dual channels. See [Setting up dual channel signals on page 73](#).

The following example shows how to connect a safe sensor to an input of the safe scalable I/O unit, and how to connect a safe switch to a safe output:

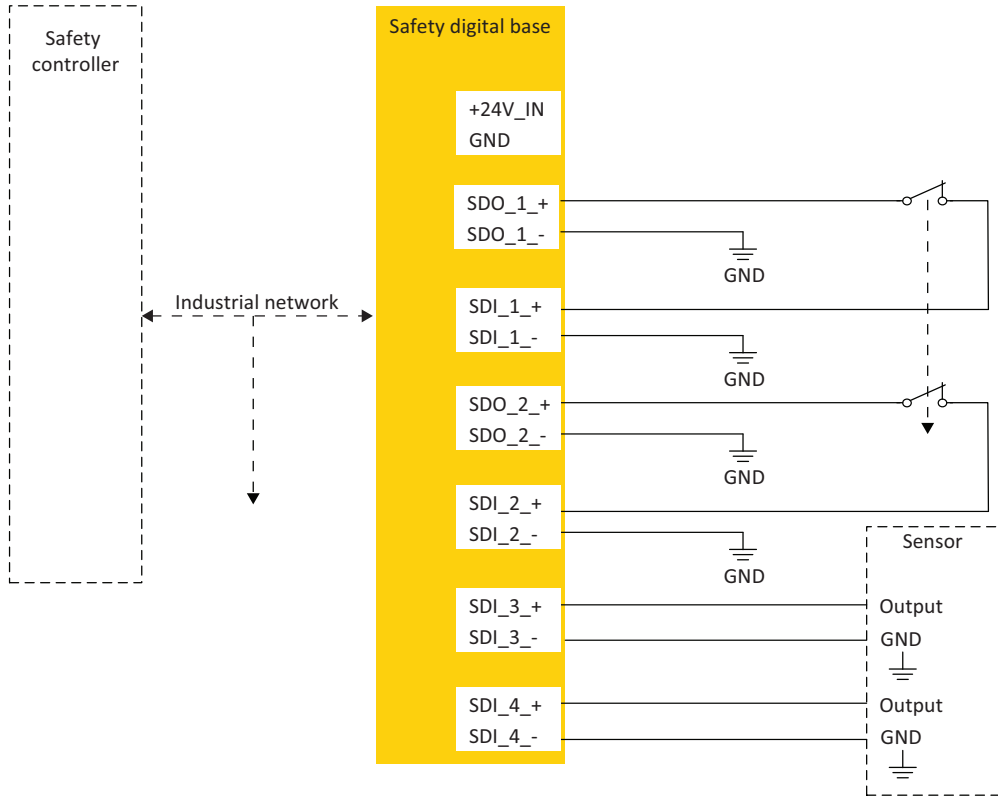

xx2200000441

Safety digital base device used as dual channel safety output

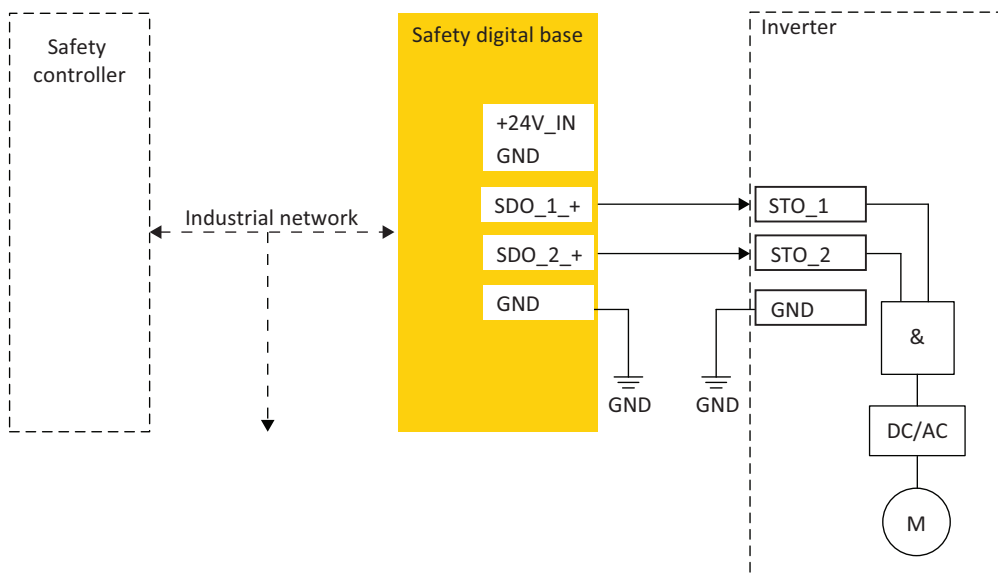

xx2200000566

Continues on next page


External outputs connected to safe I/O inputs

This example shows how to connect an external output with test pulse to a safe I/O input.



Note

The test pulses from the output signal switching device (OSSD) must be less than 2 ms.

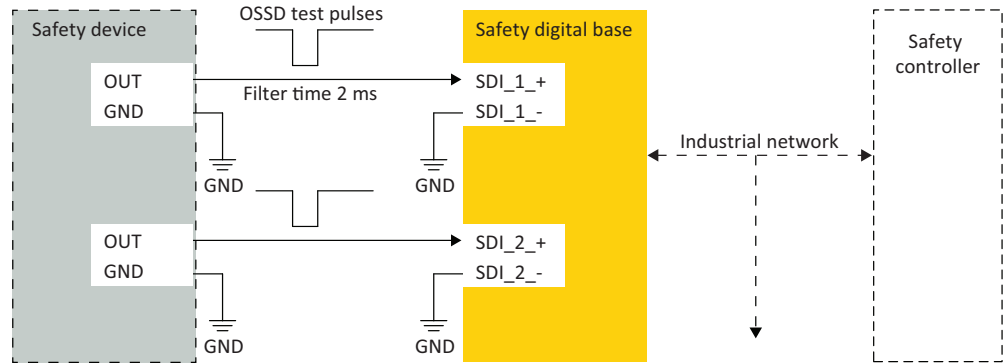

3 Hardware installation

3.4 Installing add-on devices

3.4 Installing add-on devices

General


Add-on devices have an optical interface and must be powered and attached to a configured base device to be detected by the robot controller. Up to four add-on devices can be attached to the same base device with maintained performance.

The optical interface on the base device is powered by process power supply and must also be connected to detect the add-on device. Unpowered add-on devices shall be placed last, i.e. to the right, otherwise the optical link is broken.



Note

Add-ons can also be attached to a safety digital base. See [Examples of device combinations on page 14](#).

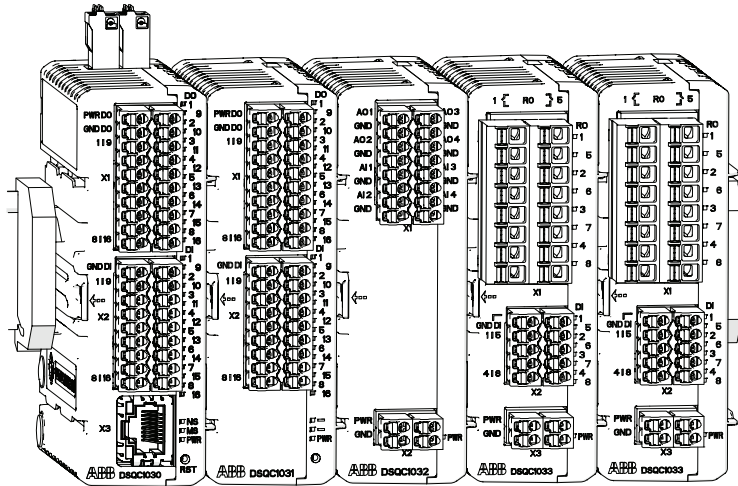

xx1600002032

Installing add-on devices



Action	Note
<p>1</p> <p>DANGER</p> <p>Before commencing any work inside the cabinet make sure that the main power has been switched off.</p>	

Continues on next page

3 Hardware installation

3.4 Installing add-on devices


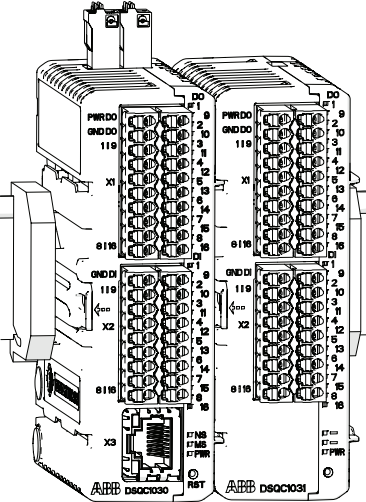

Continued

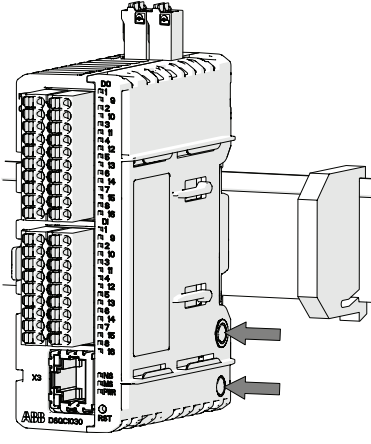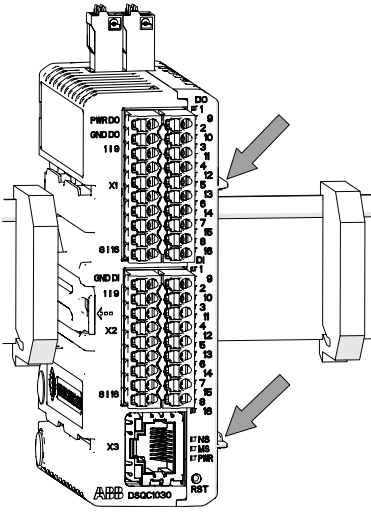	Action	Note
2	Clean the optical interface on both the base device and the add-on from dirt or dust using a soft cloth.	 <p>xx170000277</p>
3	<p>Fit the add-on device to the guide rails on the right side of the base device or the last device according to the arrows.</p> <p>Press the add-on device until it snaps onto the mounting rail.</p>	 <p>xx170000278</p> <p>Note</p> <p>If the device is not correctly inserted there is a risk that the optical communication between the devices does not work.</p>


3 Hardware installation

3.4 Installing add-on devices

Continued

	Action	Note
4	<p>Connect the logic and process power supply. For information about the pinout see Add-on devices on page 30.</p> <p> Note</p> <p>The optical interface on the base device must also be powered by process power supply to detect add-on devices.</p>	 <p>xx1700000279</p> <p> CAUTION</p> <p>Connecting the process power supply in parallel with another add-on may damage the devices.</p>
5	Connect wires to the inputs and outputs as required.	
6	Configure the device, see Configuring an I/O device on page 58 .	

Removing add-on devices



	Action	Note
1	<p> DANGER</p> <p>Before commencing any work inside the cabinet make sure that the main power has been switched off.</p>	
2	Disconnect all connectors.	

Continues on next page


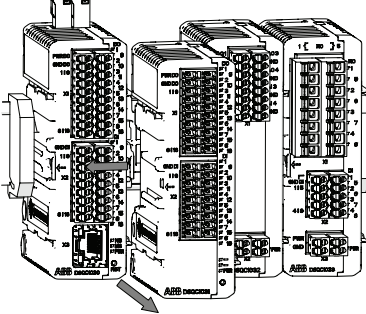
3 Hardware installation

3.4 Installing add-on devices

Continued

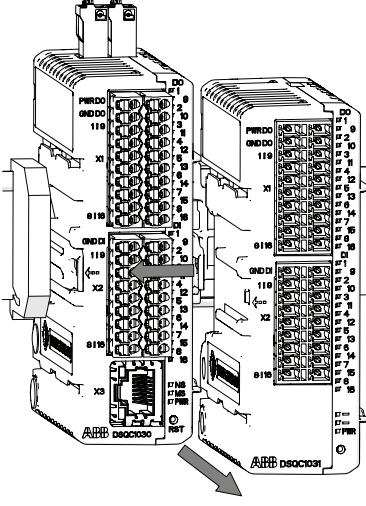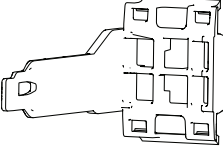	Action	Note
3	Press the DIN bracket gently to the left and pull the device straight out.	 <p>xx1700000274</p>
4	Snap off the DIN bracket from the rail and refit it to the removed device.	 <p>xx1600002039</p>

Replacing add-on devices




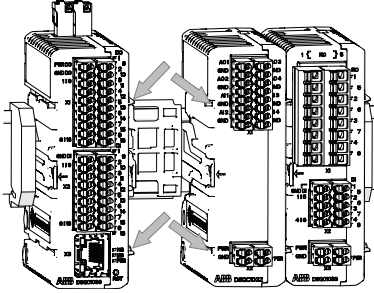

	Action	Note
1	 <p>DANGER</p> <p>Before commencing any work inside the cabinet make sure that the main power has been switched off.</p>	
2	Disconnect all connectors.	
3	Press the DIN bracket gently to the left and pull the device straight out. Leave the DIN bracket attached to the rail.	 <p>xx1600002037</p>

Continues on next page

3 Hardware installation

3.4 Installing add-on devices

Continued

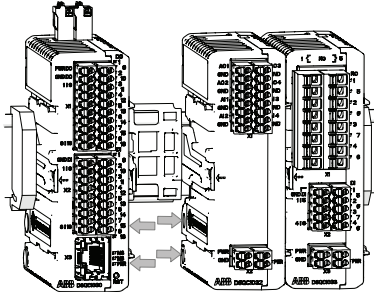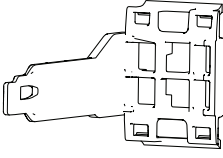	Action	Note
4	Clean all optical interfaces from dirt or dust using a soft cloth.	 <p>xx1600002040</p>
5	Remove the DIN bracket from the new device.	 <p>xx1600002039</p>
6	Fit the new device to the guide rails of the adjacent devices. Press the new device until it snaps onto the DIN bracket.  Note The device must be updated if the order is changed, see Updating an existing I/O device on page 61 .	 <p>xx1600002038</p>  Note If the device is not correctly inserted there is a risk that the optical communication between the devices does not work.
7	Reconnect all connectors.	
8	Fit the spare DIN bracket to the removed device.	

3.5 Coil neutralization

External devices

External relay coils, solenoids, and other devices that are connected to the I/O devices must be neutralized and protected with external diodes for reverse protection. The following sections describe how this can be done.




Note

The turn-off time for DC relays increases after neutralization, especially if a diode is connected across the coil. Varistors give shorter turn-off times. Neutralizing the coils lengthens the life of the switches that control them.

Clamping with a diode


The diode should be dimensioned for the same current as the relay coil, and a voltage of twice the supply voltage.

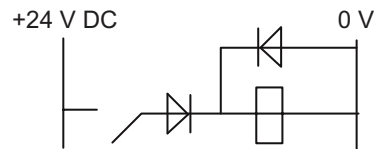

xx0100000163

Clamping with a varistor


The varistor should be dimensioned for the same current as the relay coil, and a voltage of twice the supply voltage.

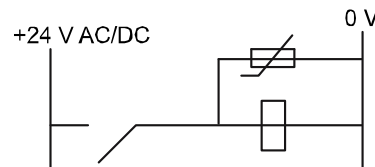

xx0100000164

Clamping with an RC circuit

R 100 ohm, 1W C 0.1 - 1 mF
>500 V max. voltage, 125 V nominal voltage.

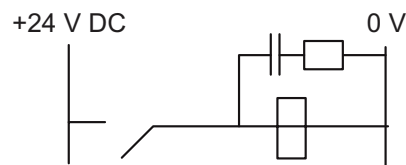

xx0100000165

This page is intentionally left blank

4 Software commissioning

4.1 Information about ABB Scalable I/O devices

General

To use the Scalable I/O devices, plug in the base device and the add-on devices to the controller through the Ethernet cable. Then configure the I/O devices using RobotStudio or the FlexPendant. For more information about I/O device configuration, see [Software commissioning on page 55](#).

Industrial network

EtherNet/IP is the industrial network that is used for communication between the I/O devices and the robot and controller.

EDS file

Electronic Data Sheet (EDS) files are required when configuring I/O devices with other scanners. The EDS file, which identifies the devices during the configuration in the network, is stored in the following controller location:

```
...|products\RobotControl_x.x.x-xxx\utility\service\ioconfig\EDS\
```

Behavior

ABB Scalable I/O devices support both *Cyclic* and *Change of State* (COS) I/O connection. It is possible to set output signals with a *Change of State* connection.



Note

Change of State is used together with the parameter production inhibit timer. The parameter defines the highest frequency for which a signal change can occur with *Change of State*.



Note

The *Change of State* (COS) I/O connection is not supported for safety digital base devices (DSQC1042).

Safety digital base devices

The safety digital base devices, DSQC1042, are configured in the same way as other digital base devices. See [Software commissioning on page 55](#). After the configuration, the dual channels must be defined using CL logic. See [Setting up dual channel signals on page 73](#).

Continues on next page

4 Software commissioning

4.1 Information about ABB Scalable I/O devices

Continued

When the set-up and configuration is done, see *Application manual - Functional safety and SafeMove* for instructions on how to work with the safety configuration.



Note

The network reaction time is carefully set to optimal for the safety digital base device.

Signal names

Signals are generated according to the following structure:

Format	Example
Name of device_slot number_type + index	ABBIO_0_DO3 or ABBIO_0_DI5 or ABBIO_3_RO1

Status signal names

Status signal names for the safety digital base devices are generated according to the following structure:

Format	Example
Name of device_slot number_type_Status	ABBIO_0_DO_Status ABBIO_0_DI_Status

4.2 Connecting the EtherNet/IP network

Connecting the EtherNet/IP network

The I/O devices are based on the EtherNet/IP communication protocol but does not require any additional RobotWare options or hardware options to be connected to the robot controller. In this standard configuration, the devices should be connected to the *Private Network* to gain the advantages with *Plug & Produce*.

When using the RobotWare options *3024-1 EtherNet/IP Scanner* or *3024-2 EtherNet/IP Adapter* more configuration possibilities are available. For more information see *Application manual - EtherNet/IP Scanner/Adapter*.

For more information about network connections on OmniCore, see *Operating manual - Integrator's guide OmniCore*.

4 Software commissioning

4.3 Configuring Scalable I/O devices using RobotStudio

4.3 Configuring Scalable I/O devices using RobotStudio

General

This section describes the recommended working procedure when installing and configuring ABB Scalable I/O devices in RobotStudio.

For information about configuration using the FlexPendant, see [Configuring Scalable I/O devices using the FlexPendant on page 69](#).



Note

Safety digital base devices (DSQC1042) cannot be configured using the FlexPendant.

The **Safety services** grant is mandatory for configuration of safety digital base devices.



Note

A maximum of 4 safety digital base devices can be used at the same time with an OmniCore controller.

When the I/O device is configured using *Plug & Produce* interface, it requires minimal user interaction. Follow the working procedures to configure a new I/O device, update an existing I/O device and to replace an I/O device with another.

Configuring an I/O device



CAUTION

Before installing a new safe digital base into the safety network, the user must ensure that any pre-existing configuration is cleared from the new device.


When a base I/O device and an add-on I/O device are connected to the controller, they must be configured.

This procedure describes how to configure the base I/O device and add-on I/O device at the same time. However, if more add-on I/O devices should be attached after the first configuration of the base I/O device, use the [Updating an existing I/O device on page 61](#) procedure to update the configuration of the base I/O device.

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.


Continues on next page

- The I/O device that has not yet been configured is connected to the private network. The name of the detected I/O device appears.

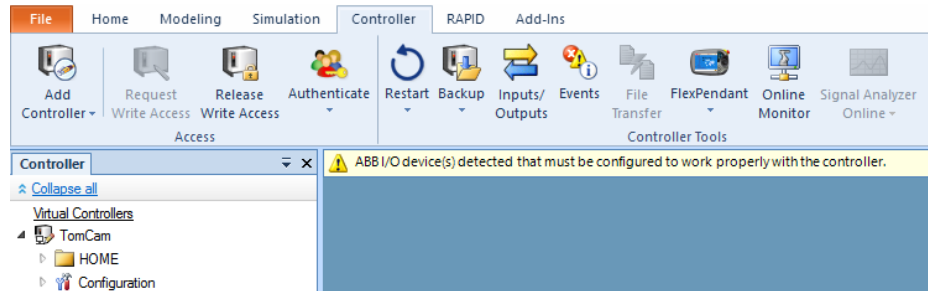

xx210000064

- Right-click the detected I/O device and select **Configure**.
Or
In the I/O System tree, right-click the I/O device and select **Configure Device**.

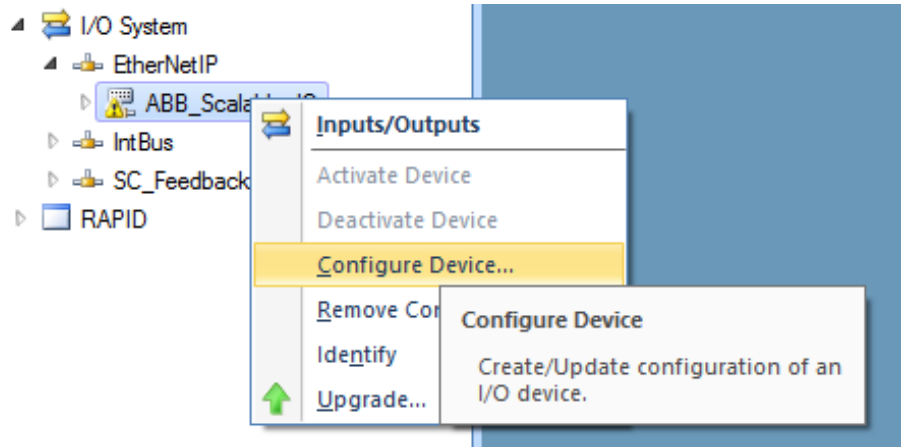

xx210000063

4 Software commissioning

4.3 Configuring Scalable I/O devices using RobotStudio

Continued

4 The Configure Device dialog is displayed.

The screenshot shows the 'Configure Device' dialog box. It has a title bar with a close button (X). The dialog is divided into two main sections: 'Connected Device' and 'Configuration'.
In the 'Connected Device' section, the following information is displayed:
Status: Configuration required
Name: ABB_Scalable_IO
IP Address: 192.168.125.100
Serial Number: 8014183
Label: ABB Scalable I/O Device
In the 'Configuration' section, there are two radio buttons: 'Configure as new device:' (which is selected) and 'Configure as replacement device:'. The 'Configure as new device:' option has a text input field containing 'ABB_Scalable_IO'. The 'Configure as replacement device:' option has a dropdown menu that is currently empty. Below these options, there is a text input field for 'Create new I/O signals using name prefix:' containing 'ABB_Scalable_IO'. A note below this field states: '(New signals will be connected to the last unmapped points of the device or extension. Naming ex. "ABB_Scalable_IO_D11", "ABB_Scalable_IO_D12" etc.)'. At the bottom of the dialog, there is a warning icon and the text: 'Changes will not take effect until the controller is warm-restarted.'. At the very bottom right, there are 'OK' and 'Cancel' buttons.

xx210000065

Complete the following fields:

- **Configure as new device:** Enter the name of the I/O device.



Note

The name will be stored in the I/O device and will be used for identification and addressing.

- **Create new I/O signals using name prefix:** Enter the signal prefix to be used in signal names. Not mandatory.



Note

If this field is left empty, no signals will be added to the configuration.

Select **OK**. The I/O device, and its signals, are added.

5 Restart the controller.

Continues on next page

Updating an existing I/O device

When an add-on I/O device has been attached or removed, the I/O configuration of the base I/O device must be updated.




Note

Always attach or remove I/O devices from the right side of the base I/O device, otherwise the optical link is broken.

The update function can also be used for the generation of default signals on a device.

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 The add-on I/O device is attached or removed from the base module. The modified I/O device appears.

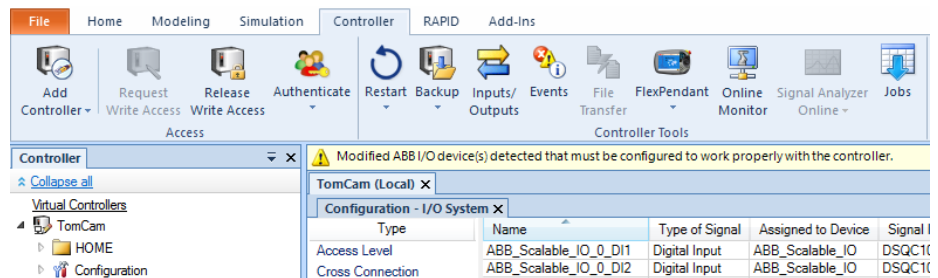


xx2100000078

- 3 Right-click the modified I/O device and select **Configure**.

Or

In the I/O System tree, right-click the I/O device to be updated and select **Configure Device**.

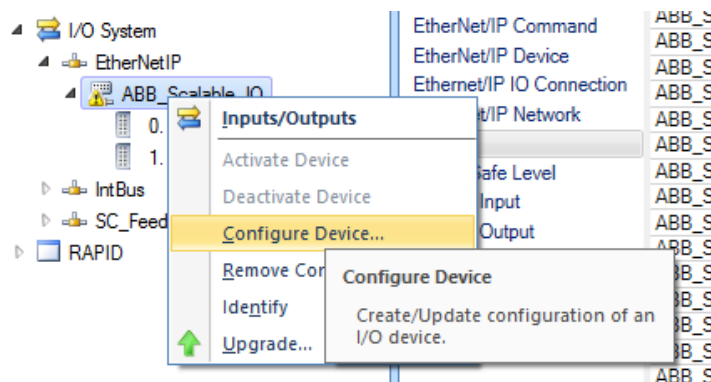

xx2100000079

Continues on next page

4 Software commissioning

4.3 Configuring Scalable I/O devices using RobotStudio

Continued

4 The Configure Device dialog is displayed.

Configure Device

Connected Device

Status: Configuration mismatch, update required

Name: ABB_Scalable_IO

IP Address: 192.168.125.100

Serial Number: 8014183

Label: ABB Scalable I/O Device

Configuration

Configure as new device:

Update device: ABB_Scalable_IO

Create new I/O signals using name prefix: ABB_Scalable_IO

(New signals will be connected to the last unmapped points of the device or extension. Naming ex. "ABB_Scalable_IO_DI1", "ABB_Scalable_IO_DI2" etc.)

⚠ Changes will not take effect until the controller is warm-restarted.

OK Cancel

xx210000081

Complete the following fields:

- **Update device:** Select the I/O device that is to be updated.
- **Create new I/O signals using name prefix:** Enter the signal prefix to be used in signal names. Not mandatory.



Note

If this field is left empty, no signals will be added to the configuration.

Select **OK**. The I/O device is updated.

5 Restart the controller.

Replacing a broken I/O device

When a base I/O device is damaged, broken or faulty, it should be replaced.



Note

If a faulty add-on I/O device is replaced with another add-on I/O device of the same type, there is no need to update the configuration of the base I/O device.




CAUTION

The replacement of safety digital base requires that the replacement device be configured properly and operation of the replacement device shall be user verified.


Continues on next page

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 A new I/O device is connected to the private network. The detected I/O device appears.

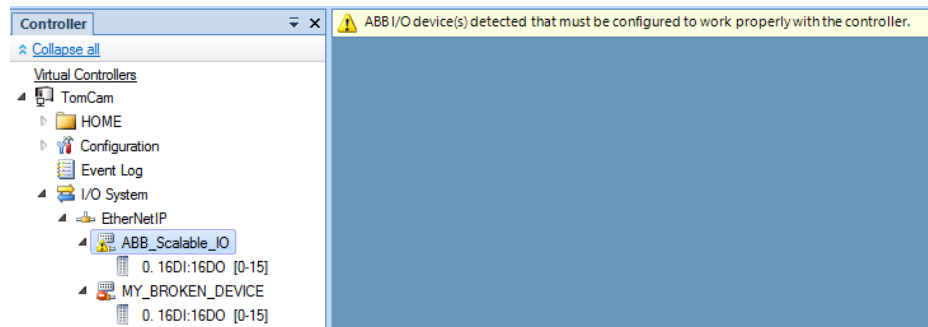

xx210000082

- 3 Right-click the new I/O device and select **Configure**.
Or
In the **I/O System** tree, right-click the new I/O device and select **Configure Device**.
- 4 The **Configure Device** dialog is displayed.

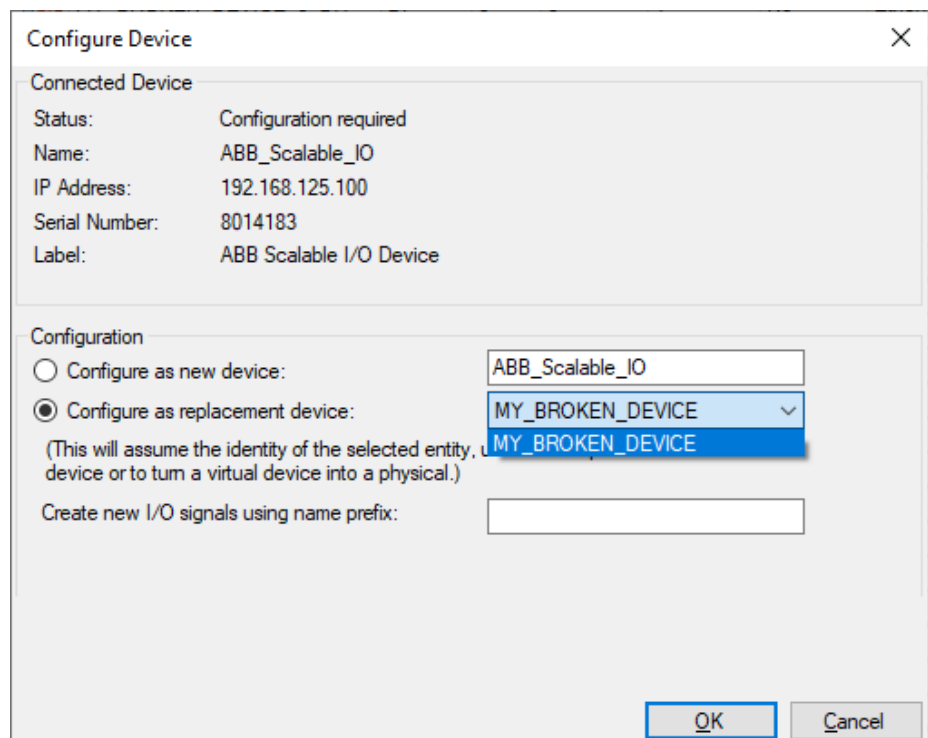

xx210000083

Complete the following fields:

- **Configure as new device:** Shows the new I/O device that will replace the faulty one.

Continues on next page

4 Software commissioning

4.3 Configuring Scalable I/O devices using RobotStudio

Continued

- **Configure as replacement device:** Select the faulty I/O device that needs to be replaced.



Note

In this example, *ABB_Scalable_IO* is the new I/O device to replace the faulty I/O device, *MY_BROKEN_DEVICE*.

- **Create new I/O signals using name prefix:** Enter the signal prefix to be used in signal names. Not mandatory.



Note

If this field is left empty, no signals will be added to the configuration.

Select **OK**. The I/O device is updated.

- 5 Restart the controller.




Note

If a faulty add-on I/O device is replaced with another add-on I/O device of the same type, there is no need to update the configuration of the base I/O device.

Replacing an existing I/O device configuration

Existing ABB Scalable I/O configurations found on the controller can be inherited by new ABB Scalable I/O devices. This means that devices can be created in the controller ahead of time without access to the physical device. This also extends to simulated devices that also can be turned into physical devices by configuring a new ABB Scalable I/O device using the simulated device configuration.

- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 A new I/O device is connected to the private network. The detected I/O device appears.

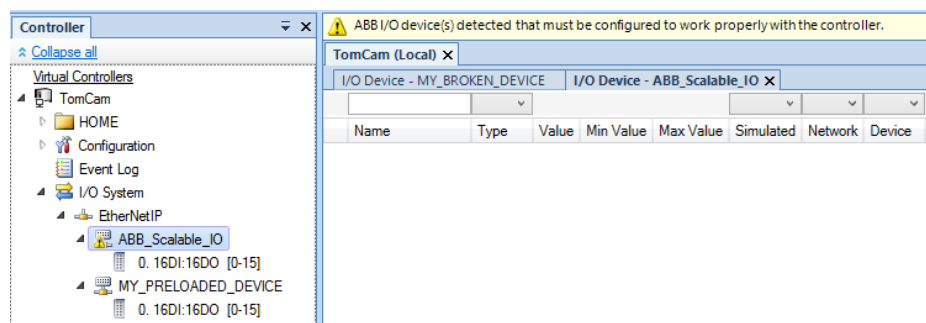

xx210000084

- 3 Right-click the new I/O device and select **Configure**.

Or

In the **I/O System** tree, right-click the new I/O device and select **Configure Device**.

Continues on next page

4 The Configure Device dialog is displayed.

xx210000085

Complete the following fields:

- **Configure as new device:** Shows the new I/O device that will replace the existing and inherit its configuration.
- **Configure as replacement device:** Select the existing I/O device to be replaced.

**Note**

In this example, *ABB_Scalable_IO* is the new I/O device to replace the existing I/O device, *MY_PRELOADED_DEVICE*.

- **Create new I/O signals using name prefix:** Enter the signal prefix to be used in signal names. Not mandatory.

**Note**

If this field is left empty, no signals will be added to the configuration.

Select OK. The new I/O device will inherit the configuration of the selected device.

5 Restart the controller.

Continues on next page

4 Software commissioning

4.3 Configuring Scalable I/O devices using RobotStudio

Continued

Removing and resetting an I/O device configuration

Use this function to remove a configuration and reset the device to factory default.




Note

Prerequisites for removing and resetting an I/O device configuration:

- Connect as Local Client
- Manual mode
- The unit must be deactivated
- Write access


- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.
- 2 In the I/O System tree, right-click the I/O device to be removed and select **Remove Configuration**.

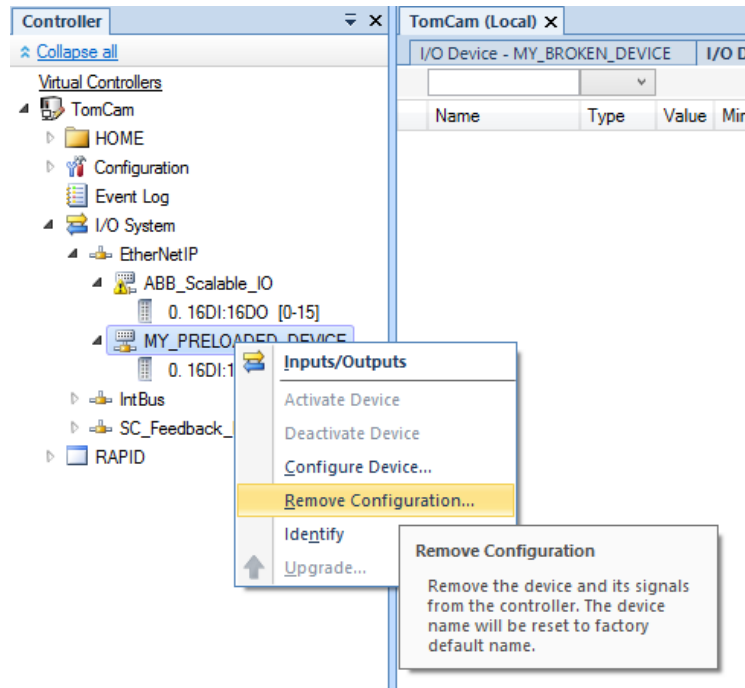

xx210000086

Continues on next page

- 3 The Remove Configuration dialog is displayed.

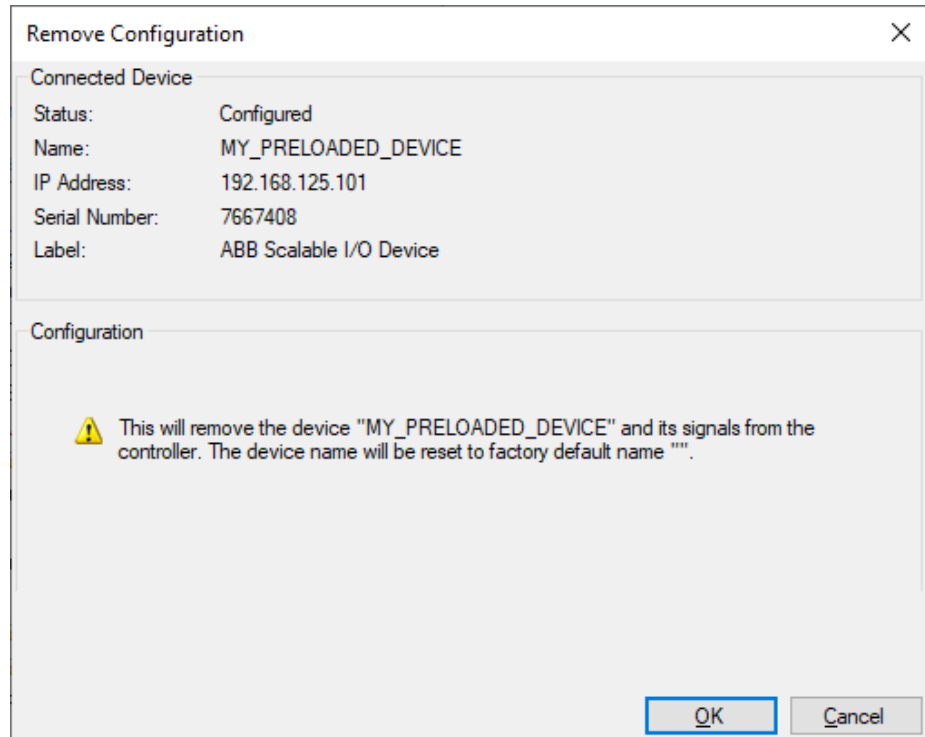

xx210000087

Select OK. The I/O device is removed.

- 4 Restart the controller.

Identifying an I/O device

When there are multiple I/O devices in the controller, it is important to identify the physical I/O device for any device update, signal connection or troubleshooting.


- 1 Start RobotStudio and connect to the OmniCore controller. Request write access.

4 Software commissioning

4.3 Configuring Scalable I/O devices using RobotStudio

Continued

- 2 In the I/O System tree, right-click the target I/O device to be identified and select **Identify**.

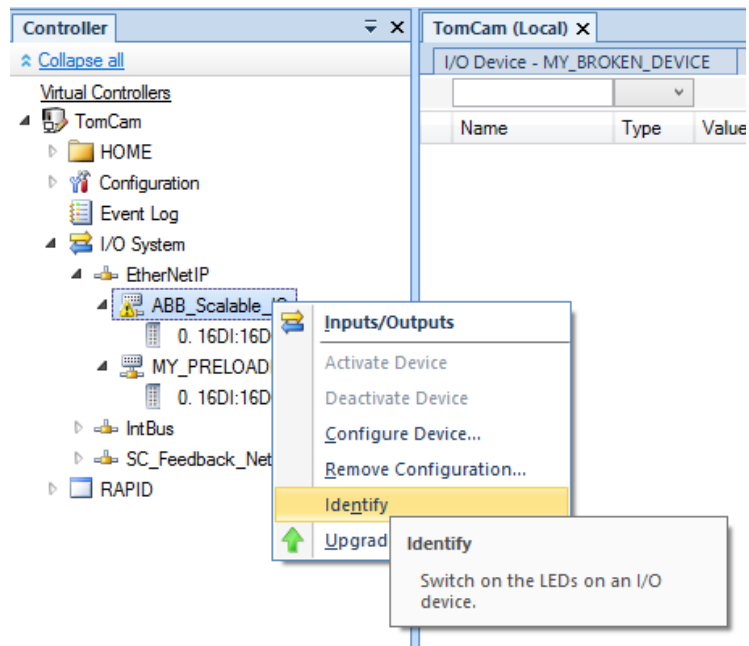

xx210000077

- 3 The PWR (Power), MS (Module status) and NS (Network Status) LED of the physical base I/O device flashes to identify the I/O device in the controller.



Note

For DSQC1042, Safety digital base, only the PWR (Power) LED flashes to identify the I/O device in the controller.

4.4 Configuring Scalable I/O devices using the FlexPendant

General

This section describes the recommended working procedure when installing and configuring ABB Scalable I/O devices using the FlexPendant.

For information about configuration using RobotStudio, see [Configuring Scalable I/O devices using RobotStudio on page 58](#).



Note

The system should be in manual mode while configuring or updating the I/O device using the FlexPendant.



Note

Safety digital base devices cannot be configured using the FlexPendant.

Configuring an I/O device

When a base I/O device and an add-on I/O device are connected to the controller, these must be configured.

Use this procedure to configure a new I/O device on the FlexPendant.

- 1 Start the FlexPendant and connect to the OmniCore controller.
- 2 On the start screen, tap **I/O**, and then select **I/O Devices** from the menu.
- 3 Select the I/O device and tap **Configure**.

Name	Network	Address	State
EN_Internal_Device	EtherNetIP	192.168.125.1	Running
SecondUnit	EtherNetIP	192.168.125.102	Running
ThirdUnit	EtherNetIP	192.168.125.103	Running
ZeroUnit	EtherNetIP	192.168.125.100	Unknown

Continues on next page

4 Software commissioning

4.4 Configuring Scalable I/O devices using the FlexPendant

Continued

4 The I/O Modernization window is displayed.

Messages Event log 100 % 123

← I/O Modernization Cancel Apply

Connected Device

Name: ZeroUnit
Address: 192.168.125.100
Serial No: 7597780
Status: Configuration required. LED flashing on device for identification.
Label: ABB Scalable I/O Device

Configuration

Configure New Device
ZeroUnit

Update device
SecondUnit

Create I/O Signals

Home I/O

xx2100000101

Enter the device name in the **Configure New Device** option, and then tap **Apply**.

5 Tap **OK** to the question **The changes will not take effect until the controller is restarted. Do you want to restart now?**

Updating an existing I/O device

When an add-on I/O device has been attached or removed, the I/O configuration of the base I/O device must be updated.



Note

Always attach or remove I/O devices from the right side of the base I/O device, otherwise the optical link is broken.

- 1 On the start screen, tap **I/O**, and then select **I/O Devices** from the menu.
- 2 Select the I/O device to be updated and tap **Configure**.

Continues on next page

3 The I/O Modernization window is displayed.

Messages Event log 100 % 123

← I/O Modernization Cancel Apply

Connected Device

Name: ZeroUnit
Address: 192.168.125.100
Serial No: 7597780
Status: Configuration required. LED flashing on device for identification.
Label: ABB Scalable I/O Device

Configuration

Configure New Device
ZeroUnit

Update device
SecondUnit

Create I/O Signal
Home I/O

xx210000098

Enter the device name in the **Update device** option, and then tap **Apply**.

4 The I/O device is configured and a restart is required. Tap **OK**.

Identifying an I/O device

When there are multiple I/O devices in the controller, it is important to identify the physical I/O device for any device update, signal connection or troubleshooting.

- 1 On the start screen, tap **I/O**, and then select **I/O Devices** from the menu.
- 2 Select the I/O device to be identified and tap **Identify**.
- 3 The **Identify** window is displayed.

Identify

I/O Unit: ZeroUnit
MAC Address: 00:1a:85:f1:2e:f9

'PWR' and 'NS' LEDs will flash at target device.

OK

xx210000097

Tap **OK**.

4 Software commissioning

4.5 Configuring safety digital base devices

4.5 Configuring safety digital base devices

Prerequisites

The **Safety services** grant is mandatory for configuration of safety digital base devices.

Recommended work process

In order to use the safety digital base device in your Scalable I/O configuration, the following work process is recommended:

- Install the safety digital base device, see [Installing safety digital base devices on page 45](#).
- Configure the safety digital base device, see [Configuring Scalable I/O devices using RobotStudio on page 58](#).



Note

When working with safety digital base devices, the configuration tool will update and download a new safety configuration to the controller.

- After the configuration, the dual channels must be defined using CL logic, see [Setting up dual channel signals on page 73](#) and *Application manual - Functional safety and SafeMove* for instructions on how to define logic diagrams.
- Verify the parameters in the ABB Safety Configuration Report, see [Verifying parameters in the ABB Safety Configuration Report on page 75](#).



CAUTION

The user must confirm that all configuration data of the safe digital base was downloaded correctly by reading out all parameters from the module and visually inspect the content.

- Validate the configuration of the safe digital base according to the validation process as described in *Application manual - Functional safety and SafeMove*.



WARNING

All downloaded configurations must be validated by user testing before the installation can be regarded as safe. User testing is the means by which all downloads are validated.



WARNING

The total intended safety functionality applied by the originator must be confirmed at commissioning of the safe digital base.

Continues on next page



CAUTION

After the safety digital base is configured, the user must check that ownership has been assigned to the right originator.

- When the set-up and configuration is done, see *Application manual - Functional safety and SafeMove* for instructions on how to work with the safety configuration.

Configure safety digital base devices via RobotStudio

Safety digital base devices are configured in the same way as the standard digital base devices. See [Configuring Scalable I/O devices using RobotStudio on page 58](#).

Configure safety digital base devices via FlexPendant



Note

Safety digital base devices cannot be configured using the FlexPendant.

Setting up dual channel signals

The safety digital base device is configured with dual channels. A dual channel is comprised of two signals, both electrically and in the software. In the safety digital base, there are two pairs for output and six pairs for input.

Output signals

There are two dual channel pairs for output signals. The four output signals are paired in the following way:

Dual channel pair	DSQC1042
1 (CH1)	SDO_1_+
	SDO_1_-
2 (CH2)	SDO_2_+
	SDO_2_-
3 (CH3)	SDO_3_+
	SDO_3_-
4 (CH4)	SDO_4_+
	SDO_4_-



Note

To write a dual channel output signal, both signals in the pair must be set to high in the safety controller. This is defined with CL-copy logic.

See *Application manual - Functional safety and SafeMove* for instructions on how to define logic diagrams.

Continues on next page

4 Software commissioning

4.5 Configuring safety digital base devices

Continued

Input signals

There are six dual channel pairs for input signals. The twelve input signals are paired in the following way:

Dual channel pair	DSQC1042
1 (CH1)	SDI_1_+
	SDI_1_-
	SDI_2_+
	SDI_2_-
2 (CH2)	SDI_3_+
	SDI_3_-
	SDI_4_+
	SDI_4_-
3 (CH3)	SDI_5_+
	SDI_5_-
	SDI_6_+
	SDI_6_-
4 (CH4)	SDI_7_+
	SDI_7_-
	SDI_8_+
	SDI_8_-
5 (CH5)	SDI_9_+
	SDI_9_-
	SDI_10_+
	SDI_10_-
6 (CH6)	SDI_11_+
	SDI_11_-
	SDI_12_+
	SDI_12_-



Note

To read a dual channel input signal, it is enough to read any signal in the pair. They follow each other.

Continues on next page

Verifying parameters in the ABB Safety Configuration Report

When configuring a safety digital base device, a set of parameters are written to the safety controller configuration and can be viewed in the ABB Safety Configuration Report.



CAUTION

These parameters are expected to be verified in the report with the following values:

Parameter	Description	Values/Examples
Device name	The name that is defined during the device configuration.	Device name="ABBIO"
inSizeBits		inSizeBits="40"
outSizeBits		outSizeBits="8"
scid	The Safety Configuration identifier/Checksum is a constant that is written in the safety configuration when the button Configure is pressed.	scid="2F7C2FF1"
nodeId	The IP address of the device, defined in hexadecimal form. This is the IP address that is visible in the configuration.	nodeId="C0A87D84"
snn	The Safety Network Number is a constant number for the private network of all controllers.	snn="5Afe12345678"
scidDateTime	A time stamp for the configuration which in combination with scid forms the signature. Is set when the button Configure is pressed.	scidDateTime="2021-08-12T17:02:59.359+02:00"
timeCoordinationMsgMultiplier		timeCoordinationMsgMultiplier="5"
timeoutMultiplier		timeoutMultiplier="2"
Signal name	Generated name: Device-Name_slotNo_Type+ix	Signal name="ABBIO_0_DO1"



CAUTION

The configuration signature, composed of scid and scidDateTime, should only be considered verified after user testing.



CAUTION

When configuring an originator with connection data and/or target configuration data, the data must be downloaded to the target so it can be tested and verified. Only then can SCIDs from the target be confirmed.

Continues on next page

4 Software commissioning

4.5 Configuring safety digital base devices

Continued

Troubleshooting safety digital base devices

Check group status signals

In the safety controller there are two group status signals, *SDIS* (DI_Status) and *SDOS* (DO_Status). The status signals indicate if errors are detected:

Reported status	Description
1	OK
0	ALARM

If a fault is detected, the status signal for the input/output channel will be set to 0 (ALARM). The signal will remain in status 0 for 1000 ms. This ensures that intermittent faults that only exist for a few milliseconds are latched long enough to be read by the controller.



Note

The reported output status for the dual output channel pair will go to ALARM if the outputs for the two signals from the controller/originator differ from each other, without any discrepancy delay.

The status will automatically be set to 1 (OK) when the following is true:

- the *Safety Input Latch Error Time* (1000 ms) has elapsed
- both inputs/outputs have been cleared
- the cause for the failure has been removed.

Check cables

If the status signal for the input/output channel is set to 0 (ALARM), perform the following checks:

- 1 Make sure that the cables are connected properly at both ends.
- 2 If the problem persists, replace the cables.

4.6 Firmware upgrade


Upgrade firmware from RobotStudio



Note

Firmware upgrade is not available for safety digital base devices or for attached add-on devices.

- 1 Set the OmniCore controller in manual mode.
- 2 If the device is in the running state, deactivate Scalable I/O on the FlexPendant:
 - a On the start screen, tap I/O, and then select I/O Devices from the menu.
 - b Select the device and tap Deactivate.
- 3 Start RobotStudio and connect to the OmniCore controller.
- 4 Request write access.
- 5 In the I/O System tree, right-click the target I/O device and select **Upgrade**.

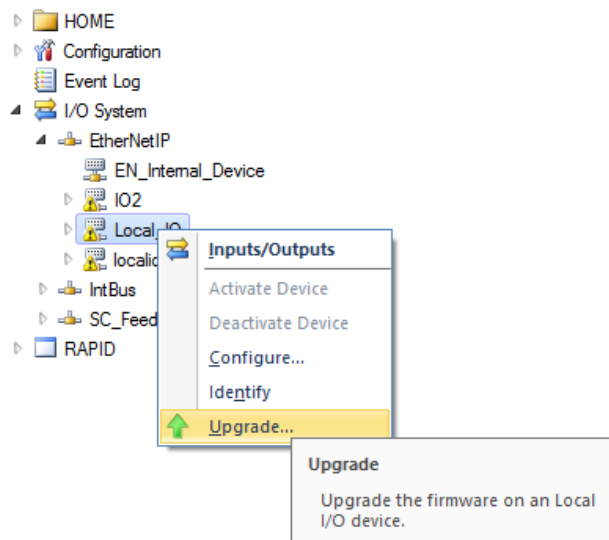

xx1900001181

- 6 The **Firmware Upgrade Local I/O Device** window is displayed.



Note


The **Firmware location** field displays the default firmware file. To select a new firmware file, click the ... button and browse to the folder with the new firmware file.

Continues on next page

4 Software commissioning

4.6 Firmware upgrade

Continued

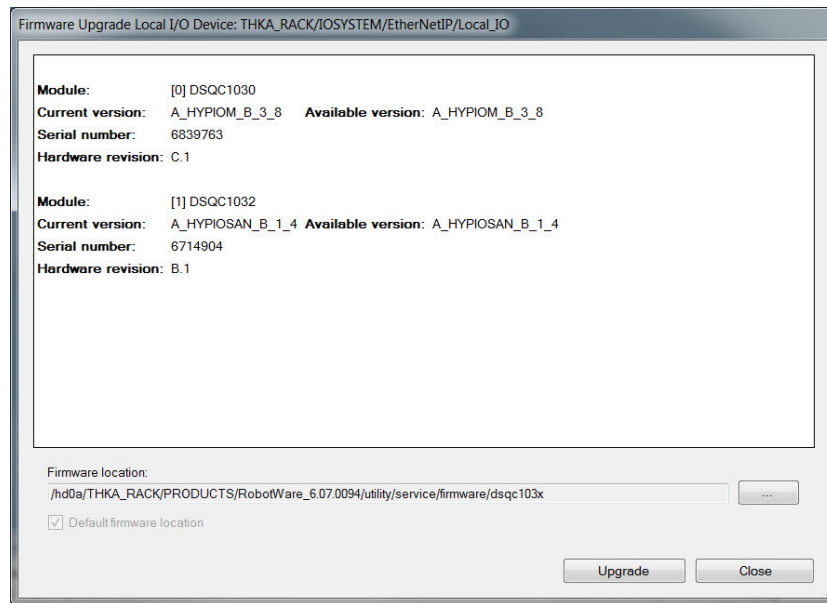

xx1800000143



Note

The **Upgrade** button is enabled only if a new version is detected either in the default firmware path or in a browsed path.

7 Click **Upgrade**.

The firmware is upgraded and a message is displayed.

Upgrade firmware from the FlexPendant



Note

Firmware upgrade is not available for safety digital base devices or for attached add-on devices.

- 1 Set the OmniCore controller in manual mode.
- 2 On the start screen, tap **I/O**, and then select **I/O Devices** from the menu.
- 3 If the I/O device is in the running state, select the device and tap **Deactivate**.
- 4 Select the I/O device and tap **Firmware Update**.




Note

Firmware upgrade is not possible if the state of the selected I/O device is **Running**.

Continues on next page

5 The I/O Modernization window is displayed.

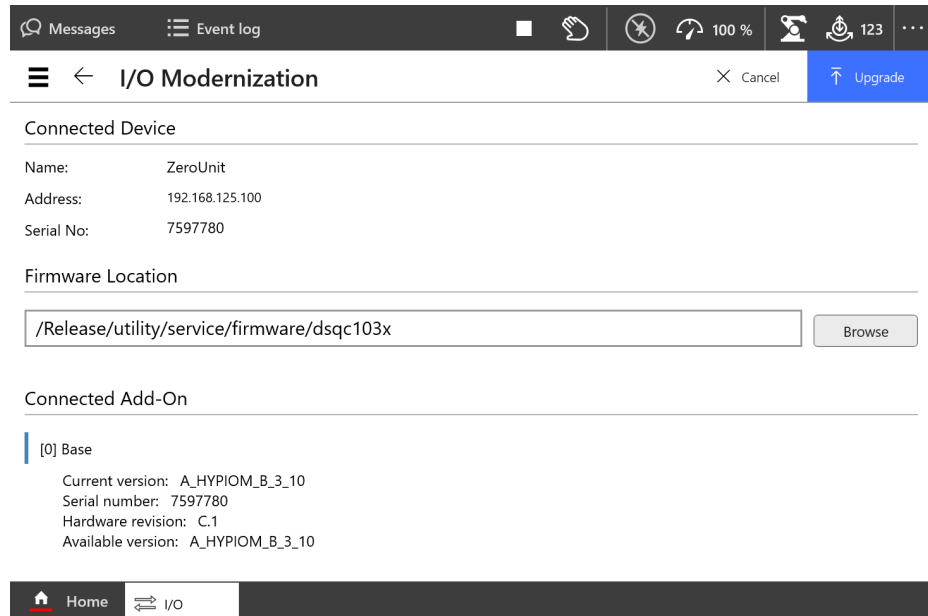**Note**

The **Firmware Location** field displays the default firmware file. To select a new firmware file, tap **Browse**.

6 Tap Upgrade.

The firmware is upgraded and a message is displayed.

**Note**

The **Upgrade** button is enabled only if a new version is detected either in the default firmware path or in a browsed path.

This page is intentionally left blank

5 Reference material

5.1 Analog input point object

Analog Input Point Object (Class Code: 0Ahex)

The Analog Input Point Object contains information of the analog inputs of the Scalable I/O system.

Inputs cause the base module to produce data on the network. Each analog input point uses a low pass filter and a hysteresis which can both be configured. The sampled value is first passed through the low pass filter and then through the hysteresis. After this, the value is stored to attribute 3 (Value).

Class attributes

Attribute ID (hex)	Access rule	NV	Attribute name	Data type	Default value	Description
1	Get	NV	Revision	U16	2	

Instance attributes

Attribute ID (hex)	Access rule	NV	Attribute name	Data type	Default value	Description
3	Get	V	Value	U16		0 to 4095
32	Set	V	Low Pass Filter Order	U16	3	0 The Low Pass Filter Order exponent can be set to 0 – 16 and the sample time is 1 ms.
33	Set	V	Hysteresis	U16	4	The hysteresis of each analog input point can be set between 0 and 4095. New values (after filtering) must be outside the hysteresis window in order for it to be transferred to attribute 3 (Value).

Services

Service code (hex)	Implemented		Service name	Description
	Class	Instance		
0E	YES	YES	Get Attribute Single	
10	NO	YES	Set Attribute Single	

This page is intentionally left blank

Index

C

Change of State, 55
coil neutralization, 53
configuring I/O device, 58
connecting EtherNet/IP, 57
Cyclic, 55

D

DSQC1030, 18, 24
DSQC1031, 30
DSQC1032, 33
DSQC1033, 36

E

EtherNet/IP, 11
 connecting, 57

F

features, 12
firmware upgrade, 77

I

I/O device, 11
 updating I/O device, 61
identify I/O device, 67
industrial network

EtherNet/IP, 55
installing add-on device, 48
installing digital base device, 41
installing safety digital base devices, 45

L

LED

module status, 21, 28
network status, 22, 28
power, 21, 27, 30, 33, 36
test run, 22, 29

N

network security, 10

P

Plug & Produce, 11

R

removing I/O device, 66
replacing I/O device, 62, 64

S

Scalable I/O, 11

U

updating existing I/O device, 61
upgrade firmware, 77



ABB AB

Robotics & Discrete Automation

S-721 68 VÄSTERÅS, Sweden

Telephone +46 10-732 50 00

ABB AS

Robotics & Discrete Automation

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

ABB Engineering (Shanghai) Ltd.

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong New District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

ABB Inc.

Robotics & Discrete Automation

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

abb.com/robotics