

ROBOTICS

# Operating manual

## Service Information System



Trace back information:  
Workspace 21D version a6  
Checked in 2021-12-01  
Skribenta version 5.4.005

**Operating manual**  
**Service Information System**

**RobotWare 6.13**

**Document ID: 3HAC050944-001**

**Revision: D**

The information in this manual is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this manual.

Except as may be expressly stated anywhere in this manual, nothing herein shall be construed as any kind of guarantee or warranty by ABB for losses, damage to persons or property, fitness for a specific purpose or the like.

In no event shall ABB be liable for incidental or consequential damages arising from use of this manual and products described herein.

This manual and parts thereof must not be reproduced or copied without ABB's written permission.

Keep for future reference.

Additional copies of this manual may be obtained from ABB.

Original instructions.

© Copyright 2005, 2008-2021 ABB. All rights reserved.  
Specifications subject to change without notice.

# Table of contents

Overview of this manual .....	7
<b>1 Introduction to Service Information System</b>	<b>9</b>
1.1 Introduction to Service Information System (SIS) .....	9
1.2 SIS counters .....	10
1.2.1 Calendar time .....	10
1.2.2 Operation time .....	11
1.2.3 Gearbox .....	12
1.2.4 Moved distance .....	14
<b>2 Running the Service Information System</b>	<b>15</b>
2.1 Using the SIS system .....	15
2.2 Setting the SIS parameters .....	16
2.3 Resetting values .....	18
2.4 Reading the SIS logs .....	19
2.5 Safety shutdown messages .....	21
<b>3 System parameters</b>	<b>23</b>
3.1 The SIS Parameters type and the SIS Single Parameters type .....	23
3.2 Name .....	24
3.3 Operational Limit (h) .....	25
3.4 Calendar Limit (years) .....	26
3.5 Operational Warning (%) .....	27
3.6 Calendar Warning (%) .....	28
3.7 Gearbox Warning (%) .....	29
3.8 Robot temperature (C), Single temperature (C) .....	30
3.9 Events as Warnings .....	31
<b>Index</b>	<b>33</b>

**This page is intentionally left blank**

# Overview of this manual

## About this manual

This manual explains how to use the Service Information System (SIS).

## Usage

This manual can be used during operation, installation, and maintenance. For example during installation when the service interval is set, or after maintenance when the duty time parameter is reset to zero (0).

## Who should read this manual?

This manual is intended for:

- Installation personnel.
- Maintenance personnel.
- Repair personnel.

## Prerequisites

The reader should:

- Be familiar with industrial robots and their terminology.
- Be familiar with system parameters and how to configure them.

## References

Reference	Document ID
<i>Operating manual - IRC5 with FlexPendant</i>	3HAC050941-001
<i>Operating manual - RobotStudio</i>	3HAC032104-001
<i>Operating manual - Troubleshooting IRC5</i>	3HAC020738-001
<i>Technical reference manual - RAPID Instructions, Functions and Data types</i>	3HAC050917-001
<i>Technical reference manual - System parameters</i>	3HAC050948-001

## Revisions

Revision	Description
-	Released with RobotWare 6.0.
A	Released with RobotWare 6.02. <ul style="list-style-type: none"> <li>• Removed section <i>2.4 Exporting the SIS data</i>.</li> </ul>
B	Released with RobotWare 6.10.01. <ul style="list-style-type: none"> <li>• New SIS counter added in section <i>Moved distance on page 14</i>.</li> </ul>
C	Released with RobotWare 6.12. <ul style="list-style-type: none"> <li>• Added information about <i>Fleet Assessment</i>.</li> <li>• Added caution about resetting counters.</li> <li>• New images and minor corrections in sections <i>Calendar time on page 10</i>, <i>Operation time on page 11</i>, <i>Gearbox on page 12</i> and <i>Resetting values on page 18</i>.</li> </ul>
D	Released with RobotWare 6.13. <ul style="list-style-type: none"> <li>• Minor corrections in section <i>Calendar time on page 10</i>.</li> </ul>

**This page is intentionally left blank**



# 1 Introduction to Service Information System

## 1.1 Introduction to Service Information System (SIS)

---

### Introduction

Service Information System (SIS) is a software function in the robot controller, that simplifies maintenance of the robot system. It supervises the operating time and mode of the robot, and alerts the operator when a maintenance activity is scheduled.

Maintenance is scheduled by setting the system parameters of the type *SIS Parameters*, see [System parameters on page 23](#), and [Setting the SIS parameters on page 16](#).

Service Information System also supervises the motor status on large robots during high load operations, see [Safety shutdown messages on page 21](#).

---

### Supervised functions

The following counters are available:

#### Calendar time

*Calendar time* is used for robot service intervals, based on calendar time.

#### Operation time

*Operation time* is used for robot service intervals, based on operational time.

#### Gearbox

*Gearbox* is used for estimating the service interval (remaining lifetime) of the gearbox. Each supervised gearbox has a time counter, based on the wear of the axis and the work load on the robot. The number of supervised gearboxes on the robot are different for each model.

#### Moved distance

*Moved distance* is used for counting the distance the mechanical unit has moved.

---

### SIS event logs reported as warnings instead of errors

By default SIS event logs are reported as errors, but it is also possible to have the SIS event logs reported as warnings instead of errors. The main difference is that warnings do not take focus on the FlexPendant, and that they have a different icon. This will affect calendar time events, production time events, and gearbox events.

For more information, see [Events as Warnings on page 31](#).

# 1 Introduction to Service Information System

## 1.2.1 Calendar time

## 1.2 SIS counters

### 1.2.1 Calendar time

#### Description

*Calendar time* is used for robot service intervals, based on calendar time. This timer can, for example, be used to schedule when it is time for inspection of dampers or motor seals. This information is available in the maintenance schedule for the robot.

When the calendar time limit for maintenance is reached, a message is stored in the event log.

How to access the event log is detailed in section [Reading the SIS logs on page 19](#).

#### Components

The following information is available about calendar time in the service routine *ServiceInfo*.

The screenshot shows a software interface for a robot's service information. At the top, there is a status bar with a menu icon, a manual number '4600-109191', and a 'Motors On Running (Speed 100%)' indicator. Below this, there are tabs for 'All Tasks' and 'T\_ROB1 UIMessageBox'. The main display area shows an information icon followed by the text 'Calendar Time 2021-03-03'. Below this, the following service data is displayed: 'Prev. Service: 2020-11-27', 'Elapsed time: 96 day(s)', 'Next Service: 2021-11-27', and 'Remaining Time: 268 day(s)'. At the bottom of the main display area are 'Reset' and 'Ok' buttons. Below the main display area, there are icons for 'T\_ROB1 sis\_instr2', 'Control Panel', and 'ROB\_1 1/3'.

xx2100000428

Service information	Description
Prev. Service	Shows the date when the counter was reset the last time, that is, the date of the last service.
Elapsed Time	Shows the number of days that have elapsed since the counter was reset the last time.
Next Service	Shows the date of the next scheduled service.
Remaining Time	Shows the number of days remaining until the next scheduled service.

## 1.2.2 Operation time


### Description

*Operation time* is used for robot service intervals, based on operational time. *Operation time* uses the time that the MOTORS ON signal is active and the brakes are released. This timer can, for example, be used to schedule when it is time to change oil. This information is available in the maintenance schedule for the robot. When the operation time limit for maintenance is reached, a message is stored in the event log.

How to access this is detailed in section [Reading the SIS logs on page 19](#).

### Components

The following information is available about operation time in the service routine *ServiceInfo*.

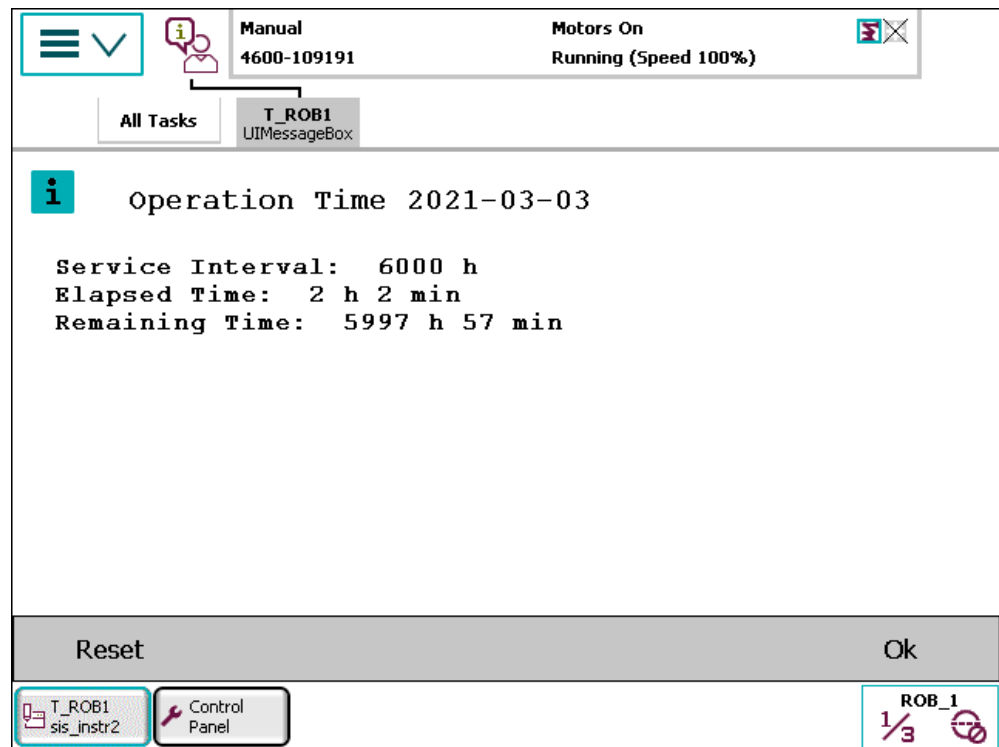

xx210000429

Service information	Description
Service Interval	Shows the specified service interval, in hours.
Elapsed Time	Shows the time, in hours and minutes, that has elapsed since the service interval was set the last time.
Remaining Time	Shows the operation time, in hours and minutes, remaining until the service interval has expired.

# 1 Introduction to Service Information System

## 1.2.3 Gearbox

### 1.2.3 Gearbox

#### Description

*Gearbox* is used for estimating the service interval (remaining lifetime) of the gearbox. The estimate is based on used torque and speed (rpm). This information can be used as a guidance when planning gearbox replacement.

When the estimated gearbox life is reached, a message is stored on the event log.

How to access this is detailed in section [Reading the SIS logs on page 19](#).



#### Note

The maximum estimated service interval is 40,000 hours.

#### Components


The following information is available about the gearbox status in the service routine *ServiceInfo*.

Service information	Description
Axis x OK	The automatically calculated time parameter for the axis in question has not been exceeded.
Axis x NOK	The service interval for the axis in question has been reached.


xx2100000430

Service information	Description
Axis x OK	The automatically calculated time parameter for the axis in question has not been exceeded.
Axis x NOK	The service interval for the axis in question has been reached.

*Continues on next page*

Service information	Description
Axis x N/A	<p>No service time parameter calculation is available for the axis in question.</p> <p> <b>Note</b></p> <p>This information is displayed when there is no supervision on gearbox x.</p>

The following information is available for the gearbox time in the service routine *ServiceInfo*.

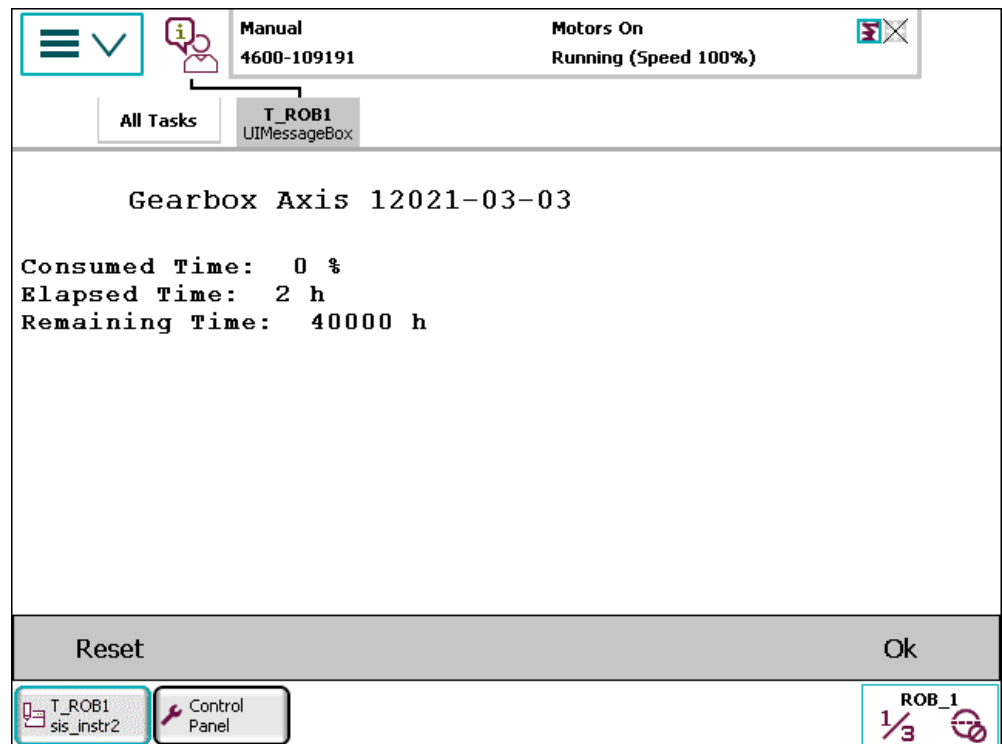

The screenshot shows a control panel interface. At the top, there is a status bar with a menu icon, a manual mode indicator (4600-109191), and a motors on indicator (Running (Speed 100%)). Below this, there are task selection buttons for 'All Tasks' and 'T\_ROB1 UIMessageBox'. The main display area shows 'Gearbox Axis 12021-03-03' and the following time data:

```
Consumed Time: 0 %
Elapsed Time: 2 h
Remaining Time: 40000 h
```

At the bottom, there are 'Reset' and 'Ok' buttons. Below the main display, there are three icons: 'T\_ROB1 sis\_instr2', 'Control Panel', and 'ROB\_1 1/3'.

xx210000431

Service information	Description
Consumed time	Shows the consumed time as a percentage of the total amount of time.
Elapsed time	Shows the operation time, in hours, that has elapsed for axis x since measurement began.
Remaining time	Shows the time, in hours, remaining for axis x until the gearbox is planned to be replaced.



### CAUTION

Incorrectly defined or reset counters can result in wrong information being displayed.

# 1 Introduction to Service Information System

---

## 1.2.4 Moved distance

### 1.2.4 Moved distance

---

#### Description

*Moved distance* is used for counting the distance the mechanical unit has moved. This function is only available for single joints and additional axes.

*Moved distance* is displayed in the General SIS data in the Device Browser in Robotstudio and System info in FlexPendant.

---

#### Values

The value in *Moved distance* is either displayed in meters or revolutions, depending on the type of the connected mechanical unit:

Type of mechanical unit	Displayed value
Linear track motion	Meter
Servo gun	Meter
Rotating axis	Revolution



#### Note

For mechanical units that are not supported, the displayed value will be 0.



#### Note

The value cannot be reset through the service routines.

## 2 Running the Service Information System


### 2.1 Using the SIS system

#### Introduction

This is a brief description of how to use the Service Information System (SIS).

#### Using the SIS system

Use this procedure to run the SIS system.

	Action	Reference
1	Determine which SIS functions to use.	See <a href="#">Calendar time on page 10</a> , <a href="#">Operation time on page 11</a> and <a href="#">Gearbox on page 12</a> .
2	Define what values are adequate and suitable for your application in your production environment.	Recommendations for expected component life and service intervals are described in the <i>Product manual</i> , section <i>Maintenance</i> .
3	Enter these parameters in the system parameter configuration.	See <a href="#">Setting the SIS parameters on page 16</a> .
4	Run the robot in normal operation.	
5	<p>Reset the counter if a repair has been made, or if a counter for any other reason has been restarted.</p> <p> <b>CAUTION</b></p> <p>Resetting counters cannot be undone.</p>	See <a href="#">Resetting values on page 18</a> .
6	When a time limit is exceeded, a message is stored in the event log.	See <a href="#">Reading the SIS logs on page 19</a> .
7	If the log containing the message is to be available from an external PC, or if the SIS parameters are to be entered from an external PC, a set of software tools are available to build such an application.	
8	Some robots (for example IRB 4600, IRB 6640, and IRB 7600) can be programmed to give warnings if the motors are overheated and need to be cooled down.	See <a href="#">Safety shutdown messages on page 21</a> .

## 2 Running the Service Information System

---

### 2.2 Setting the SIS parameters

## 2.2 Setting the SIS parameters

---

### Introduction

The Service Information System is set up using system parameters. The values can be based on the maintenance schedule for the robot, but must be adapted over time by the users as knowledge of the robot's working conditions are accumulated.

Since the warnings are to be used for purposes defined by the user, ABB cannot give any recommendations regarding their definitions.

### Setting the SIS parameters

Use this procedure to set the SIS system parameters.

	Action	Reference
1	Open the system parameters configuration on the FlexPendant (Control Panel), or in RobotStudio (Configuration Editor).	Detailed in <i>Operating manual - IRC5 with FlexPendant</i> and <i>Operating manual - RobotStudio</i> .
2	Select the topic <b>MOTION</b> and then the type <b>SIS Parameters</b> , or <b>SIS Single Parameters</b> .	
3	Select the instance to define and edit the system parameters.	See detailed descriptions in chapter <a href="#">System parameters on page 23</a> .

### Examples

These examples show how the system parameters can be set.

#### Operational Limit (h)

If the parameter is set to 2000, SIS will alert the operator after 2000 hours in operation mode.

#### Operational Warning (%)

If the parameter is set to 90, SIS will warn the operator after 1800 hours in operation mode. The total amount of hours is calculated from the percentage of *Operational Limit (h)*.

$$2000 * 0.9 = 1800$$

#### Calendar Limit (years)

If the parameter is set to 2, SIS will alert the operator after 2 years.

#### Calendar Warning (%)

If the parameter is set to 50, SIS will warn the operator after 1 year. The total amount of years is calculated from a percentage of *Calendar Limit (years)*.

$$2 * 0.5 = 1$$

#### Gearbox warning (%)

If the parameter is set to 90, SIS will alert the operator after 90% of the expected service interval of each gearbox.

*Continues on next page*



The robot system automatically detects and stores all required variables to calculate the expected service interval of each gearbox. This is done by extrapolating data from earlier operation into a function of time, using a formula including:

- Input and output torque.
- Gearbox spindle speed.
- Ambient temperature.
- Other variables.

Robot temperature (C) / Single temperature (C)

This parameter defines the ambient temperature used to estimate the remaining gearbox lifetime.

## 2 Running the Service Information System

### 2.3 Resetting values


### 2.3 Resetting values

#### Resetting values

Counters can be reset at any time by running the service routine *ServiceInfo* from the FlexPendant, see *Operating manual - IRC5 with FlexPendant*.

 **CAUTION**

Resetting counters cannot be undone.

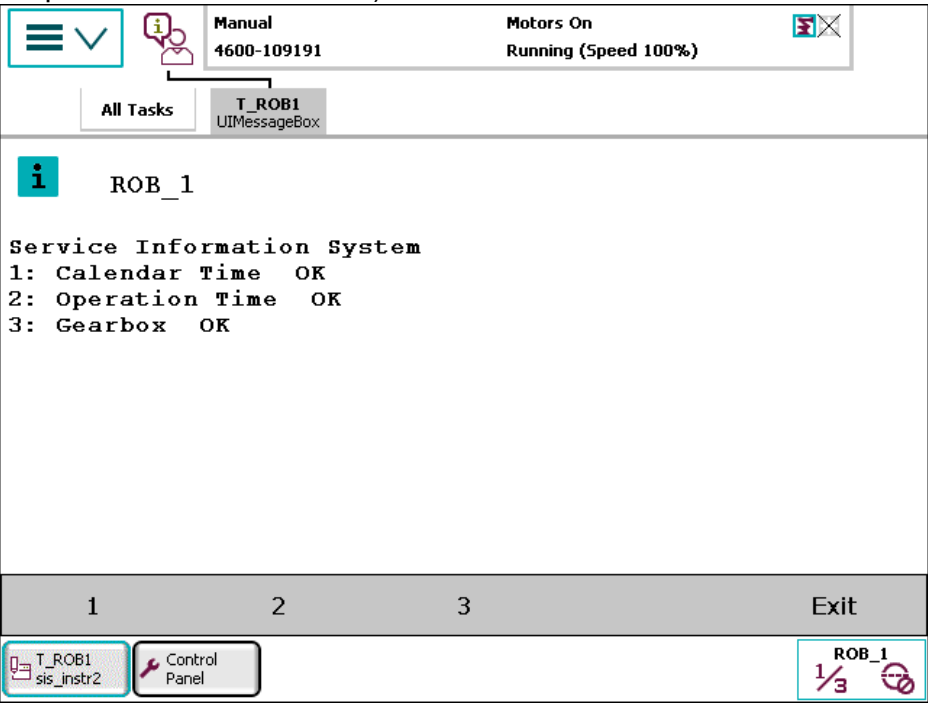	Action
1	Start the Program Editor.
2	Tap <b>Debug</b> and then tap <b>Call Routine</b> .
3	Tap <b>ServiceInfo</b> to start the service routine.
4	If there is more than one robot, tap <b>ROB_x</b> to select robot.
5	<p>In the service routine main window, select the counter to be reset (1= Calendar time, 2=Operation time and 3= Gearbox).</p> 
6	In the selected counter window, tap <b>Reset</b> .

## 2.4 Reading the SIS logs

### Introduction

When a set counter value has been reached (for example the maximum allowed operation time before service), a message is shown in the event log.

### Access to logs

The event log can be viewed online from the FlexPendant and RobotStudio. This is described in *Operating manual - IRC5 with FlexPendant* and *Operating manual - RobotStudio*. See also *Operating manual - Troubleshooting IRC5*.

In RobotStudio, use the function *Fleet Assessment* to extract SIS data that ABB can use to further investigate, if needed.

### Duty Time

The total duty time can be seen on the FlexPendant.

On the ABB menu, tap **System Info** and then tap to expand **Hardware devices**, and continue through **Mechanical units** and **ROB\_1** to **General SIS data**.

### Service interval exceeded

If the service interval has exceeded the defined value, an error message (Service interval exceeded!) is displayed.

### No data available

If no data is available for the defined value, a message (No data available!) is displayed when trying to show the data.

### Available messages

The following messages can be shown:

Counter	SIS log message	Description
Calendar time	Service message: X calendar days to next service.	X number of calendar days remain until the manually set calendar time limit expires. How to set the limit is detailed in section <a href="#">Setting the SIS parameters on page 16</a> .
Calendar time	Service message: Service is due! X calendar days since last service.	The manually set calendar time limit has expired. How to set the limit is detailed in section <a href="#">Setting the SIS parameters on page 16</a> . Proceed with the required service as detailed in the <i>Product manual</i> .
Operation time	Service message: X production hours to next service.	X number of operation hours remain until the manually set operation time limit expires. How to set the limit is detailed in section <a href="#">Setting the SIS parameters on page 16</a> .

*Continues on next page*

## 2 Running the Service Information System

---

### 2.4 Reading the SIS logs

*Continued*

Counter	SIS log message	Description
Operation time	Service message: Service is due! X production hours since last service.	The manually set operation time limit has expired. How to set the limit is detailed in section <a href="#">Setting the SIS parameters on page 16</a> . Proceed with the required service as detailed in the <i>Product manual</i> .
Gearbox time	Service message: X% of the service interval has expired for gearbox x!	X% of the gearbox hours remain until the estimated gearbox lifetime limit has expired. How to set the limit is detailed in <a href="#">Setting the SIS parameters on page 16</a> .
Gearbox time	Service message: Gearbox x requires service!	The estimated gearbox lifetime limit has expired. Proceed with the required service as detailed in the <i>Product manual</i> .

## 2.5 Safety shutdown messages

### Duty factor warning

The safety shutdown is a warning and an error message used to protect large robots (for example IRB 4600 and IRB 6640) from damaging the motors or gearboxes during high load operations. The warning/error is titled **50263 Duty factor warning**.

### Usage

When robots work in high speed under heavy load for long periods of time, the motors and gearboxes will become hot. Letting the motors and gearboxes cool down occasionally will prevent damaging them.

The limit for how hard the motors and gearboxes can run depends on both torque, revolution, and also the ambient temperature. This can be simulated for an installation with the RobotStudio add-in *Gearbox Heat Prediction Tool*. The tool does not require a premium license.

If the motors or gearboxes risk being overheated the system will warn that the robot needs to cool down. A warning message is sent to the log and after 30 minutes an error message is also sent to the log. An error handler can be used to take adequate measures, for example turning off external equipment and moving the robot out of the working area.

If the warning (**50263 Duty factor warning**) is displayed often but it is verified that the motors and gearboxes are not overheated, then changing the system parameter that defines the ambient temperature (*Robot temperature (C)* or *Single temperature (C)*) can reduce the occurrence.



#### CAUTION

If the error is ignored without letting the motor or gearbox cool down, then the lifetime of the motor or gearbox can be reduced.

### Examples

These are examples of error handlers can be used. `IError` is used to order and enable an interrupt when an error occurs. Inside the TRAP function you program what actions to be done before the system is shut down.

### Warning

```
TRAP trap_name_warn
  ! Your actions
END TRAP

..
..
PROC main()
  CONNECT errorint WITH trap_name_warn;
  IError MOTION_ERR\Error Id := 263, TYPE_WARN, errorint;
  ..
  ..
END main
```

*Continues on next page*

## 2 Running the Service Information System

---

### 2.5 Safety shutdown messages

*Continued*

#### Error

```
TRAP trap_name_error
  ! Your actions
END TRAP
..
..
PROC main()
  CONNECT errorint WITH trap_name_error;
  IError MOTION_ERR\Error Id := 263, TYPE_ERR, errorint;
  ..
  ..
END main
```

---

#### Related information

For information about	See
IError	<i>Technical reference manual - RAPID Instructions, Functions and Data types</i>
TRAP	<i>Technical reference manual - RAPID Instructions, Functions and Data types</i>
StopMove	<i>Technical reference manual - RAPID Instructions, Functions and Data types</i>
StorePath	<i>Technical reference manual - RAPID Instructions, Functions and Data types</i>
<i>Robot temperature (C) and Single temperature (C)</i>	<a href="#">Robot temperature (C), Single temperature (C) on page 30</a>
Gearbox Heat Prediction Tool	<i>Operating manual - RobotStudio</i>

## 3 System parameters

### 3.1 The SIS Parameters type and the SIS Single Parameters type

---

#### Overview

This section describes the types *SIS Parameters* and *SIS Single Parameters* which belong to the topic *Motion*. Each parameter of these types is described in a separate information topic in this section.

#### Type description

The type *SIS Parameters* describes the service intervals and warning levels for the robot. The service interval can be set in both production time and calendar time.

The type *SIS Single Parameters* describes the service intervals and warning levels for external axes. The service interval can be set in both production time and calendar time.

The parameters for the types *SIS Parameters* and *SIS Single Parameters* are identical in usage and allowed values. Therefore they are described together in this manual.

#### Limitations

Changing the parameter values in *SIS Single Parameters* is only useful if you have one or more external axes.

#### Related information

See the product manual for the robot.

## 3 System parameters

---

### 3.2 Name

### 3.2 Name

---

#### Parent

*Name* belongs to the type *SIS Parameters* in the topic *Motion*.

---

#### Description

*Name* defines the SIS parameter name.

---

#### Allowed values

A string with maximum 32 characters.



### 3.3 Operational Limit (h)

---

**Parent**

*Operational Limit (h)* belongs to the type *SIS Parameters* in the topic *Motion*.

---

**Description**

*Operational Limit (h)* describes the service interval measured in production time.

---

**Usage**

The service interval for production time, *Operational Limit (h)*, for ABB robots is normally set on delivery and should be changed if the value differs from the maintenance schedule in the product manual.

When the *Operational Limit (h)* is reached, the FlexPendant displays a message from the elog.

If *Operational Limit (h)* is set to 0, the function is disabled.

---

**Allowed values**

A value between 0 and 50000 hours.

### 3 System parameters

---

#### 3.4 Calendar Limit (years)

#### 3.4 Calendar Limit (years)

---

##### Parent

*Calendar Limit (years)* belongs to the type *SIS Parameters* in the topic *Motion*.

---

##### Description

*Calendar Limit (years)* defines the service interval in calendar time.

---

##### Usage

The service interval for calendar time, *Calendar Limit (years)*, for ABB robots is normally set on delivery and should be changed if the value differs from the maintenance schedule in the product manual.

When the *Calendar Limit (years)* is reached, the FlexPendant displays a message from the elog.

If *Calendar Limit (years)* is set to 0, the function is disabled.

---

##### Allowed values

A value between 0 and 20 years.

### 3.5 Operational Warning (%)

---

**Parent**

*Operational Warning (%)* belongs to the type *SIS Parameters* in the topic *Motion*.

---

**Description**

*Operational Warning (%)* defines when the warning before reached service level for production time should occur.

---

**Usage**

The value of *Operational Warning (%)* is a percentage of the *Operational Limit (h)*. A higher number gives a shorter time between the warning and the reached service level.

If *Operational Warning (%)* is set to 0, the warning is disabled.

---

**Allowed values**

A value between 0 and 100 %.

---

**Related information**

[Operational Limit \(h\) on page 25.](#)

## 3 System parameters

---

### 3.6 Calendar Warning (%)

### 3.6 Calendar Warning (%)

---

#### Parent

*Calendar Warning (%)* belongs to the type *SIS Parameters* in the topic *Motion*.

---

#### Description

*Calendar Warning (%)* defines when the warning before reached service level for calendar time should occur.

---

#### Usage

The value of *Calendar Warning (%)* is a percentage of the *Calendar Limit (years)*. A higher number gives a shorter time between the warning and the reached service level.

If *Calendar Warning (%)* is set to 0, the warning is disabled.

---

#### Allowed values

A value between 0 and 100 %.

---

#### Related information

[Calendar Limit \(years\) on page 26.](#)

### 3.7 Gearbox Warning (%)

---

**Parent**

*Gearbox Warning (%)* belongs to the type *SIS Parameters* in the topic *Motion*.

---

**Description**

*Gearbox Warning (%)* defines when the warning before reached service level for gearbox should occur.

---

**Usage**

The estimated gearbox service interval (remaining lifetime) is calculated automatically. The value of *Gearbox Warning (%)* is a percentage of the estimated gearbox service interval. A higher number gives a shorter time between the warning and the reached service level.

For an ABB robot using SIS, the value is typically set to 100.

If *Gearbox Warning (%)* is set to 0, the warning is disabled.

---

**Allowed values**

A value between 0 and 100 %.

## 3 System parameters

---

### 3.8 Robot temperature (C), Single temperature (C)

### 3.8 Robot temperature (C), Single temperature (C)

---

#### Parent

*Robot temperature (C)* and *Single temperature (C)* belong to the type *SIS Parameters*, in the topic *Motion*.

---

#### Description

*Robot temperature (C)* and *Single temperature (C)* defines the ambient temperature (°C).

---

#### Usage

The gearbox service interval (remaining lifetime) is calculated automatically, using among other things *Robot temperature (C)* or *Single temperature (C)*. For an ABB robot using SIS, the value is typically set to 50 and should be changed if the value differs from the value defined in the product manual.

The temperature value can be changed to the actual temperature of the location where the robot is used.

---

#### Allowed values

A value between 35 and 50.

If a value lower than 35 is defined, then 35 will be used.

---

### 3.9 Events as Warnings

---

**Parent**

*Events as Warnings* belongs to the type *SIS Parameters* in the topic *Motion*.

---

**Description**

*Events as Warnings* defines whether SIS event logs should be warnings instead of errors.

---

**Usage**

Set to *Yes* when you want the SIS event logs to be reported as warnings instead of errors. The main difference is that warnings don't take focus on the FlexPendant, and that they have a different icon. This will affect calendar time events, production time events, and gearbox events.

---

**Allowed values**

*Yes* or *No*.

**This page is intentionally left blank**



# Index

## A

accessing event logs, 19  
axis service status, 13

## C

calendar limit, 16  
calendar time, 10  
calendar warning, 16  
consumed time, gearbox service, 13

## D

date, 10  
Duty factor warning, 21  
duty time counter, 19

## E

elapsed time, calendar time, 10  
elapsed time, gearbox service, 13  
elapsed time, operation time, 11  
error messages, 21  
event log, 19  
event log messages, 19  
Events as Warnings, 9

## G

gearbox counter, 12  
gearbox warning, 16  
getting started, 15

## H

high load, 21

## I

interval exceeded, 19

## J

joint service, 12

## M

motors on counter, 11

## N

next service, calendar time, 10  
no data, 19

## O

operational limit, 16  
operational warning, 16  
operation counter, 11

## P

parameters, 16  
prev service, calendar time, 10

## R

reading event logs, 19  
remaining time, calendar time, 10  
remaining time, gearbox service, 13  
remaining time, operation time, 11  
reset values, 18

## S

safety shutdown, 21  
ServiceInfo, 18  
service interval, operation time, 11  
service routine, ServiceInfo, 18  
SIS, overview, 9  
SIS Parameters, 9, 15–16, 19–20  
SIS Parameters, type, 23  
SIS Single Parameters, 9, 15–16, 19–20  
SIS Single Parameters, type, 23  
start service routine, 18  
step by step, 15  
system parameters, 16

## U

using SIS, 15

## W

warnings, 21







**ABB AB**

**Robotics & Discrete Automation**

S-721 68 VÄSTERÅS, Sweden

Telephone +46 (0) 21 344 400

**ABB AS**

**Robotics & Discrete Automation**

Nordlysvegen 7, N-4340 BRYNE, Norway

Box 265, N-4349 BRYNE, Norway

Telephone: +47 22 87 2000

**ABB Engineering (Shanghai) Ltd.**

Robotics & Discrete Automation

No. 4528 Kangxin Highway

PuDong District

SHANGHAI 201319, China

Telephone: +86 21 6105 6666

**ABB Inc.**

**Robotics & Discrete Automation**

1250 Brown Road

Auburn Hills, MI 48326

USA

Telephone: +1 248 391 9000

**[abb.com/robotics](http://abb.com/robotics)**